


# Lycoming Aircraft Engines Parts Catalog

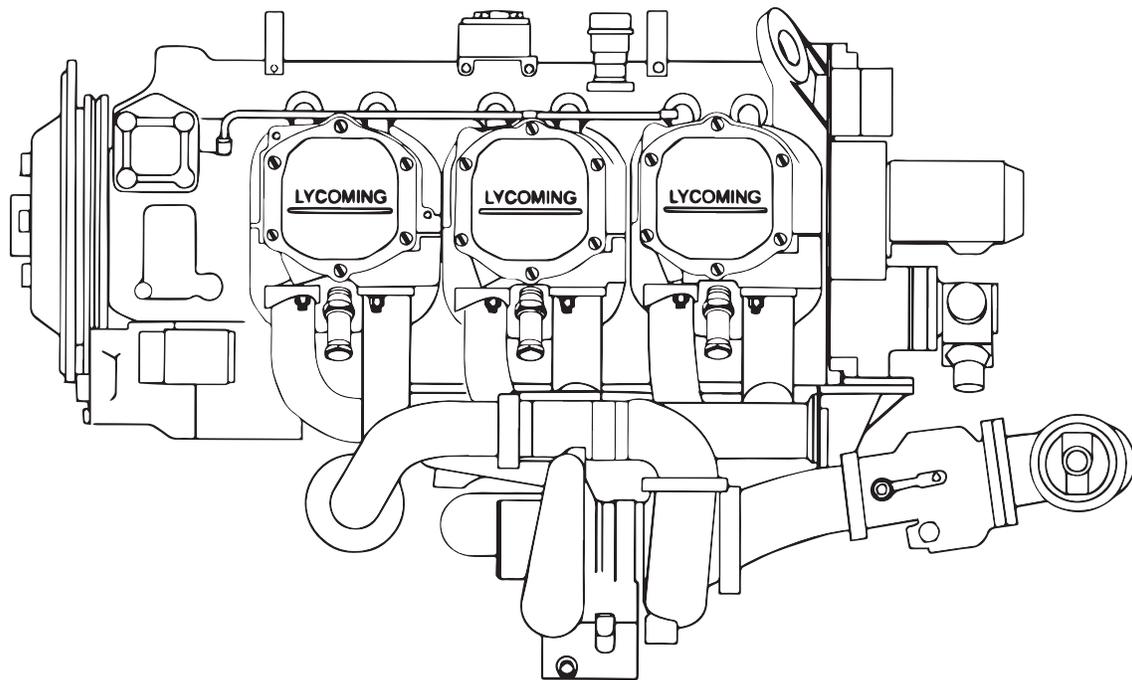


## **TIO-540 AG1A**

**Wide Cylinder Flange Crankcase Model Engines**

***LYCOMING***

# Lycoming Aircraft Engines Parts Catalog

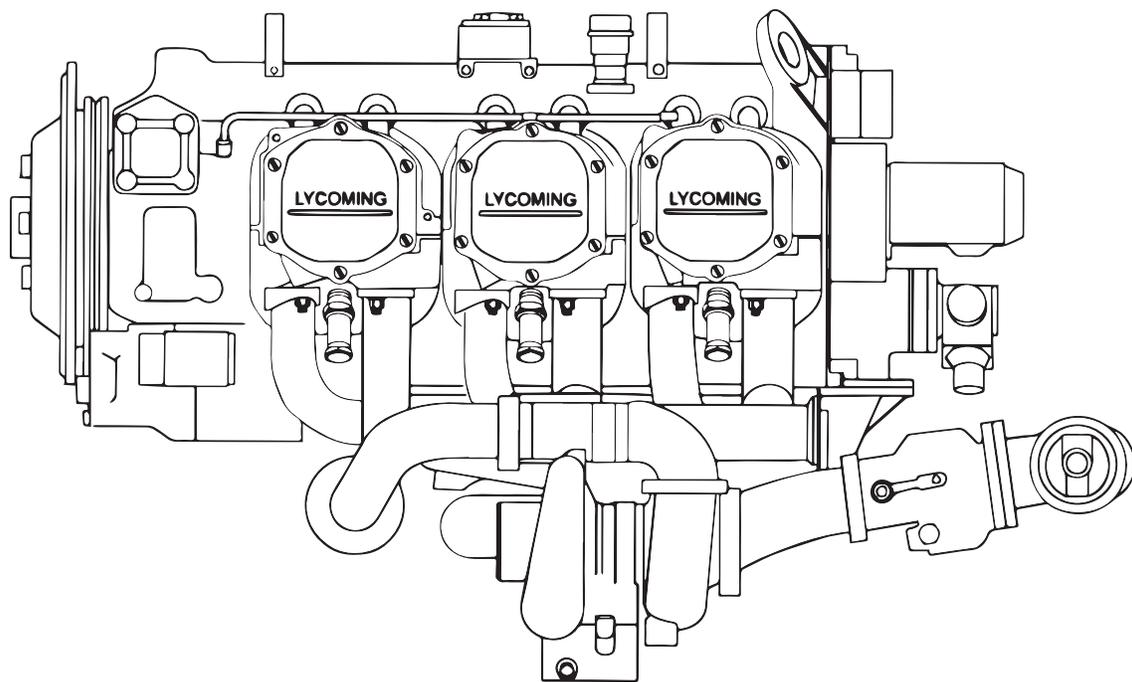

## TIO-540 AG1A

Wide Cylinder Flange Crankcase Model Engines

***LYCOMING***



This illustrated parts catalog contains a complete parts listing for the Lycoming TIO-540-AG1A wide cylinder flange crankcase model aircraft engines.

Major assembly and sub-assembly parts of the engines are listed in the Group Assembly sections in the general sequence of engine build up.

A Service Kits section and Oversize and Undersize Parts List are included to aid in ordering parts as necessary during overhaul.

The Numerical Index is provided for convenience in finding parts when only the part number is known.

Parts coverage of Vendor Accessories used on Lycoming engines may be found in the appropriate Vendor's Parts Catalog. A list of addresses of where to obtain these publications appears in the latest edition of Service Letter No. L114.

### NOTE

The illustrations, pictures and drawings shown in the publication are typical of the subject matter they portray.

*This catalog, when used in conjunction with the appropriate overhaul manual, shall be used for parts identification only. Under no circumstances shall this catalog be used as an assembly or installation document.*

Any reference in this document to a suppliers/parts manufacturer's product, by name, trademark, part number or other description is solely for the purposes of identification and does not indicate or infer that Lycoming accepts responsibility for quality control and/or airworthiness of parts which do not pass through the Lycoming quality control system.

All Lycoming publications will bear the copyright notice © Lycoming 1986, "All Rights Reserved", and all Lycoming publications are to be considered copyrighted and may not be reproduced without permission of the company.
--

### SERVICE BULLETINS, INSTRUCTIONS AND LETTERS

Although the information contained in this parts catalog is up-to-date at time of publication, users are advised to procure current information through all Lycoming distributors or from the factory by subscription. Consult the latest edition of Service Letter No. L114 for subscription information.

### HOW TO ORDER PARTS

In ordering parts for your engine, observe the following instructions which will expedite shipment of correct parts required without delay.

- a. Always specify the model and serial number of your engine.
- b. Always specify part number, nomenclature and quantity required.

**TABLE OF CONTENTS**

<b>SECTION</b>	<b>PAGE</b>
Introduction .....	i
Table of Contents .....	ii
Oversize and Undersize Parts Listing .....	iii
<b>1. CRANKCASE, CRANKSHAFT AND CAMSHAFT GROUP</b>	
Crankcase Assembly .....	1-1
Oil Level Gage and Engine Mounting Brackets .....	1-3
Crankcase Related Parts .....	1-5
Camshaft, Crankshaft and Related Parts .....	1-7
Propeller Governor Drive Assembly .....	1-9
Crankshaft and Fuel Pump Idler Gears .....	1-11
Crankcase Attaching Parts .....	1-13
<b>2. ACCESSORY HOUSING AND RELATED PARTS</b>	
Accessory Housing Assembly .....	2-1
Oil Pump Assembly and Accessory Housing Attaching Parts .....	2-3
Fuel Pump Assembly and Attaching Parts .....	2-5
Vacuum Pump Drive, Oil Cooler and Breather Fittings .....	2-7
Turbo Scavenge Pump and Hydraulic Pump Drive and Cover .....	2-9
Oil Filter Assembly and Oil Cooler Bypass Valve .....	2-11
<b>3. CYLINDER, PISTON AND VALVE TRAIN</b>	
Connecting Rods, Pistons and Ring Assemblies .....	3-1
Cylinder Assembly .....	3-3
Valve Assembly and Related Parts .....	3-5
Cylinder Related Parts .....	3-7
<b>4. IGNITION SYSTEM</b>	
Pressurized Magnetos (SLICK), Magneto Drives, Harnesses and Spark Plugs .....	4-1
<b>5. ELECTRICAL COMPONENTS</b>	
Lightweight Starter and Attaching Parts .....	5-1
(Dual) Alternator Mounting and Attaching Parts .....	5-3
<b>6. OIL SUMP AND INDUCTION SYSTEM</b>	
Oil Sump Assembly and Attachments .....	6-1
Fuel Injector, Fuel Manifold and Injection Nozzles .....	6-3
Intake Pipes, Heat Shields and Air Inlet Duct .....	6-5
Injector Nozzle Vent Manifolds, Hoses and Attachments .....	6-7
<b>7. TURBOCHARGER AND EXHAUST SYSTEMS</b>	
Exhaust Pipes and Transition Assembly .....	7-1
Turbocharger, Support and Attaching Parts .....	7-3
Turbo Oil Drain Tank and Related Parts .....	7-5
Turbocharger Controllers, Wastegate and Hoses .....	7-7
<b>8. SERVICE KIT SECTION</b> .....	8-1
<b>9. NUMERICAL INDEX</b> .....	9-1

**Oversize and Undersize Parts Listing**

Part No.	Description	Oversize								Undersize		
		P02 .002	P05 .005	P10 .010	P15 .015	P20 .020	P30 .030	P40 .040	P50 .050	M03 .003	M06 .006	M10 .010
61681	GUIDE	See Latest Edition of Service Instruction No. 1256.										
66610	BUSHING		X	X								
69260	INSERT			X								
69796	DOWEL		X									
71903-A,B	BUSHING	See Latest Edition of Service Instruction No. 1143.										
72057	SEAT		X	X		X	X					
72058	SEAT			X		X	X					
72155-S	BUSHING		X	X	X	X						
73810	BUSHING	See Latest Edition of Service Instruction No. 1142.										
75656-S	BUSHING		X	X	X	X						
75657-S	BUSHING		X	X		X						
LW-11997	SEAL	See Latest Edition of Service Instruction No. 1324.										
LW-13792	SEAL	See Latest Edition of Service Instruction No. 1324.										
LW-13884	BEARING				X					X*	X*	X*
LW-16711	BEARING				X					X	X	X
STD-1065	DOWEL	X	X	X	X							
16R22127	GUIDE	See Latest Edition of Service Instruction No. 1256.										
18A19441	BEARING				X					X	X	X

\* Also available in P15 oversize.

In addition to the above, studs are available in P03, P07 & P12.

**NOTE**

When ordering oversize and undersize parts, be sure to specify the required oversize and undersize dimension along with the proper part number. For example, to order bearing LW-13884 in .003 undersize, order part number LW-13884-M03. Oversize code letter is "P" while undersize code letter is "M". These letters are then followed by the number designating the size in thousandths of an inch.

### CRANKCASE, CRANKSHAFT AND CAMSHAFT GROUP CRANKCASE ASSEMBLY

FIG. REF. 1	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	11E20003-S3	CRANKCASE ASSEMBLY (See Note)	1
2	LW-13794	STUD, 5/16-18 x 1.00 long	1
3	38-13	STUD, 3/8-16 x 1-5/8 long	4
4	31C-12	STUD, 5/16-18 x 1-1/2 long	2
5	31C-13	STUD, 5/16-18 x 1-5/8 long	1
6	38-13	STUD, 3/8-16 x 1-5/8 long	24
7	50-15	STUD, 1/2-13 x 1-7/8 long	12
8	38-22	STUD, 3/8-16 x 2-3/4 long	1
9	38D-17	STUD, 3/8-16 x 2-1/8 long, drilled	1
10	38-15	STUD, 3/8-16 x 1-7/8 long	8
11	69796	DOWEL, Crankshaft, front bearing	2
12	STD-514	DOWEL, 5/16 dia. x 1/2 long	2
13	STD-557	DOWEL, 1/2 dia. x 11/16 long	2
14	72158	BUSHING, Governor drive idler shaft	1
15	STD-1339	PLUG, 1/16-27 NPT	1
16	1102	PLUG, 1/8 pipe x 3/8 long	4
17	31C-16	STUD, 5/16-18 x 2.00 long	4
18	73772	NOZZLE ASSY., Piston cooling	6

#### NOTE

This part is not available as a service item. Refer to Service Kits, Section 8 for applicable Crankcase Assembly and Governor Stud Kit Part Number.

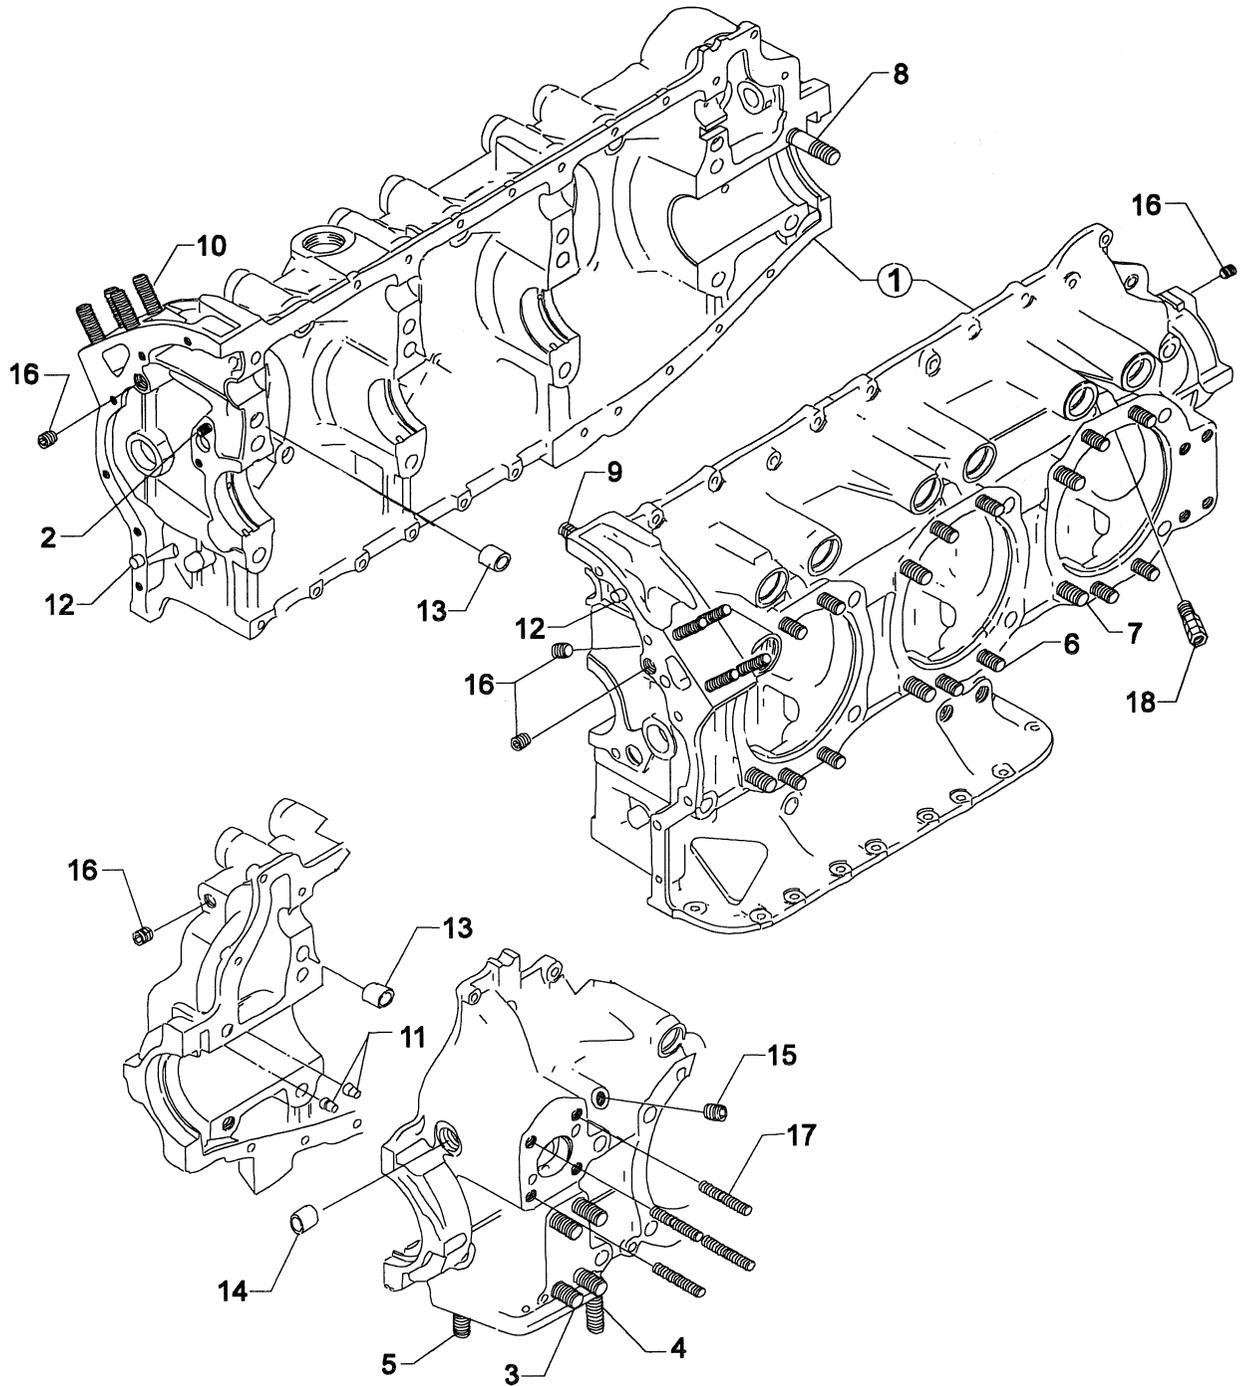
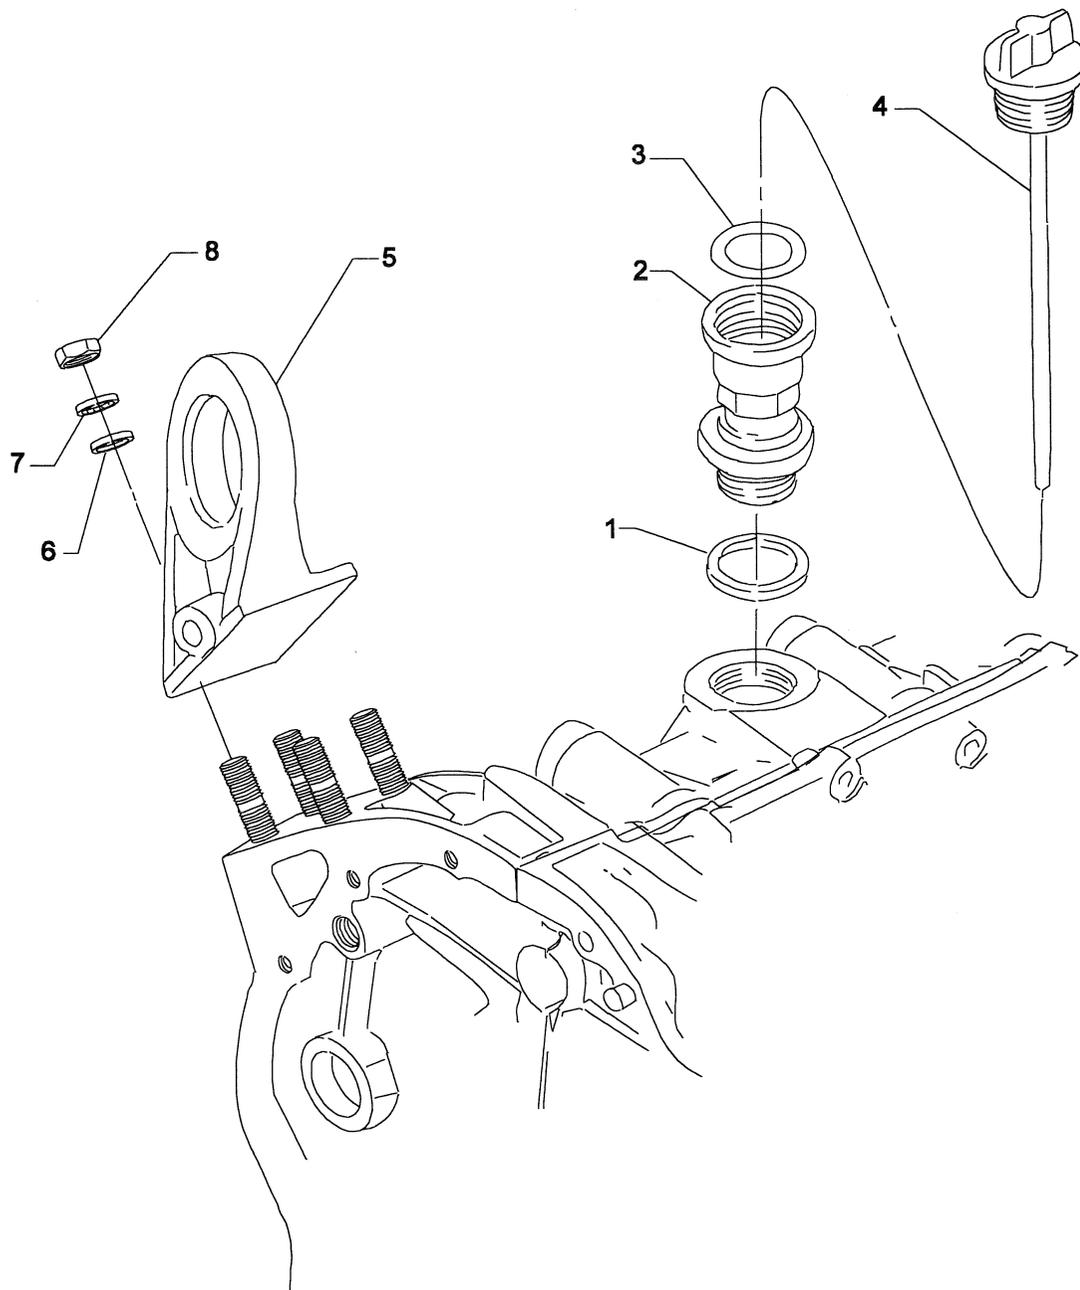


Figure 1. CRANKCASE ASSEMBLY

**CRANKCASE, CRANKSHAFT AND CAMSHAFT GROUP  
OIL LEVEL GAGE AND ENGINE MOUNTING BRACKETS**

FIG. REF. 2	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	70457	GASKET, Oil filler extension	1
2	75737	EXTENSION, Oil filler	1
3	74068	"O" RING, Oil level gage	1
4	LW-16783-14	GAGE ASSY., Oil level	1
5	70456	BRACKET, Engine mounting (dynafocal)	4
6	STD-33	WASHER, 3/8 plain	16
7	STD-678	WASHER, 3/8 lock, internal teeth	16
8	STD-596	NUT, 3/8-24 plain	16



**Figure 2. OIL LEVEL GAGE AND ENGINE MOUNTING BRACKETS**

### CRANKCASE, CRANKSHAFT AND CAMSHAFT GROUP CRANKCASE RELATED PARTS

FIG. REF. 3	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	1028-B	BALL, 11/16 diameter	1
2	68668*	SPRING, Oil pressure relief valve	1
	61084*	SPRING, Oil pressure relief valve	1
	77467*	SPRING, Oil pressure relief valve	1
	LW-11713*	SPRING, Oil pressure relief valve	1
	LW-18085*	SPRING, Oil pressure relief valve	1
3	06E19769-1.25	GASKET, 1-1/4 I.D. x 1-1/2 O.D. x 3/32 annular	1
4	77808	VALVE ASSY., Oil pressure relief, adjustable	1
5	LW-16711	BEARING, Crankshaft	6
6	LW-13884	BEARING, Crankshaft, front	2
	18A19441	BEARING, Crankshaft, front (alternate)	2
7	LW-13792**	SEAL, Crankshaft oil, solid	1
	LW-11997**	SEAL, Crankshaft oil, split	1
8	72091	RING, Oil seal, 23/64 I.D. x 7/64 diameter	2
9	72877	BODY, Hydraulic tappet	12

\* Select spring to give a maximum of three threads exposed on adjusting screw to allow field adjustment. Reference latest revision of Lycoming Table of Limits SSP-1776, Part 1 for spring identification.

\*\* Refer to the latest edition of Lycoming Service Instruction No. 1324 for installation.

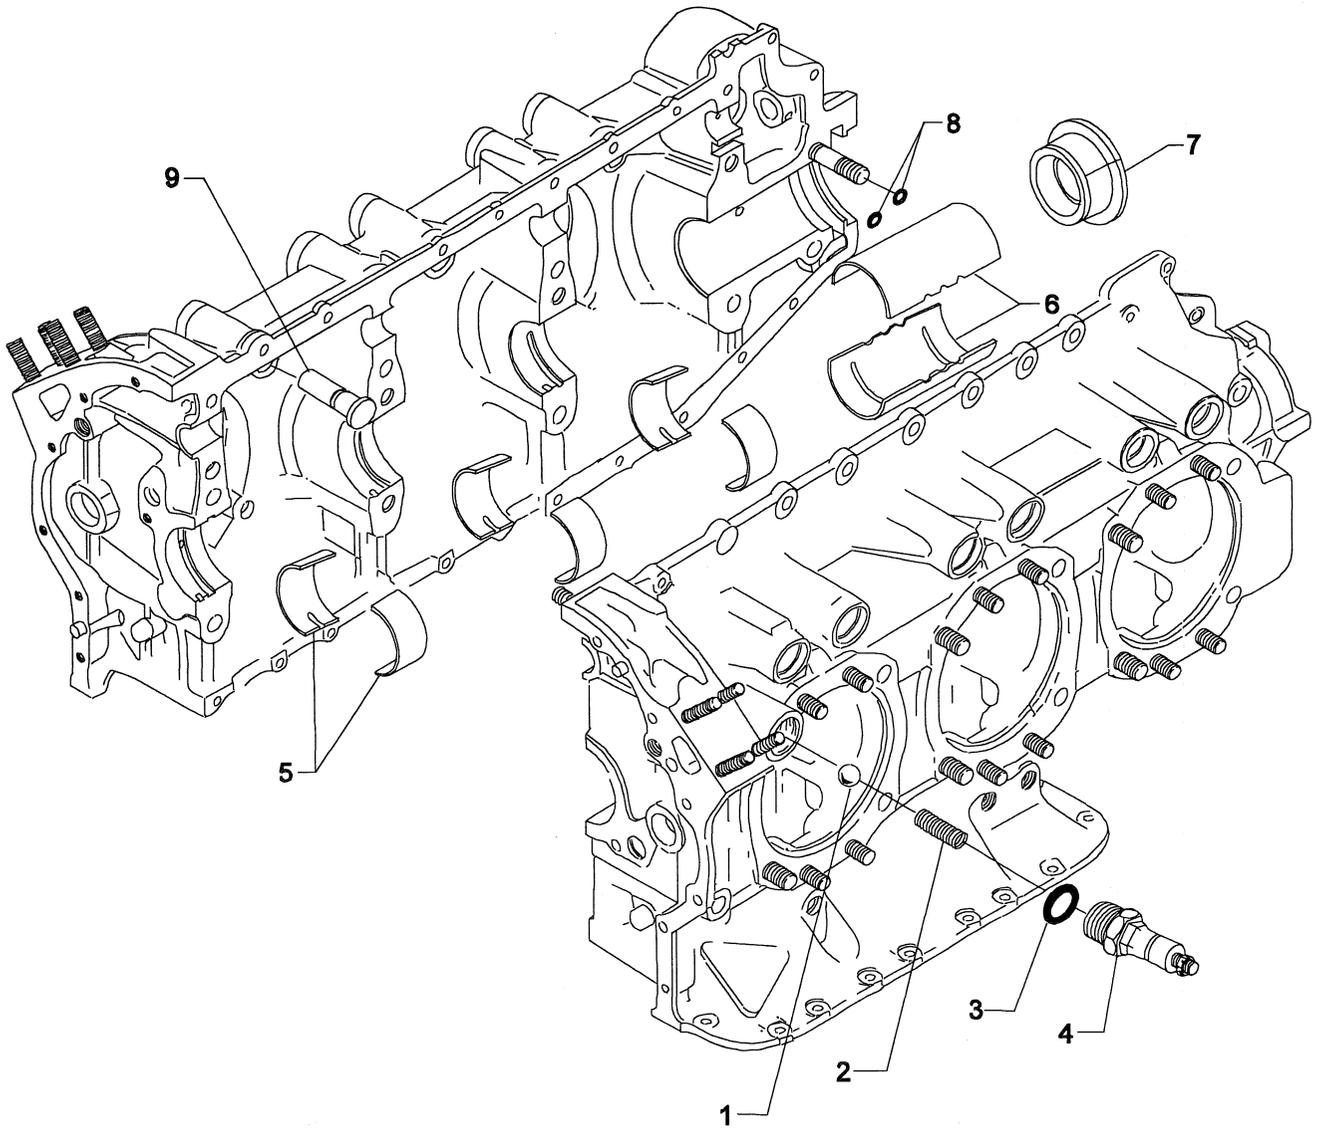


Figure 3. CRANKCASE RELATED PARTS

### CRANKCASE, CRANKSHAFT AND CAMSHAFT GROUP CAMSHAFT, CRANKSHAFT AND RELATED PARTS

FIG. REF. 4	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	13E27622	CRANKSHAFT & BUSHING ASSEMBLY	1
2	73810*	BUSHING, Crankshaft dyn. counterweight	4
3	STD-1065	DOWEL, Stepped, 5/16 x 1/4 dia. x 35/64 long	1
4	71640	PLUG, 1-3/8 diameter	1
5	75656-S	BUSHING, Propeller flange, long	4
6	72155-S	BUSHING, Propeller flange, short	1
7	75657-S	BUSHING, Propeller flange, indexing	1
8	STD-1211	PLUG, 2.00 dia. expansion	1
9	LW-19227**	COUNTERWEIGHT ASSEMBLY	2
10	71903 +	BUSHING, Dynamic counterweight	8
11	72965**	ROLLER, Dyn. counterweight, 5.1 order	2
12	72797**	ROLLER, Dyn. counterweight, 6.3 order	2
13	71907	WASHER, Dynamic counterweight	8
14	LW-14820	RING, Internal retaining	8
15	13S19648 ++	GEAR, Crankshaft	1
16	LW-18638	LOCKPLATE, Crankshaft gear	1
17	STD-2209	BOLT, 5/16-24 x 1-3/4 long, hex. head	1
18	LW-19340	CAMSHAFT ASSEMBLY	1
19	76118	SPACER, Tachometer shaft centering	1
20	76155	SHAFT ASSY., Tachometer	1
21	LW-18667	PIN, 3/16 dia. x 2-21/64 long	1
22	STD-2231	RING, Internal retaining	1
23	31M21994	SUPPORT ASSY., Starter ring gear	1
24	72566	GEAR, Starter ring	1

\* See latest edition of

\*\* See latest edition of

+ See latest edition of

++ See latest edition of

Lycoming Service Instruction No. 1142 for application.

Lycoming Service Instruction No. 1012 for application.

Lycoming Service Instruction No. 1143 for application.

Lycoming Service Bulletin No. 475 for application.

**CRANKSHAFT & COUNTERWEIGHT ASSEMBLY, Kit P/N 05K27676 available.**

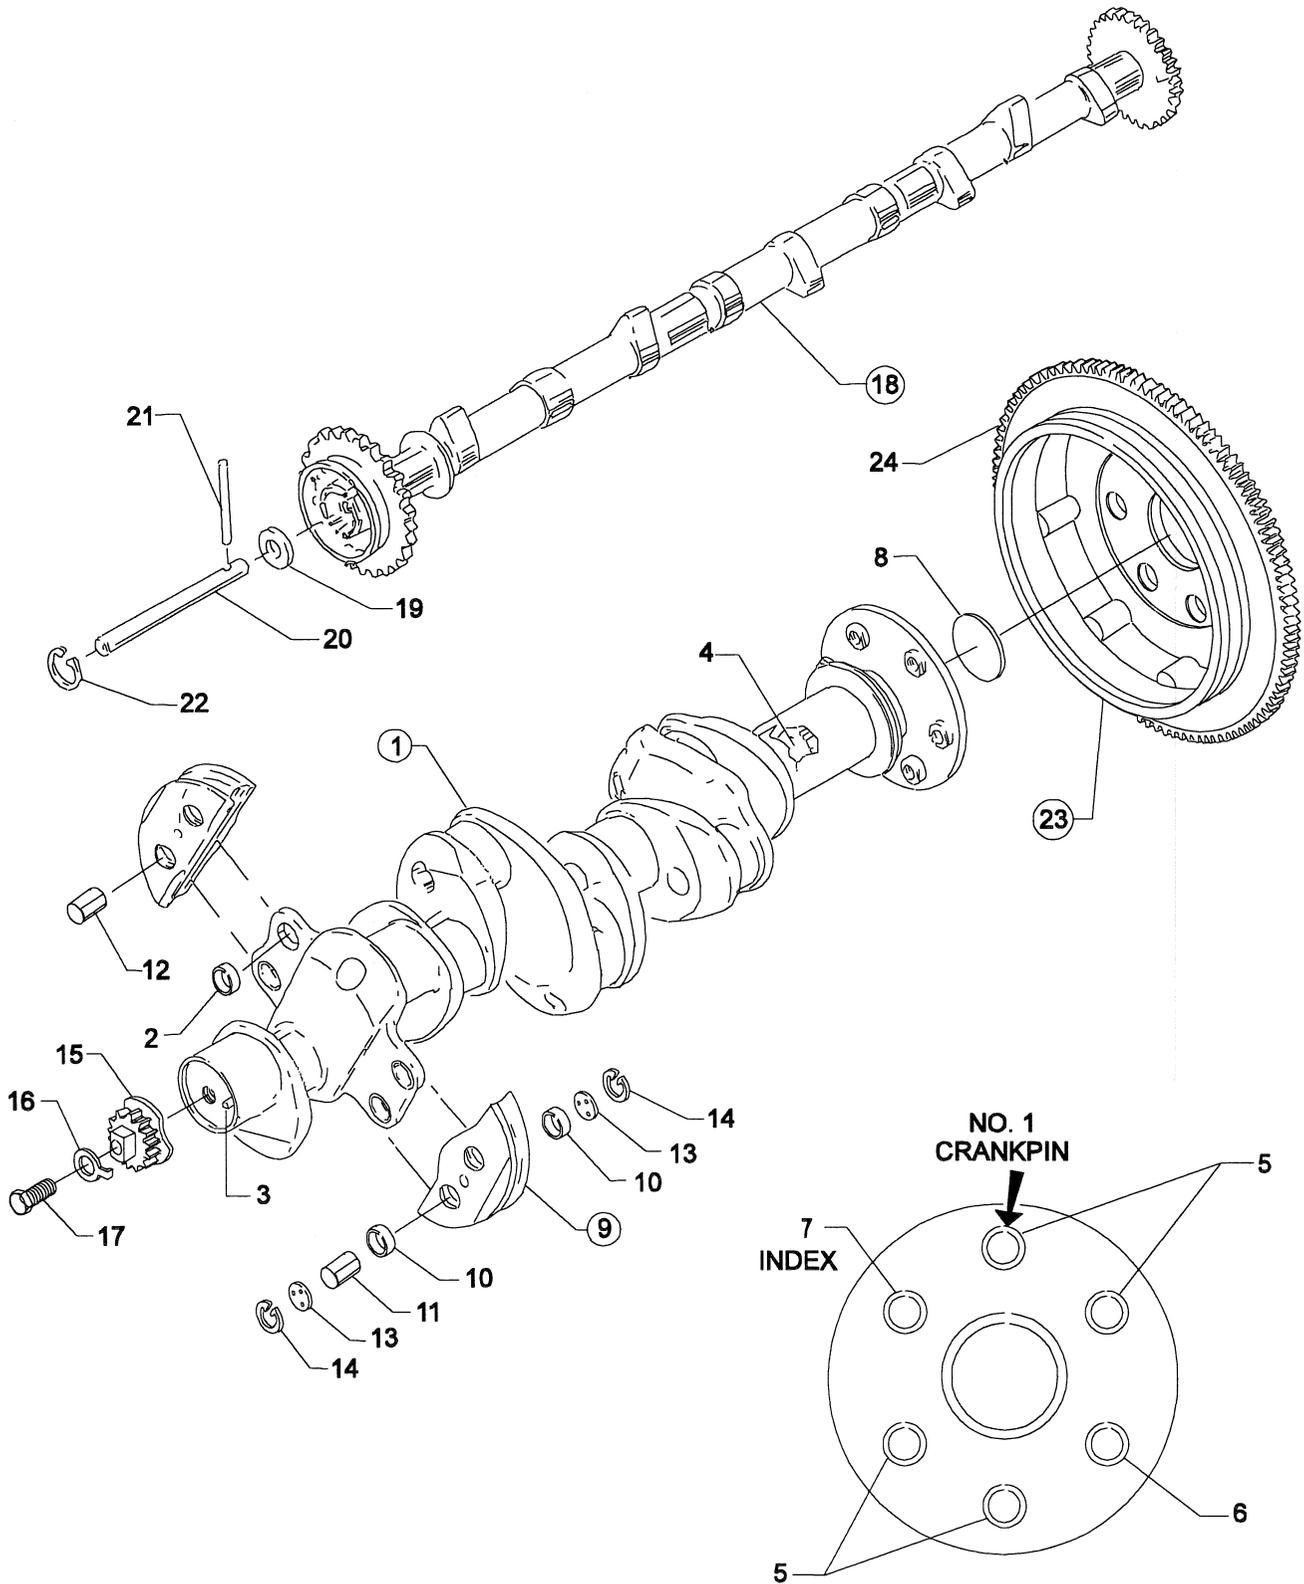


Figure 4. CAMSHAFT, CRANKSHAFT AND RELATED PARTS

### CRANKCASE, CRANKSHAFT AND CAMSHAFT GROUP PROPELLER GOVERNOR DRIVE ASSEMBLY

FIG. REF. 5	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	LW-10442	GEAR, Propeller governor drive	1
2	LW-14021	SHAFT, Propeller governor idler gear	1
3	LW-10541	GEAR ASSY., Propeller governor idler	1
4	77872	BUSHING, Propeller governor idler gear	2
5	STD-19	DOWEL, 3/32 dia. x 7/32 long	1
6	STD-798	DOWEL, 3/32 dia. x 9/32 long	1
7	73249	WASHER, Thrust	AR
	73250	WASHER, Thrust	AR
	73251	WASHER, Thrust	AR
	73252	WASHER, Thrust	AR
	01L21418	WASHER, Thrust	AR
8	AN565B1032H5	SET SCREW, No. 10-32 x 5/16 long	1
9	70455	GASKET, 25/32 I.D. x 1-1/8 O.D. x 1/16 thick	1
10	LW-13896	PLUG, 3/4-16 hex. head	1
11	72053	GASKET, Governor	1
12	72378	COVER, Governor drive	1
13	STD-35	WASHER, 5/16 plain (Woodward governor)	20
	STD-35	WASHER, 5/16 plain (AN governor)	4
14	STD-475	WASHER, 5/16 lock, internal teeth	4
15	STD-1410	NUT, 5/16-18 plain	4

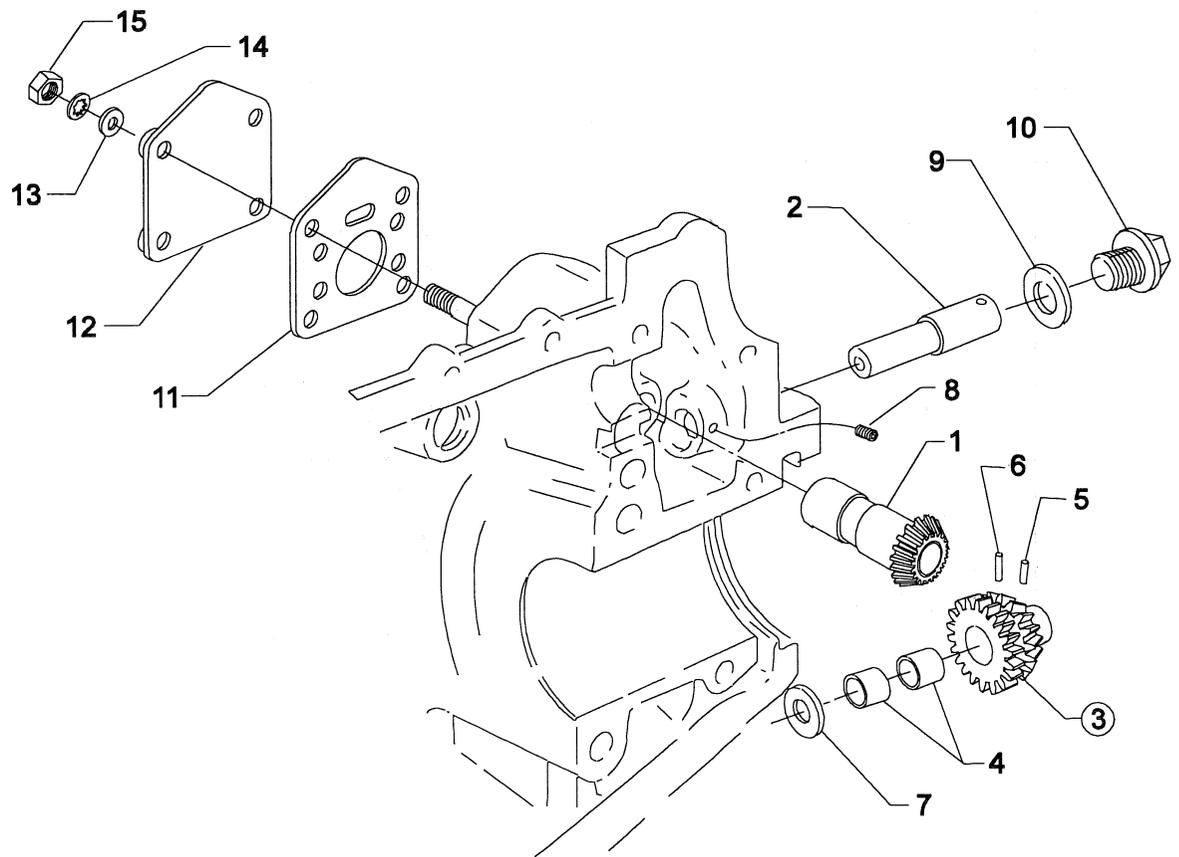


Figure 5. PROPELLER GOVERNOR DRIVE ASSEMBLY

**CRANKCASE, CRANKSHAFT AND CAMSHAFT GROUP  
CRANKSHAFT AND FUEL PUMP IDLER GEARS**

FIG. REF. 6	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	LW-13795	SHAFT, Crankshaft idler gear	2
2	LW-31H0.88	BOLT, 5/16-18 x 7/8 long, hex. hd.	3
3	STD-2168	NUT, 5/16-18 NC-3 slotted shear	1
4	72246	SHAFT, Fuel pump idler gear	1
5	71667	LOCKPLATE, 1/4 bolt x 1-3/4 spacing (offset)	1
6	LW-25-0.63	SCREW, 1/4-20 x 5/8 long, hex. hd.	2
7	71664	GEAR ASSY., Fuel pump idler	1
8	77309	BUSHING, Crankshaft idler gear	1
9	70474	WASHER, Fuel pump idler thrust	1
10	STD-1737	RING, 37/64 dia. x 3/64 thick, external retaining	1
11	71668	GEAR ASSY., Crankshaft idler, plain	2
12	67530	BUSHING, Crankshaft idler gear	1
13	72972	SHAFTGEAR ASSY., Fuel pump drive	1
14	72962	THRUST BUTTON, Shaftgear	1
15	69164	GASKET, Fuel pump adapter	1
16	69159	ADAPTER ASSY., Fuel pump drive	1
17	STD-1774	PIN, 1/8 dia. x 1/4 long	1
18	STD-213	OIL SEAL, 3/4 I.D. x 1-3/8 O.D.	1

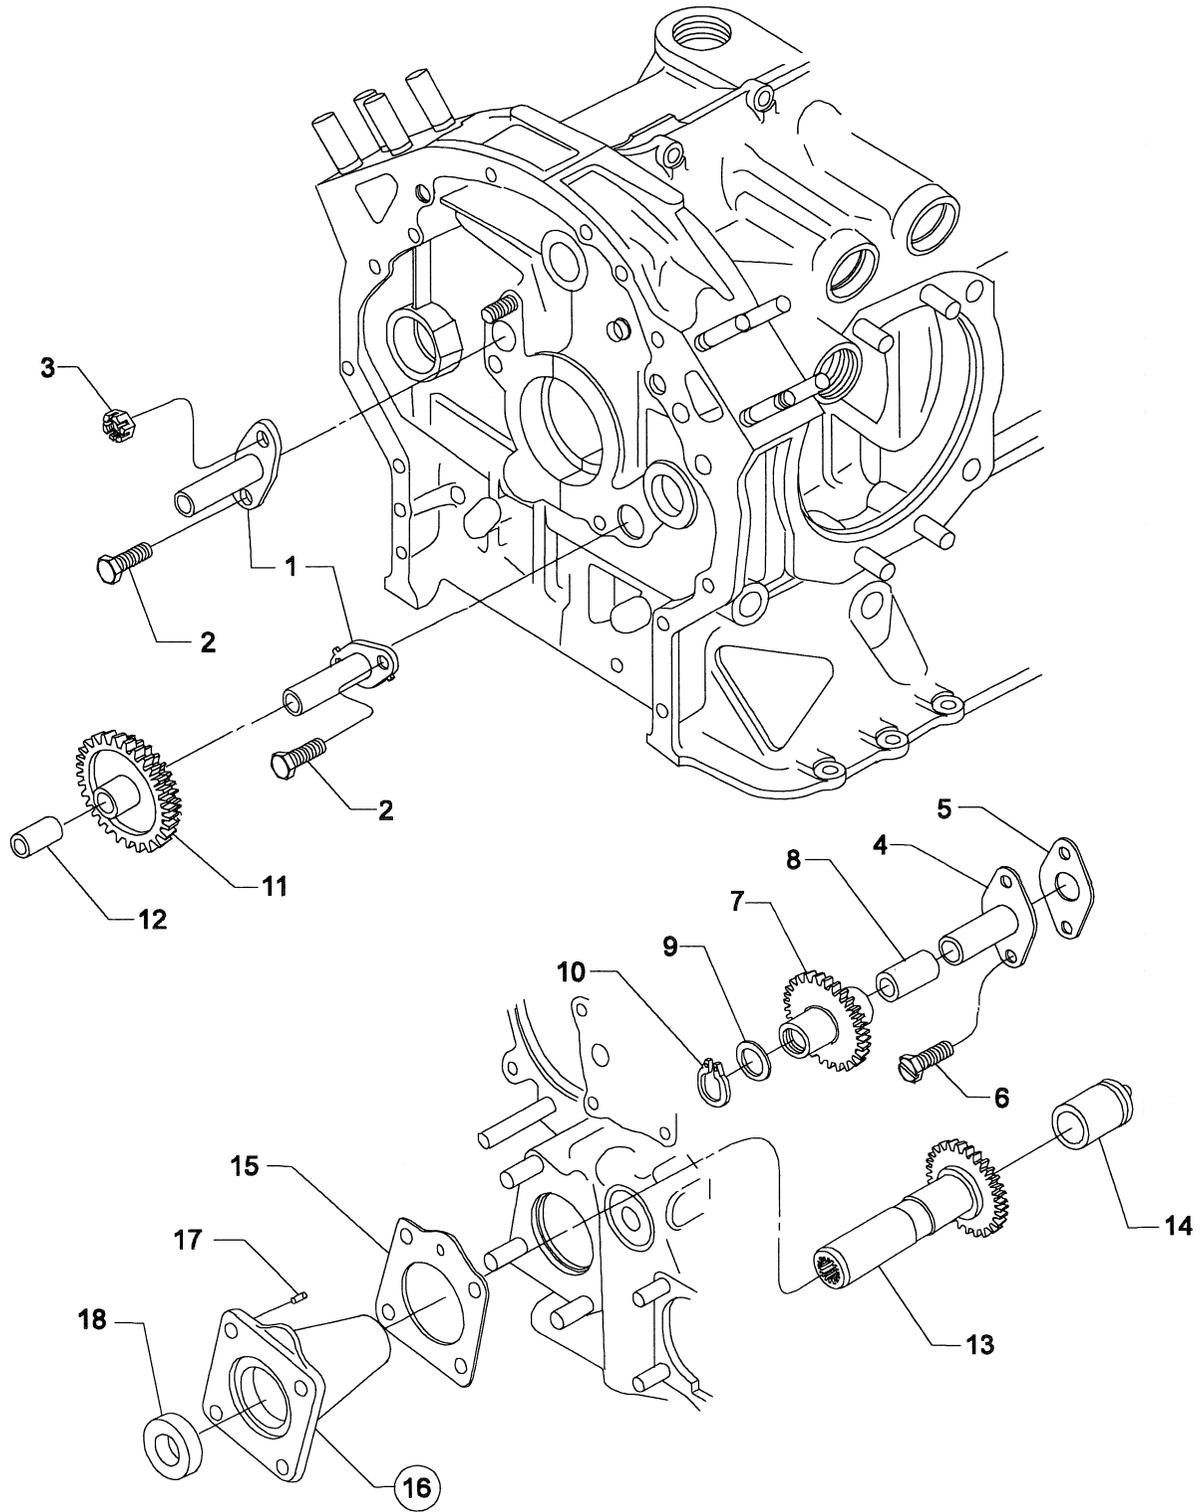


Figure 6. CRANKSHAFT AND FUEL PUMP IDLER GEARS

### CRANKCASE, CRANKSHAFT AND CAMSHAFT GROUP CRANKCASE ATTACHING PARTS

FIG. REF. 7	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	LW-25-1.50	BOLT, 1/4-20 x 1-1/2 long, hex.hd.	8
2	LW-25-1.88*	BOLT, 1/4-20 x 1-7/8 long, hex, hd.	1
3	LW-25-2.00**	BOLT, 1/4-20 x 2.00 long, hex. hd.	2
4	STD-8	WASHER, 1/4 plain	25
5	60803	STRAP, Lifting	2
6	LW-25-1.75	BOLT, 1/4-20 x 1-3/4 long, hex. hd.	1
7	LW-25-1.13	BOLT, 1/4-20 x 1-1/8 long, hex. hd.	4
8	STD-160	WASHER, 1/4 lock, internal teeth	16
9	STD-1411	NUT, 1/4-20 plain	12
10	LW-25S1.50	BOLT, 1/4-20 x 1-1/2 long, dr. end	6
11	STD-8	WASHER, 1/4 plain	18
12	STD-1409	NUT, 1/4-20 slotted shear	6
13	STD-33	WASHER, 3/8 plain	1
14	STD-872	NUT, 3/8-24 slotted	1
15	AN6-34A	BOLT, 3/8-24 x 3-37/64 long, hex. hd.	1
16	STD-33	WASHER, 3/8 plain	3
17	STD-678	WASHER, 3/8 lock, internal teeth	2
18	STD-596	NUT, 3/8-24 plain	2
19	76220	STUD, 1/2-20 x 10-45/64 long	8

\* Two STD-8 washers and one LW-25-1.88 bolt assembled in rear top hole in crankcase.

\*\* To attach fuel manifold bracket.

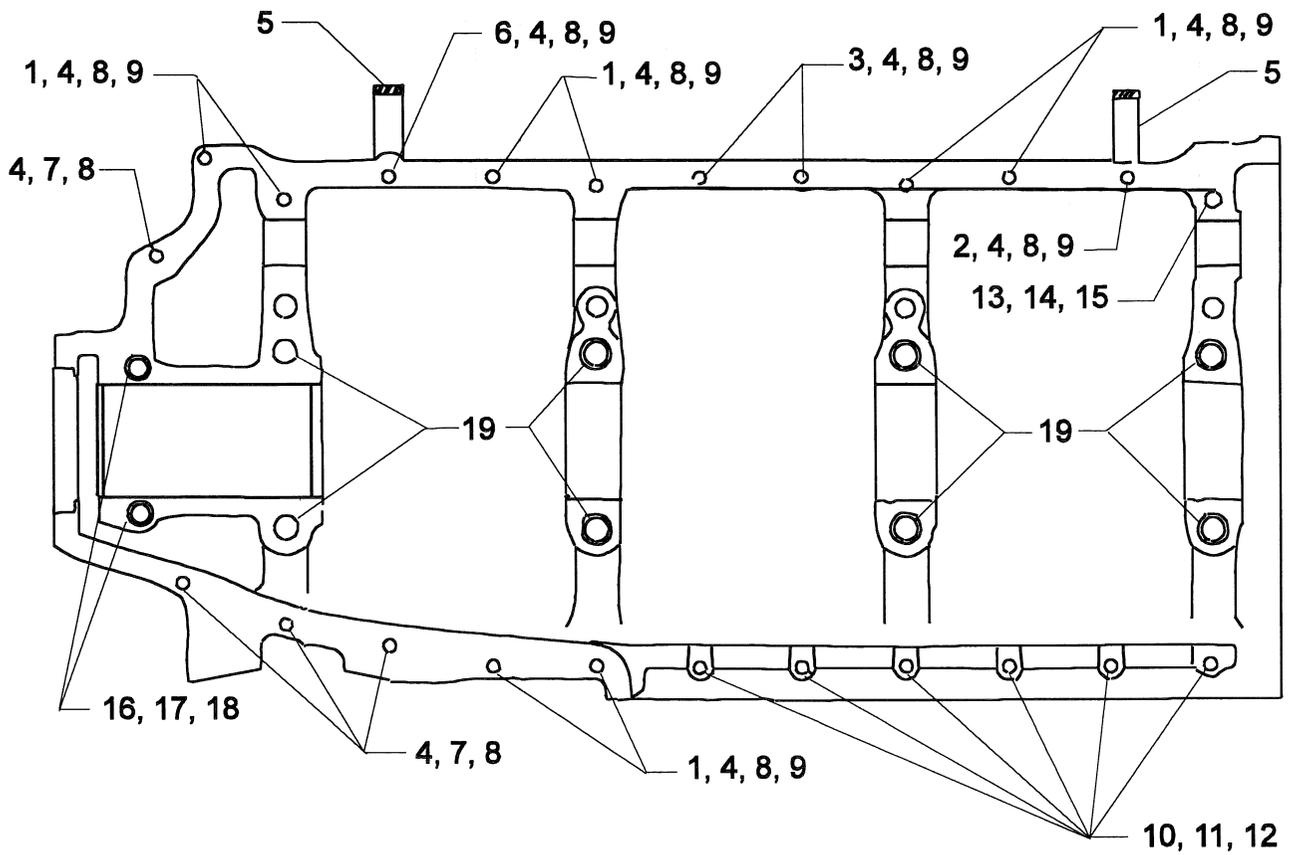


Figure 7. CRANKCASE ATTACHING PARTS

**ACCESSORY HOUSING AND RELATED PARTS  
ACCESSORY HOUSING ASSEMBLY**

FIG. REF. 8	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	73818	GASKET, Accessory housing	1
2	21C21542-04	HOUSING ASSY., Accessory	1
3	31C-19	STUD, 5/16-18 x 2-3/8 long	4
4	31C-12	STUD, 5/16-18 x 1-1/2 long	4
5	31C-21	STUD, 5/16-18 x 2-5/8 long	4
6	25C-21	STUD, 1/4-20 x 2-5/8 long	4
7	31CD-20	STUD, 5/16-18 x 2-1/2 long, drilled	3
8	1102	PLUG, 1/8 pipe	2
9	LW-18696	TEE, 1/4 tube (restricted on run)	1
10	AN932-6	PLUG, 3/4-14 NPT, Allen head	1

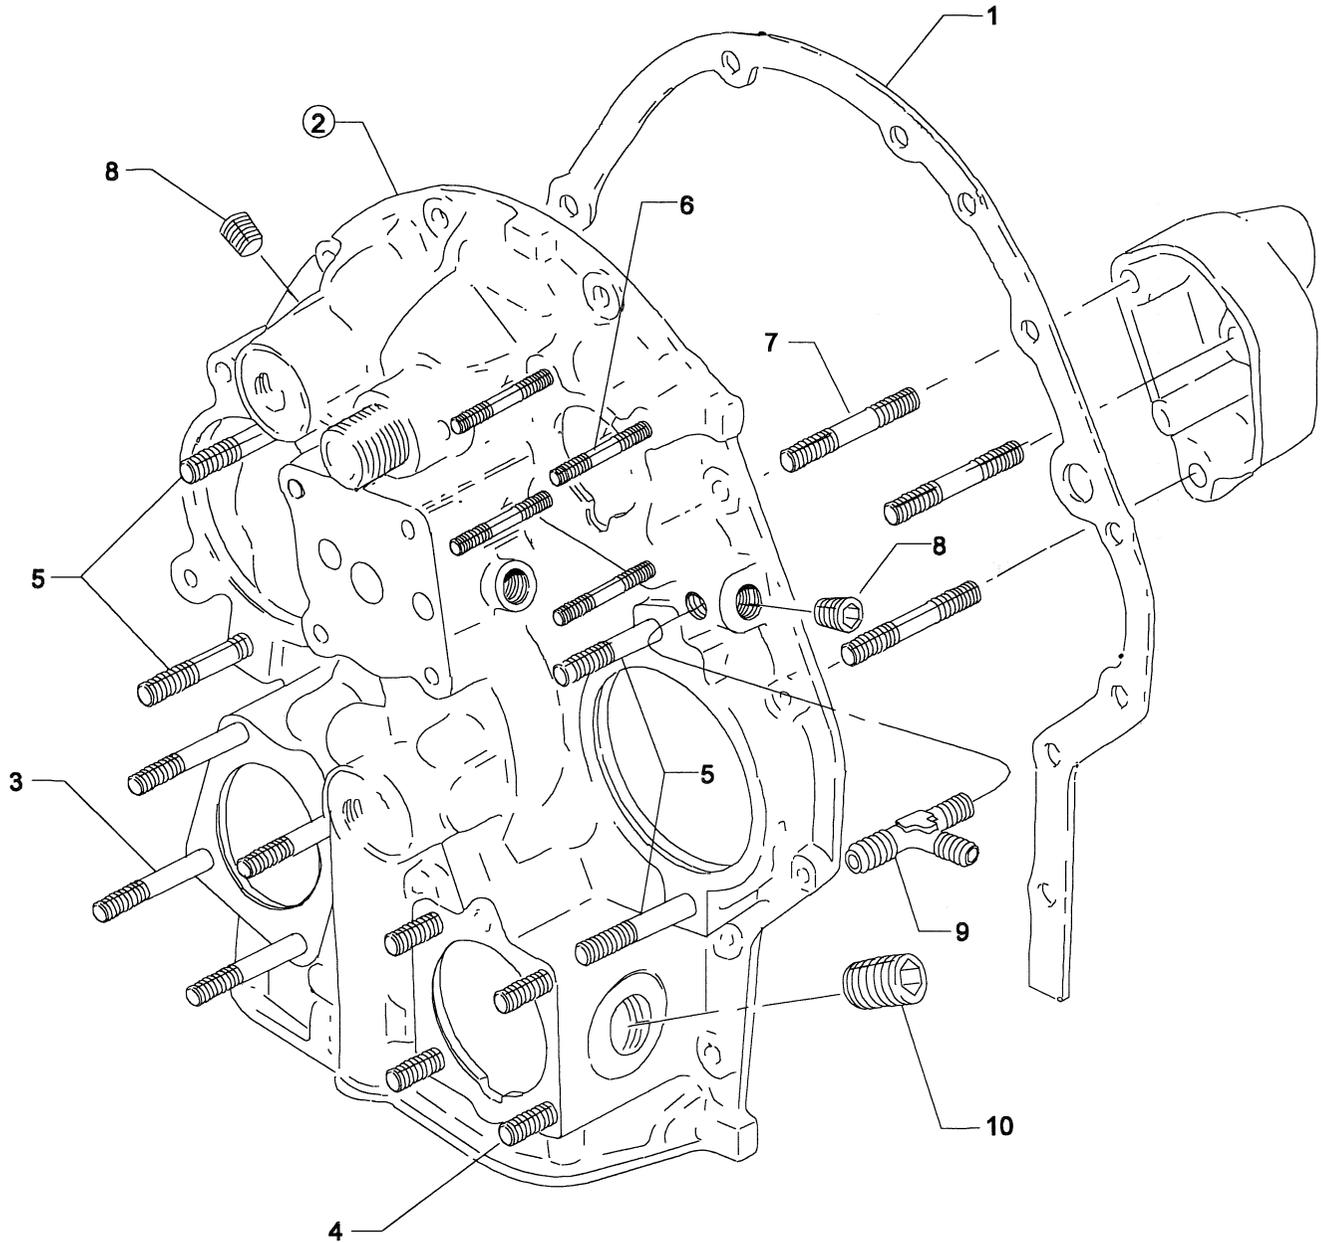


Figure 8. ACCESSORY HOUSING ASSEMBLY

### ACCESSORY HOUSING AND RELATED PARTS OIL PUMP ASSEMBLY AND ACCESSORY HOUSING ATTACHING PARTS

FIG . REF. 9	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	75287	BODY ASSEMBLY, Oil pump	1
2	60329	SHAFT, Oil pump idler	1
3	STD-714	PIN, 1/8 dia. x 1.00 long, cotter	1
4	STD-1339	PLUG, 1/16-27 NPT	1
5	76784	SHAFT, Oil pump drive	1
6	61297	IMPELLER, Oil pump, driving	1
7	61298	IMPELLER, Oil pump, driven	1
8	STD-35	WASHER, 5/16 plain	3
9	STD-1420	NUT, 5/16-18 slotted	3
10	LW-14260	SEAL, Tachometer drive, oil	1
11	STD-8	WASHER, 1/4 plain	10
12	STD-160	WASHER, 1/4 lock, internal teeth	12
13	LW-25-0.94	BOLT, 1/4-20 x 15/16 long, hex. hd.	9
14	LW-25-1.13	BOLT, 1/4-20 x 1-1/8 long, hex. hd.	1
15	LW-25-1.50	BOLT, 1/4-20 x 1-1/2 long, hex. hd.	2

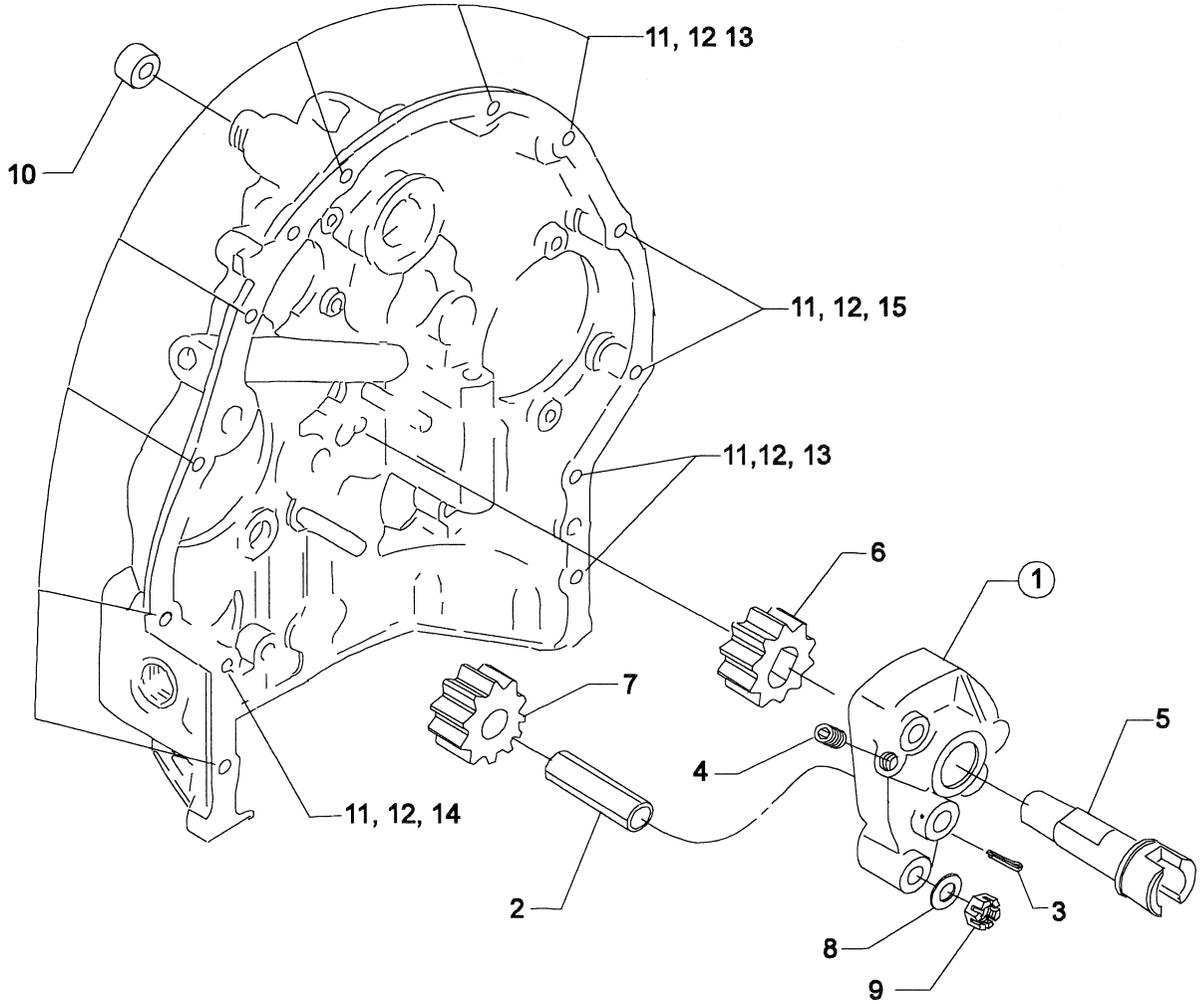
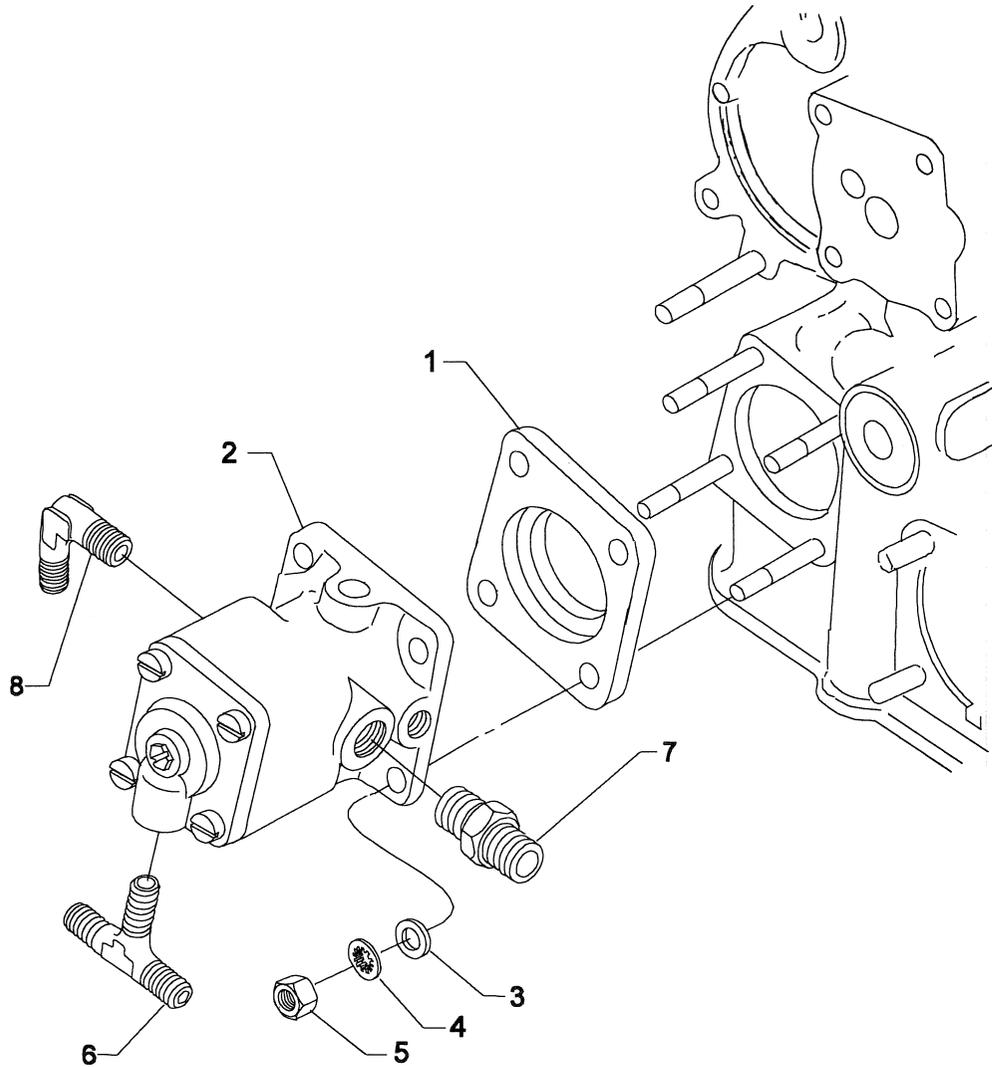


Figure 9. OIL PUMP ASSEMBLY AND ACCESSORY HOUSING ATTACHING PARTS

**ACCESSORY HOUSING AND RELATED PARTS  
FUEL PUMP ASSEMBLY AND ATTACHING PARTS**

FIG. REF. 10	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	LW-10799	SPACER, Fuel pump, insulating	1
2	62D21153	FUEL PUMP (RG17980-U)	1
3	STD-35	WASHER, 5/16 plain	4
4	STD-475	WASHER, 5/16 lock, internal teeth	4
5	STD-1410	NUT, 5/16-18 plain	4
6	02A21171	TEE, 1/4 tube with 1/8 NPT	1
7	AN816-6	NIPPLE, 3/8 flared tube x 1/4 NPT	1
8	77433	ELBOW, 1/2 dia. flared tube, 1/4 NPT, 90°	1



**Figure 10. FUEL PUMP ASSEMBLY AND ATTACHING PARTS**

**ACCESSORY HOUSING AND RELATED PARTS  
VACUUM PUMP DRIVE, OIL COOLER AND BREATHER FITTINGS**

FIG . REF. 11	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	61183	GASKET, Accessory adapter	1
2	67536	ADAPTER ASSY., Vacuum pump	1
3	STD-1774	PIN, 1/8 dia. x 1/4 long	1
4	06A19956	OIL SEAL, 7/8 I.D. x 1-1/2 O.D. x 5/16 wide	1
5	72974	GEAR ASSY., Vacuum pump driven	1
6	71596	WASHER, Accessory drive gear	1
7	8313	GASKET, Vacuum pump	1
8	60430	COVER, Vacuum pump	1
9	STD-8	WASHER, 1/4 plain	4
10	STD-160	WASHER, 1/4 lock, internal teeth	4
11	STD-1411	NUT, 1/4-20 plain	4
12	06E19769-0.63	GASKET, 7/8 O.D. x 5/8 I.D. x 3/32 annular	1
13	62417	PLUG, Oil cooler bypass	1
14	STD-784	PLUG, 3/8-18 NPT, Allen head	2
15	71651	FITTING, Breather	1
16	62732	CAP, Tachometer drive	1

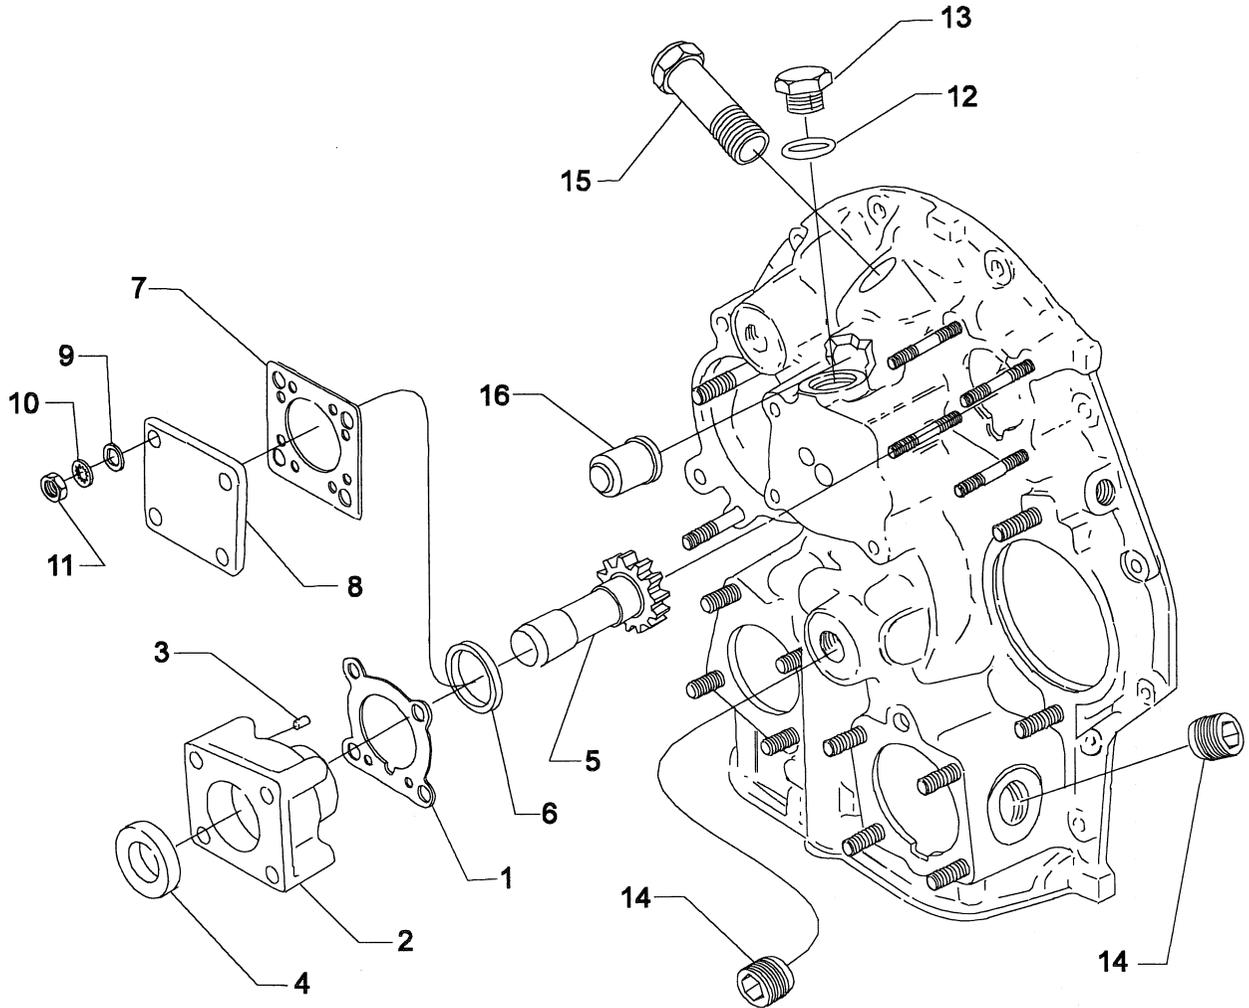


Figure 11. VACUUM PUMP DRIVE, OIL COOLER AND BREATHER FITTINGS

### ACCESSORY HOUSING AND RELATED PARTS TURBO SCAVENGE PUMP AND HYDRAULIC PUMP DRIVE AND COVER

FIG. REF. 12	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	68315	GASKET, Accessory drive adapter	1
2	29A21372	DRIVE ASSY., Turbo scavenge & hydraulic pump	1
3	29A21358	ADAPTER ASSY., Turbo scavenge pump	1
4	25C-11	STUD, 1/4-20 x 1-3/8 long	4
5	STD-1774	PIN, 1/8 dia. x 1/4 long	2
6	01N19833-218	PLUG, Pin	1
7	29D21310	ADAPTER, Hydraulic pump	1
8	LW-RF2.239-0.70	RING, Oil seal	1
9	LW-15853	SHAFT, Hydraulic pump drive	1
10	STD-95	KEY, 1/8 x 1/2 Woodruff	1
11	LW-15550	GENERATOR PUMP	1
12	06A19956	OIL SEAL, 7/8 I.D. x 1-1/2 O.D. x 5/16 wide	1
13	77825	SHAFTGEAR, Hydraulic pump drive	1
14	77708	WASHER, Retaining shaftgear	1
15	MS16562-28	PIN, 3/32 dia. x 3/4 long, slotted	1
16	STD-8	WASHER, 1/4 plain	4
17	STD-160	WASHER, 1/4 lock, internal teeth	4
18	STD-1411	NUT, 1/4-20 plain	4
19	25C-12	STUD, 1/4-20 x 1-1/2 long	4
20	STD-35	WASHER, 5/16 plain	4
21	STD-475	WASHER, 5/16 lock, internal teeth	4
22	STD-1410	NUT, 5/16-18 plain	4
23	8313	GASKET, Pump	1
24	60430	COVER, Pump	1
25	STD-8	WASHER, 1/4 plain	4
26	STD-160	WASHER, 1/4 lock, internal teeth	4
27	STD-1411	NUT, 1/4-20 plain	4

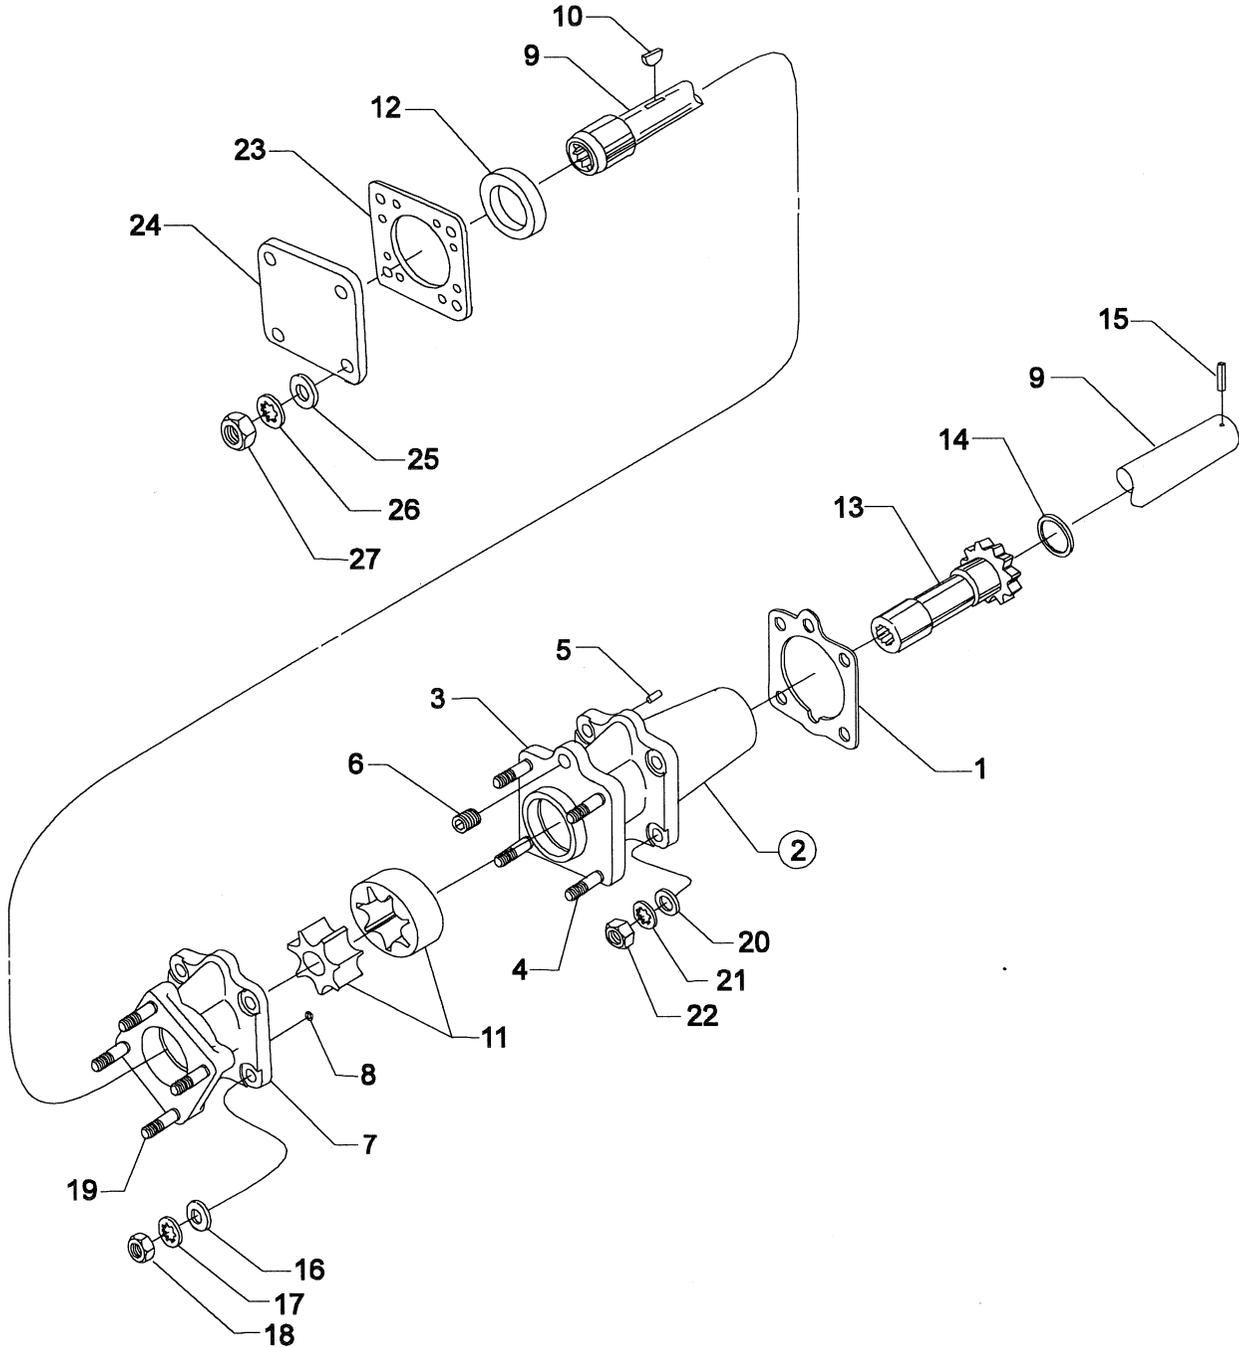


Figure 12. TURBO SCAVENGE PUMP AND HYDRAULIC PUMP DRIVE AND COVER

**ACCESSORY HOUSING AND RELATED PARTS  
OIL FILTER ASSEMBLY AND OIL COOLER BYPASS VALVE**

FIG. REF. 13	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	LW-12795*	GASKET, Oil filter adapter	2
2	77852	OIL FILTER BASE ASSEMBLY	1
3	54D19625**	OIL FILTER, Textron (short with stud)	1
4	STD-8	WASHER, 1/4 plain	4
5	STD-160	WASHER, 1/4 lock, internal teeth	1
6	STD-1411	NUT, 1/4-20 plain	1
7	STD-1856	SCREW, 1/4-20 x 1.00 long, hex. hd.	3
8	53E22144	VALVE ASSY., Temp. control oil cooler	1
9	76510	GASKET, Valve assembly	1
10	25C-10	STUD, 1/4-20 x 1-1/4 long	1

\* Extra gasket, shipped as loose part, with engine.

\*\* Refer to the latest edition of Lycoming SSP-885 for oil filter kits and replacement filters.

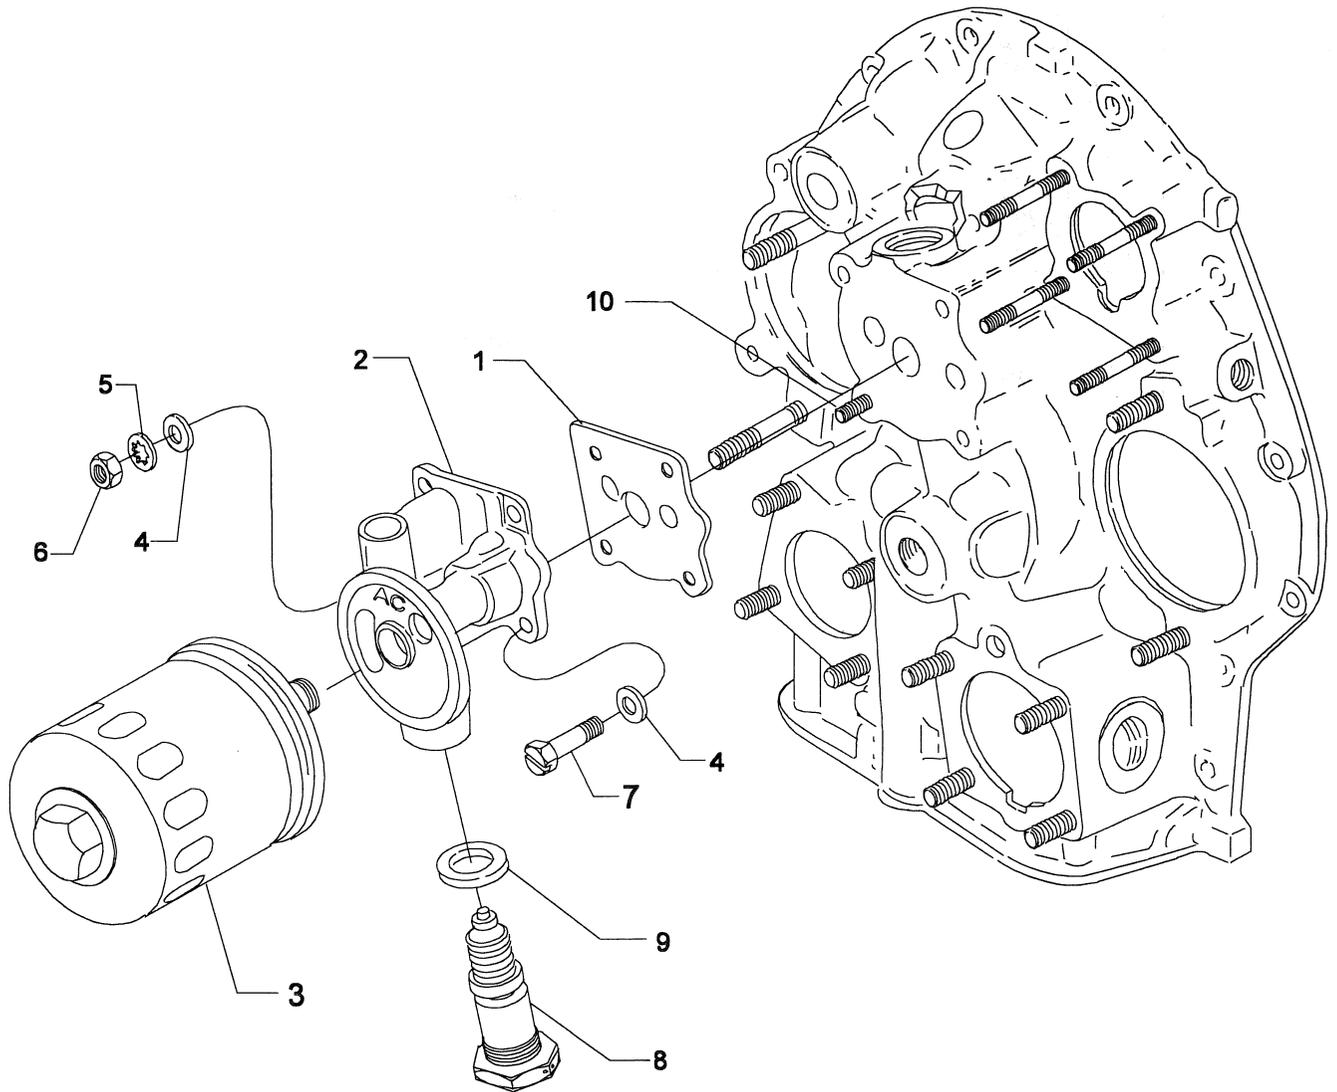


Figure 13. OIL FILTER ASSEMBLY AND OIL COOLER BYPASS VALVE

**CYLINDER, PISTON AND VALVE TRAIN  
CONNECTING RODS, PISTONS AND RING ASSEMBLIES**

FIG. REF. 14	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	LW-11750	CONNECTING ROD ASSEMBLY	6
2	LW-13923	BUSHING, Connecting rod, upper	6
3	75061	BOLT, Connecting rod	12
4	LW-12186	NUT, Connecting rod bolt	12
5	LW-13521	BEARING, Connecting rod	12
6	LW-12733	PISTON, Compression ratio, 8.00:1	6
7	LW-14077	PIN, Piston	6
8	LW-11775	PLUG, Piston pin	12
9	74241	RING, Piston, compression	12
10	14H21950	RING, Piston, oil regulating, expander type	6

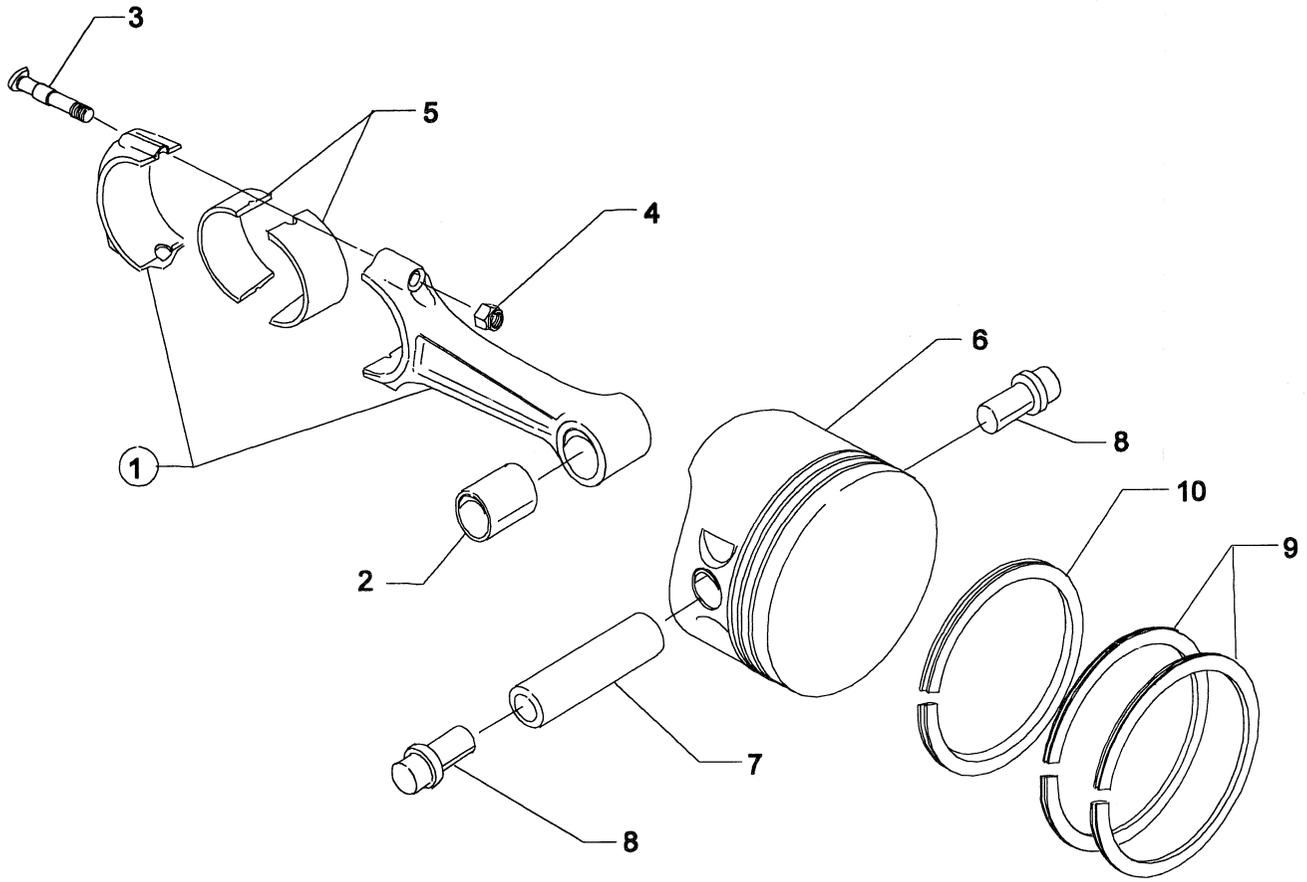


Figure 14. CONNECTING RODS, PISTONS AND RING ASSEMBLIES

### CYLINDER, PISTON AND VALVE TRAIN CYLINDER ASSEMBLY

FIG. REF. 15	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	16A22130	CYLINDER AND HEAD ASSY., Nitrided	6
2	72057	SEAT, Intake valve	6
3	72058	SEAT, Exhaust valve	6
4	61681*	GUIDE, Intake valve, flanged	6
5	16R22127*	GUIDE, Exhaust valve, flanged	6
6	69260	INSERT, Spark plug, 18-1.5 MM	12
7	STD-1353	INSERT, No. 10-24 Helicoil x 3/8 long	6
8	31C-12	STUD, 5/16-18 x 1-1/2 long	12
9	25C-8	STUD, 1/4-20 x 1.00 long	6
10	MS20823-6D	ELBOW, 45°, 3/8 flared tube	6
11	66610	BUSHING, Rocker shaft	24
12	1102	PLUG, 1/8-27 NPT, Allen head	6

\* Refer to the latest edition of

Lycoming Service Instruction No. 1256.

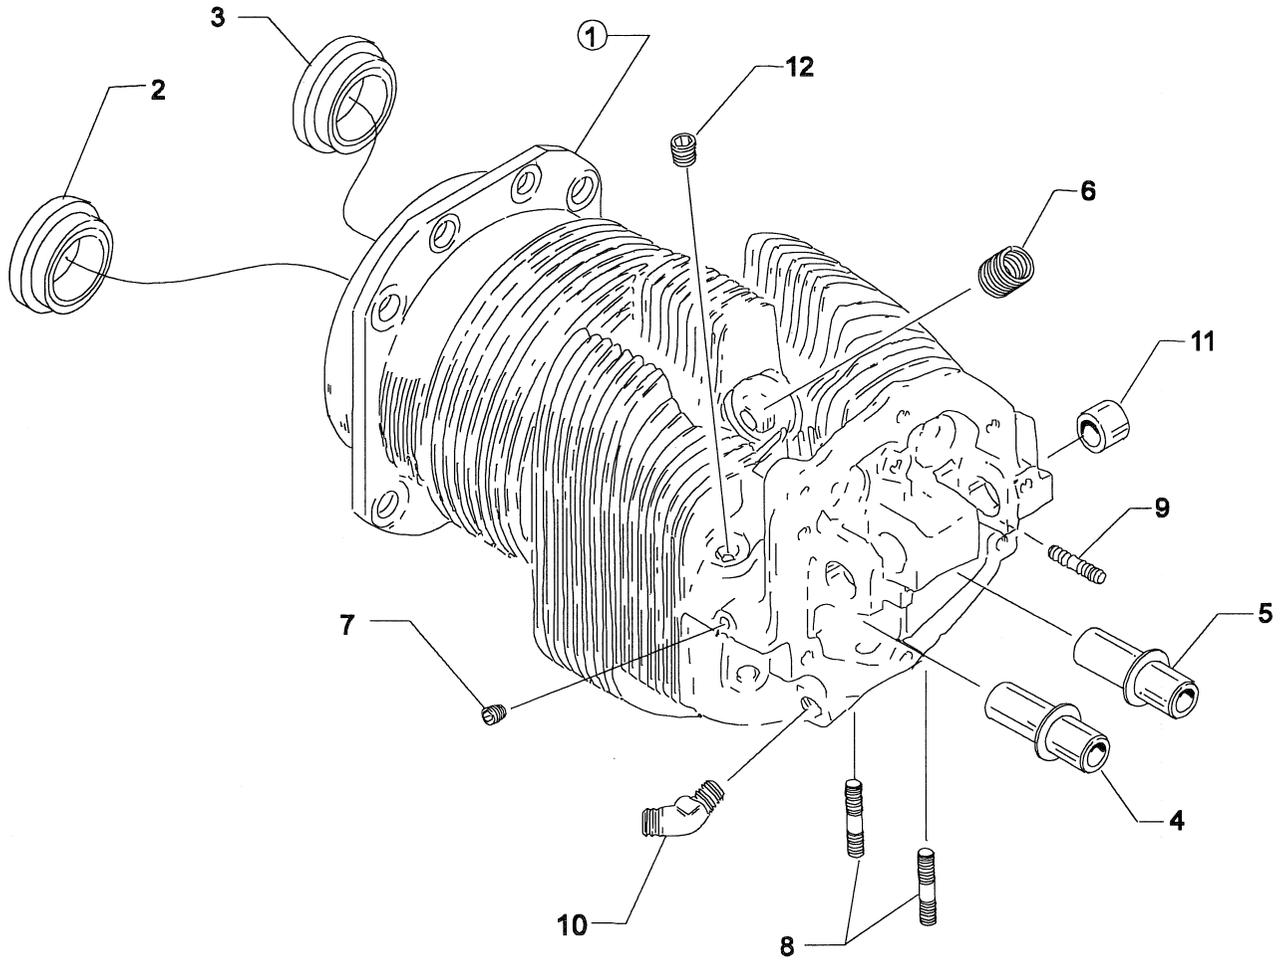


Figure 15. CYLINDER ASSEMBLY

### CYLINDER, PISTON AND VALVE TRAIN VALVE ASSEMBLY AND RELATED PARTS

FIG. REF. 16	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	73938	VALVE, Intake	6
2	LW-19001	VALVE, Exhaust (rotator type)	6
3	LW-11795	SPRING, Valve, inner	12
4	LW-11800	SPRING, Valve, outer	12
5	LW-10077	SEAT, Valve spring, upper intake	6
6	65441	SEAT, Valve spring, lower intake	6
7	LW-16475	SEAT, Valve spring, upper exhaust (rotator type)	6
8	LW-13323	SEAT, Valve spring, lower exhaust	6
9	60009	KEY, Valve intake	12
10	17C21191	KEY, Valve exhaust	12
11	17C19386	CAP, Valve stem, exhaust (rotator type)	6
12	78290	PLUNGER ASSY., Hydraulic tappet	12
13	15B21319	SOCKET, Hydraulic tappet	12
14	LW-11485	SHROUD TUBE ASSY., Push rod	12
15	LW-14995	SPRING, Shroud tube	6
16	LW-12272	LOCKPLATE, Shroud tube	6
17	STD-1411	NUT, 1/4-20 plain	6
18	LW-18661	SEAL, Shroud tube	12
19	70310	SEAL, Shroud tube	12
20	15F19957-34*	ROD ASSEMBLY, Push (A total of 3 required)	AR
	15F19957-35*	ROD ASSEMBLY, Push (A total of 3 required)	AR
	15F19957-36*	ROD ASSEMBLY, Push (A total of 3 required)	AR
	73437*	ROD ASSEMBLY, Push (A total of 3 required)	AR
21	17F19357**	ROCKER ASSY., Valve	12
22	74637	BUSHING, Valve rocker	12
23	LW-13790	SHAFT, Valve rocker	6
24	LW-12892	THRUST BUTTON, Rocker shaft	12

\* See latest edition of Lycoming Service Instruction No. 1060 for complete push rod application.

\*\* Due to the size of the area where the part number is stamped, the last five digits may be all that is shown (19357).

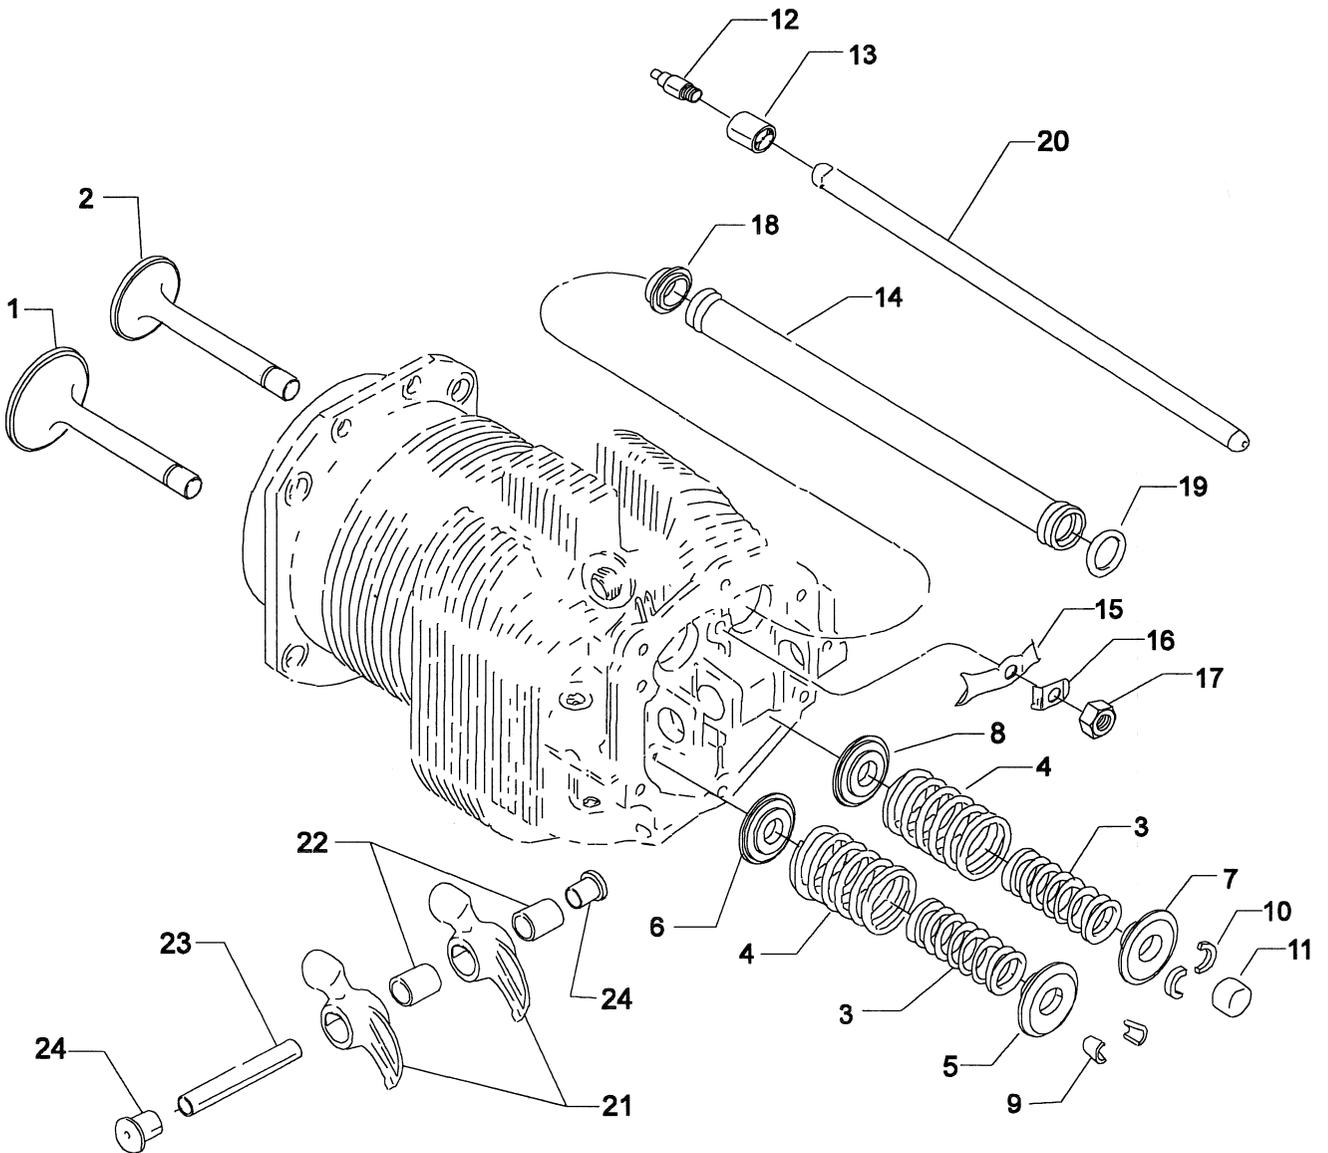


Figure 16. VALVE ASSEMBLY AND RELATED PARTS

**CYLINDER, PISTON AND VALVE TRAIN  
CYLINDER RELATED PARTS**

FIG. REF. 17	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	75906	GASKET, Rocker box cover	6
2	61247	COVER, Rocker box	6
3	STD-1925	SCREW, 1/4-20 x 5/8 long, pan. hd.	36
4	74494	PLATE, Spark plug reach caution	6
5	71481	RING, Oil seal, 3/32 dia. section x 4-27/32 I.D.	6
6	77906	SPACER, 33/64 I.D. x 7/8 O.D. x 1/8 thick	2
7	74887	SPACER, 33/64 I.D. x 7/8 O.D. x 3/8 thick	2
8	383-B	NUT, 3/8-24 plain	24
9	STD-2090	NUT, 1/2-20 plain	28
10	STD-684	NIPPLE, Straight, 3/8 I.D. hose	6
11	STD-1821	HOSE, 3/8 I.D. x 2-1/2 long	6
12	LW-15592-5-05	CLAMP, Hose	12
13	68759	TUBE ASSY., Cyl. head oil drain, cyl. no. 1	1
14	71737	TUBE ASSY., Cyl. head oil drain, cyl. no. 2	1
15	68761	TUBE ASSY., Cyl. head oil drain, cyls. no. 3,4,5,6	4
16	75339	BAFFLE ASSY., Intercylinder	4
17	71611	RETAINER, Intercylinder baffle	4
18	71610	HOOK, Intercylinder baffle	4

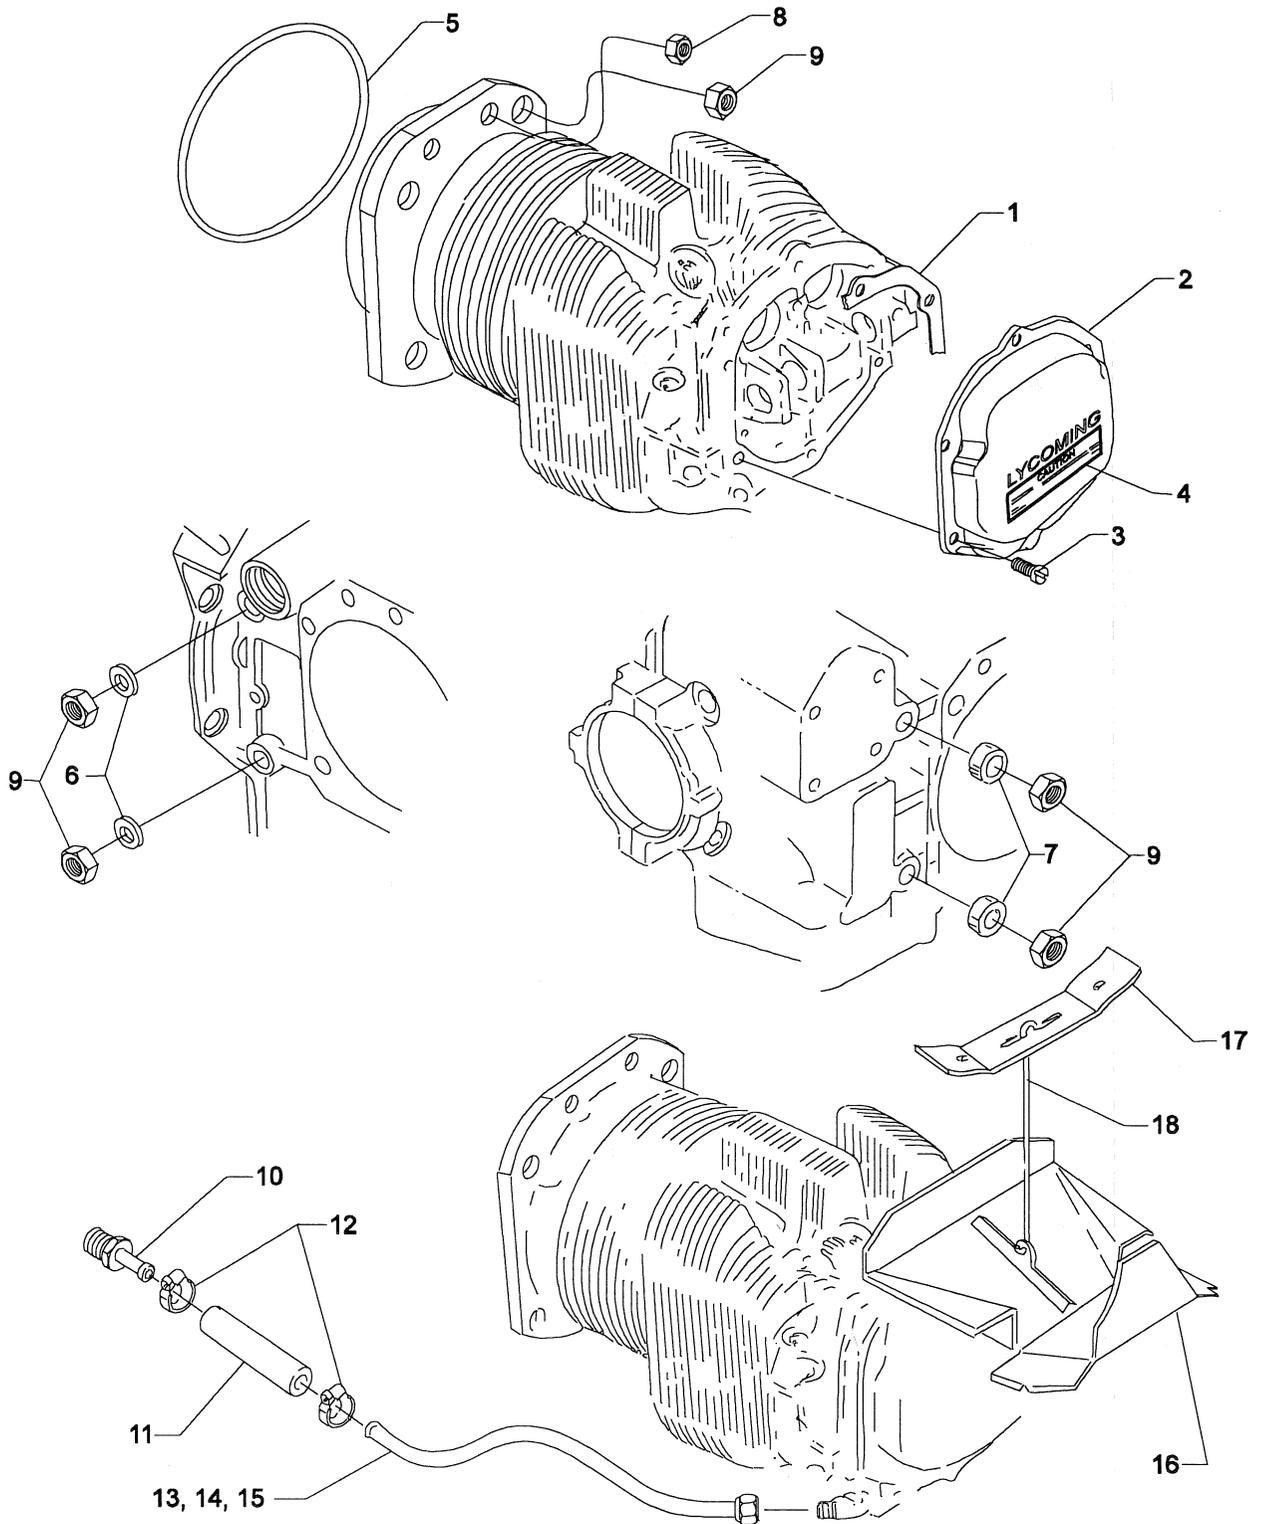


Figure 17. CYLINDER RELATED PARTS

## IGNITION SYSTEM

### PRESSURIZED MAGNETOS (SLICK), MAGNETO DRIVES, HARNESSSES AND SPARK PLUGS

FIG. REF. 18	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	73000	COUPLING, Magneto drive	1
2	LW-13641	CUSHION, Magneto drive	4
3	LW-19096	GEAR RETAINER ASSY.	2
4	67542	BEARING, Ball	2
5	62224	GASKET, Magneto adapter	1
6	LW-12707	ADAPTER, Magneto, right	1
7	LW-13926	ADAPTER, Magneto, left, impulse coupling	1
8	LW-12681	GASKET, Magneto	2
9	66LP-0SCNP	MAGNETO, Right, Slick Model No. 6360	1
10	66LC35SDNP	MAGNETO, Left, (Impulse), Slick Model No. 6361	1
11	67J20608-P	HARNESS ASSY., Right, Slick P/N M-2966	1
12	67J20609-P	HARNESS ASSY., Left, Slick P/N M-2965	1
13	66M21195	CLAMP, Magneto	4
14	STD-475	WASHER, 5/16 lock, internal teeth	4
15	STD-1410	NUT, 5/16-18 plain	4
16	STD-713	COTTER PIN, 3/32 dia. x 3/4 long	2
17	STD-2007	WASHER, 3/8 dia. seal	1
18	STD-33	WASHER, 3/8 plain	1
19	LW-13227	ADAPTER, Magneto pressurization	1
20	LW-13226	NUT, 3/8-16 NC, plain	1
21	AN826-4	TEE, 1/4 tube x 1/8 NPT	1
22	LW-12798-4S160	HOSE ASSY., Right magneto to tee	1
23	LW-12798-4S111	HOSE ASSY., Left magneto to tee	1
24	66N21020	VALVE ASSY., Relief	1
25	MS29512-04	"O" RING	1
26	MS20822-4	ELBOW, 1/4 tube to 1/8 NPT, 90°	2
27	1182-H7*	SPARK PLUG, Champion (RHB37E) or Auburn (273)	12
**	01P19762-4-17	BAG, Magneto harness attaching	1

\* Item No. 27 spark plugs are used in current production. See latest edition of Lycoming Service Instruction No. 1042 for complete listing of all approved spark plugs.

\*\* See Page 4-2 for a breakdown of individual parts contained in the magneto and harness attaching parts bag. These parts to be attached by customer per engine line drawing included in each bag.

P/N 01P19762-4-17

Part No.	Part Name	Qty.
LW-16266-25-25	CLIP, One wire	4
LW-14060	CLIP, Two wire	4
STD-8	WASHER, 1/4 plain	12
STD-160	WASHER, 1/4 lock,	10
STD-1874	SCREW, 1/4 lock (rocker box)	6
76734	ZIP STRAP	12
LW-16266-10-75	CLAMP	1
LW-16266-25-44	CLIP, Three wire	5
STD-696	WASHER, 1/4 thin	6
AN500-416-18	SCREW, 1/4 x 1-1/8 long	2
STD-1925	SCREW, 1/4 x 5/8 long	4
72815	BRACKET, Support clamp, 90°	4
STD-692	SCREW, No. 10-32 x 1/2 long	4
STD-425	WASHER, No. 10 plain	4
STD-670	LOCKNUT, No. 10-32	4
LW-M-2376	PLATE, Spark plug cable	2

### ATTACHING HARDWARE

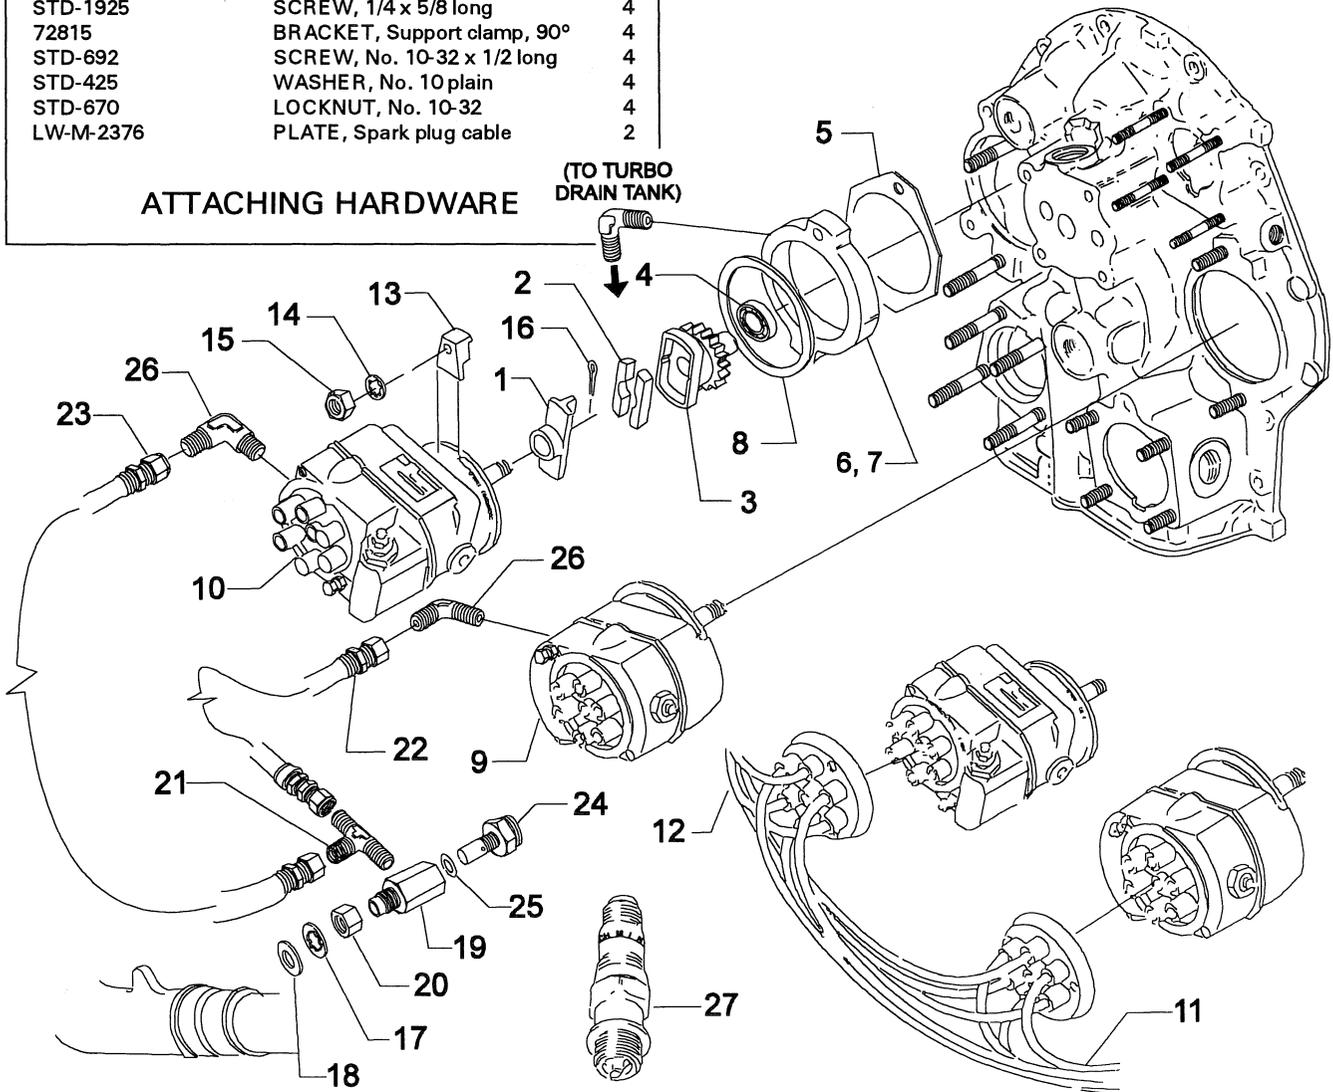


Figure 18. PRESSURIZED MAGNETOS (SLICK), MAGNETO DRIVES, HARNESSES AND SPARK PLUGS

## ELECTRICAL SYSTEM LIGHTWEIGHT STARTER AND ATTACHING PARTS

FIG. REF. 19	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	05K21302-2*	KIT, Lightweight starter, 24 volt, 12/14 pitch	1
2	LW-16152	SPACER, Starter/crankcase	1
3	05K21194**	KIT, Shim, lightweight starter	1
4	STD-35	WASHER, 5/16 plain	4
5	STD-475	WASHER, 5/16 lock, internal teeth	4
6	LW-31-1.16	BOLT, 5/16-18 x 1-5/32 long, hex. hd.	1
7	STD-1410	NUT, 5/16-18 plain	3

\* See latest edition of Lycoming Starter Maintenance Manual SSP-490 for complete parts breakdown.

\*\* See latest edition of Lycoming Service Instruction No. 1447 for shim application.

### NOTE

See latest edition of Lycoming Service Instruction No. 1154 for complete listing of FAA approved starters, generators, alternators, regulators and relays.

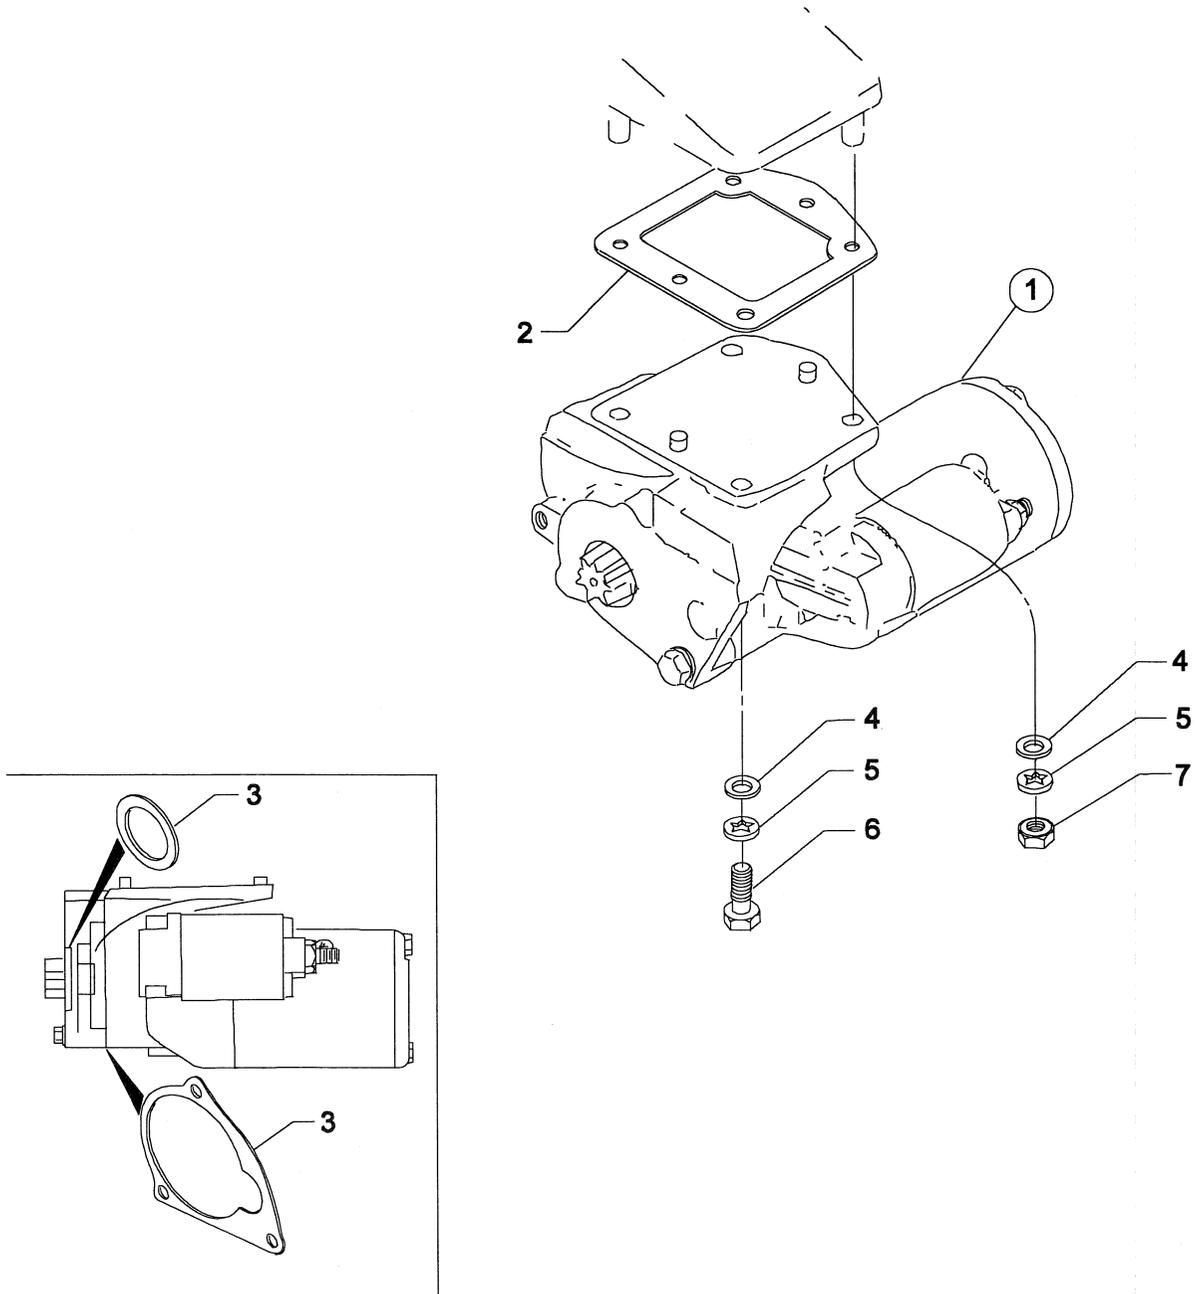


Figure 19. LIGHTWEIGHT STARTER AND ATTACHING PARTS

### ELECTRICAL COMPONENTS (DUAL) ALTERNATOR MOUNTING AND ATTACHING PARTS

FIG. REF. 20	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	07A22097	BRACKET, Alternator	1
2	07A22002	BRACKET, Alternator, Ford, right	1
3	07A22125	BRACKET, Alternator, aft	1
4	STD-35	WASHER, 5/16 plain	4
5	LW-31H2.13	BOLT, 5/16-18 x 2-1/8 long, hex. hd.	4
6	07F21998	LINK, Alternator, Ford, left	1
7	76534	SHIM, 1-1/8 O.D. x 13/32 I.D. x .005 thick	AR
8	STD-35	WASHER, 5/16 plain	1
9	LW-31H0.88	BOLT, 5/16-18 x 7/8 long, hex. hd.	1
10	STD-1342	WASHER, Plain, 7/8 O.D. x 25/64 I.D. x 1/8 thick	1
11	LW-38H1.09	BOLT, 3/8-18 x 1-3/32 hex. hd., dr. hd.	1
12	AN7-44	BOLT, 7/16-20 x 4-19/32 long, hex. hd., dr. end	1
13	STD-2092	WASHER, 29/64 I.D. x 7/8 O.D. x 1/8 thick	2
14	AN310-7	NUT, 7/16-20 slotted	1
15	LW-14650	SHIM, 7/8 O.D. x 15/32 I.D. x .005 thick	AR
16	STD-713	COTTER PIN, 3/32 dia. x 3/4 long	1
17	07A21292	BRACKET, Alternator (Dual)	1
18	STD-33	WASHER, 3/8 plain	2
19	STD-678	WASHER, 3/8 lock, internal teeth	2
20	383-B	NUT, 3/8-24 plain	2
21	STD-632	WASHER, 7/16 plain	1
22	AN7-46	BOLT, 7/16-20 x 4-27/32 long, hex. hd.	1
23	LW-14650	SHIM, 7/8 O.D. x 15/32 I.D. x .005 thick	AR
24	AN310-7	NUT, 7/16-20 slotted	1
25	STD-713	COTTER PIN, 3/32 dia. x 3/4 long	1
26	STD-669	WASHER, 33/64 I.D. x 1.00 O.D. x 1/8 thick	1
27	STD-2221	NUT, 1/2-20 self locking	1
28	36A19951	PULLEY & SHAFT ASSY., Idler	1
29	78614	PULLEY, Idler	1
30	78629	BALL BEARING, Alternator idler pulley	1
31	MS16625-1125	RING, Internal retaining	2
32	LW-19238	SHAFT, Alternator dual belt idler	1
33	LW-11635	SHIELD, Alternator idler bearing	1
34	76768	LOCKWASHER, Alternator idler pulley bearing	1
35	76769	LOCKNUT, Alternator idler pulley bearing	1
36	07F19875	LINK, Alternator, Ford, left	1
37	76534	SHIM, 1-1/8 O.D. x 13/32 I.D. x .005 thick	AR
38	AN6-13	BOLT, 3/8-24 x 1-29/64 long, hex. hd.	1
39	01L21504	SPACER, 13/32 I.D. x 7/8 O.D. x 31/64 long	1
40	STD-713	COTTER PIN, 3/32 dia. x 3/4 long	1
41	LW-38H1.31	BOLT, 3/8-16 x 1-5/16 long	1
42	STD-872	NUT, 3/8-24 slotted	1

NOTES: See latest edition of Lycoming Service Instruction No. 1154 for complete listing of FAA approved starters, generators, alternators, regulators, and relays.

**Dual Alternator Package, Kit P/N 05J22183 available.**

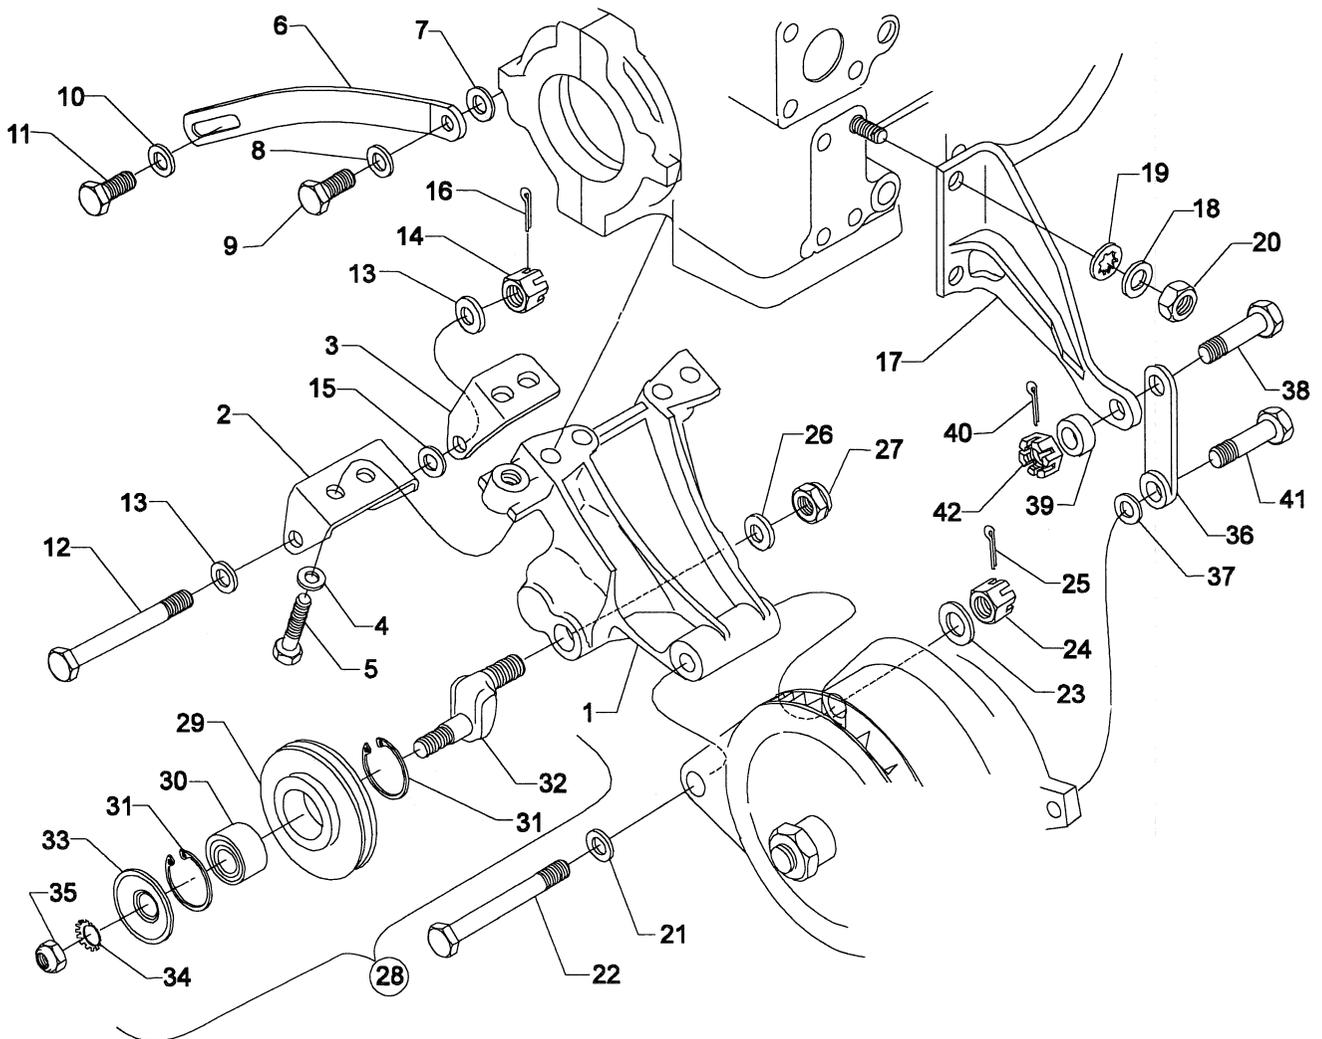


Figure 20. (DUAL) ALTERNATOR MOUNTING AND ATTACHING PARTS

**OIL SUMP AND INDUCTION SYSTEM  
OIL SUMP ASSEMBLY AND ATTACHMENTS**

FIG. REF. 21	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	06B21326	GASKET, Oil sump	1
2	56A22004	SUMP ASSY., Oil	1
3	71699	CONNECTION, Intake pipe	6
4	25C-11	STUD, 1/4-20 x 1-3/8 long	13
5	25C-16	STUD, 1/4-20 x 2.00 long	1
6	38-15	STUD, 3/8-16 x 1-7/8 long	8
7	31C-14	STUD, 5/16-18 x 1-3/4 long	4
8	STD-71	PLUG, 3/8-18 NPT, Socket head	1
9	1102	PLUG, 1/8 pipe	2
10	06E19769-1.63	GASKET, 1-7/8 O.D. x 1-5/8 I.D. x 3/32 annular	1
11	LW-18434	PLUG, Oil sump, 1-5/8 dia.	1
12	STD-1164	INSERT, 5/16-18 Helicoil x 5/8 long	1
13	STD-1171	INSERT, 3/8-16 Helicoil x 3/4 long	3
14	STD-8	WASHER, 1/8 plain	34
15	STD-160	WASHER, 1/4 lock, internal teeth	27
16	LW-25-1.13	BOLT, 1/4-20 x 1-1/8 long, hex. hd.	6
17	LW-25-1.00	BOLT, 1/4-20 x 1.00 long, hex. hd.	6
18	LW-25-1.63	BOLT, 1/4-20 x 1-5/8 long, hex. hd.	1
19	STD-1411	NUT, 1/4-20 plain	21
20	STD-551	PLUG, 1/2-14 NPT, Sq. hd., drilled	2
21	74655	SPACER, Exhaust manifold bracket	2
22	07H21150	BRACKET, Exhaust manifold cable retainer	1
23	LW-19191	BRACKET, Exhaust manifold cable	1
24	LW-13807	ADAPTER ASSY., Fuel drain valve	1
25	70484	SCREEN, Oil suction	1
26	06E19769-1.00	GASKET, 1.00 I.D. x 1-1/4 O.D. x 3/32 annular	1
27	LW-12545	PLUG, 5/8 hex. hd. x 1.00-20 thd.	1

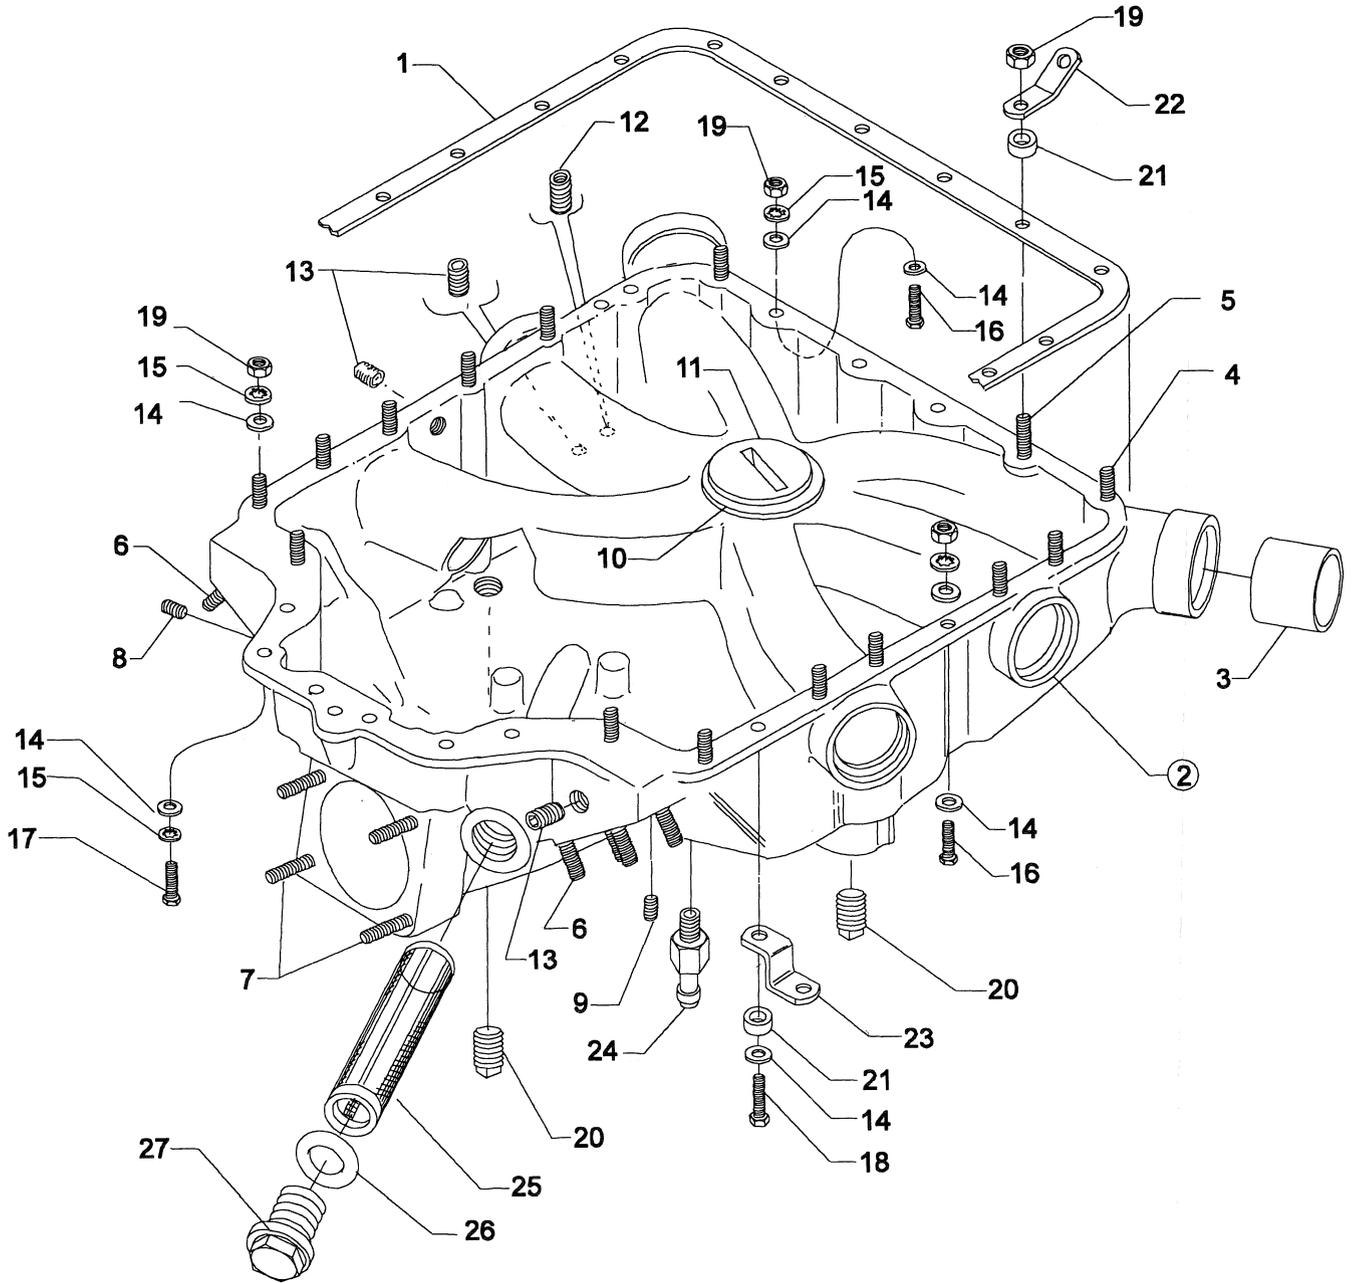


Figure 21. OIL SUMP ASSEMBLY AND ATTACHMENTS

**OIL SUMP AND INDUCTION SYSTEM  
FUEL INJECTOR, FUEL MANIFOLD AND INJECTION NOZZLES**

FIG. REF. 22	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	66224*	GASKET, Fuel injector	1
2	61J22120	FUEL INJECTOR (2576538-1)	1
3	STD-35	WASHER, 5/16 plain	4
4	STD-475	WASHER, 5/16 lock, internal teeth	4
5	STD-1410	NUT, 5/16-18 plain	4
6	LW-18854	NOZZLE ASSY., Manifold air bleed	6
7	951391	"O" RING (2 per assy.)	12
8	63B21127	MANIFOLD ASSY., Fuel	1
9	AN816-4	NIPPLE, 1/4 tube & 1/8 NPT	1
10	STD-148	NIPPLE, Union, 1/8 NPT	6
11	02G21382	NIPPLE, Nozzle pressure gauge	1
12	73966	SPACER, Fuel manifold bracket	2
13	73965	BRACKET, Fuel manifold	2
14	STD-82	SCREW, No. 10-24 x 1/2 long, fill. hd.	4
15	STD-251	WASHER, No. 10, internal lock	4
16	LW-12098-0-210	TUBE ASSY., Fuel manifold to nozzle, cyls. 1,2,5,6	4
17	LW-12098-0-170	TUBE ASSY., Fuel manifold to nozzle, cyls. 3 & 4	2
18	LW-16266-10-75	CLAMP	12
19	LW-16266-10-13	CLAMP	12
20	STD-860	SCREW, No. 10-32 x 5/8 long, fill. hd.	14
21	STD-425	WASHER, No. 10 plain	2
22	STD-670	LOCKNUT, No. 10-32	14
23	73136	BRACKET, 90°	2
24	LW-12798-4S340	HOSE ASSY., Fuel injector to fuel manifold	1
25	73136	BRACKET, Fuel injector to fuel manifold hose support	1
26	LW-16266-10-63	CLAMP (attach to bracket)	1
27	STD-860	SCREW, No. 10-32 x 5/8 long, fill. hd.	1
28	STD-670	LOCKNUT, No. 10-32	1

\* Gasket is shipped loose; P/N 08C21936 cover plate is installed after engine test before engine is preserved.

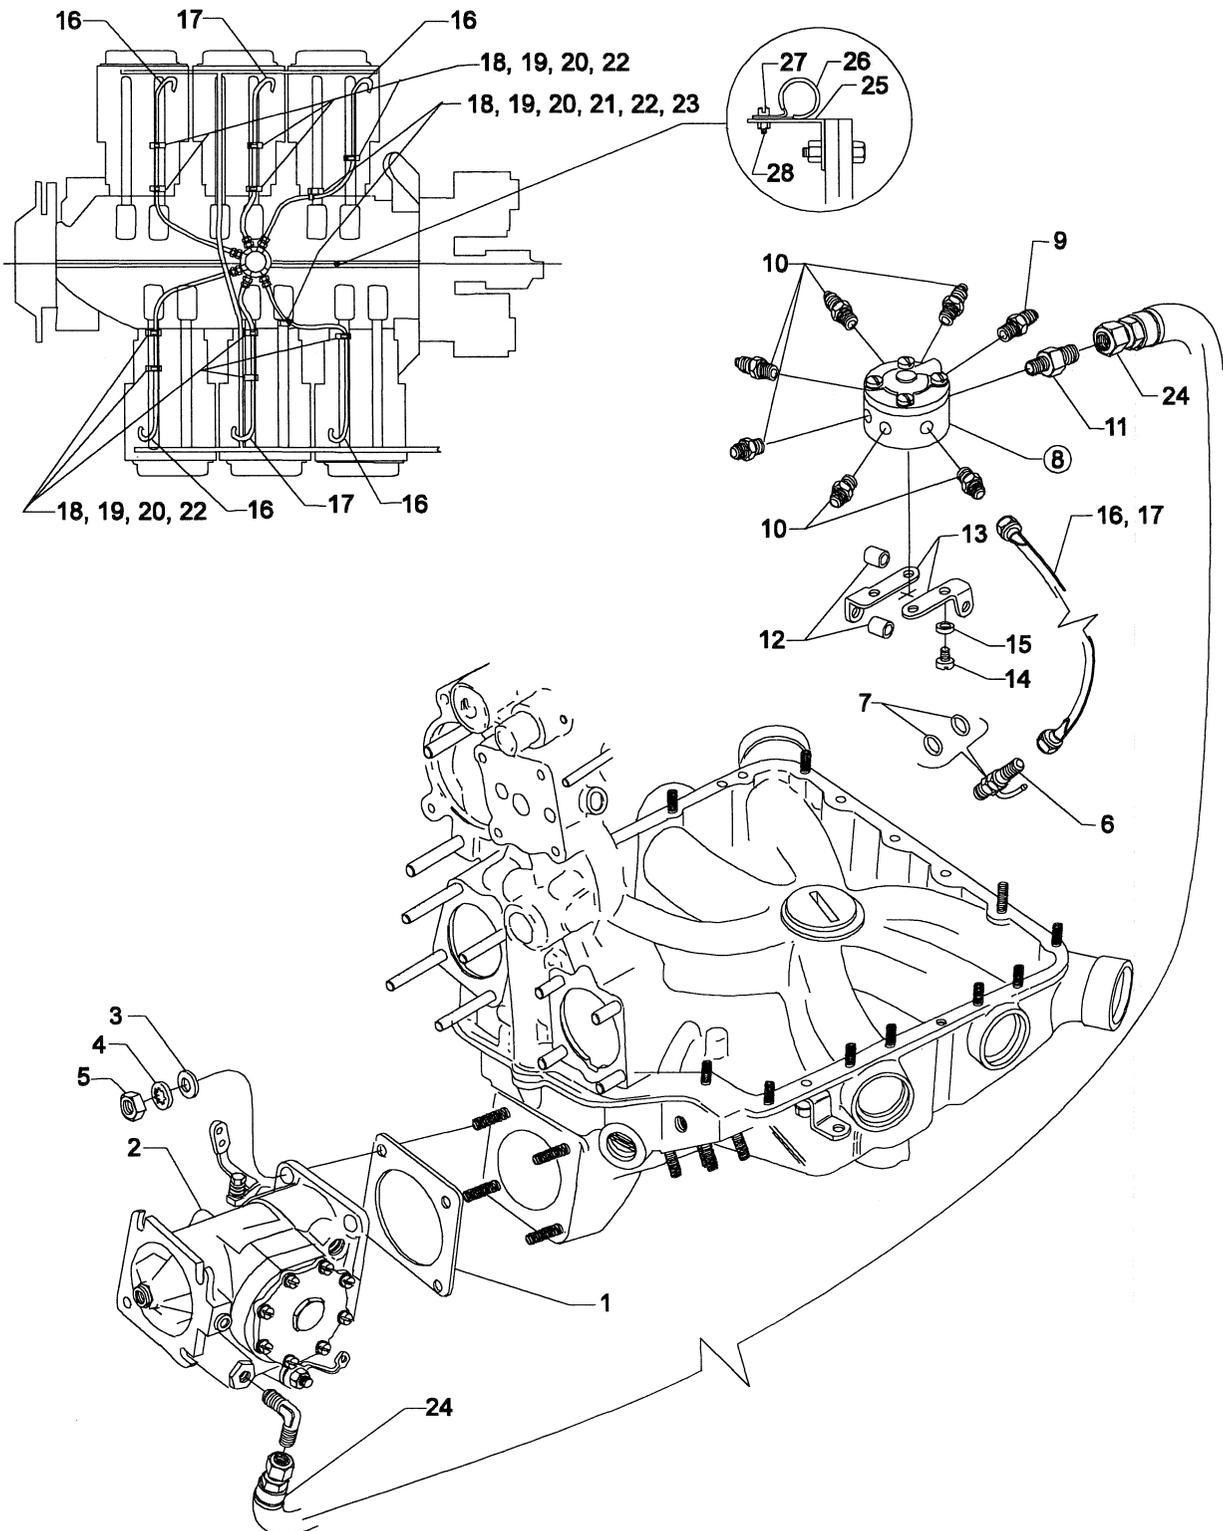


Figure 22. FUEL INJECTOR, FUEL MANIFOLD AND INJECTION NOZZLES

**OIL SUMP AND INDUCTION SYSTEM  
INTAKE PIPES, HEAT SHIELDS AND AIR INLET DUCT**

FIG. REF. 23	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	70485	PIPE, Intake	6
2	69603	HOSE, 1-3/4 I.D. x 2-3/16 O.D. x 1-3/4 long	6
3	LW-15592-8-28	CLAMP, Hose	12
4	71973	GASKET, 2 bolt flange, 1-3/4 I.D.	6
5	73346	FLANGE, Intake pipe, upper	6
6	STD-8	WASHER, 1/4 plain	12
7	STD-160	WASHER, 1/4 lock, internal teeth	12
8	LW-25-1.25	BOLT, 1/4-20 x 1-1/4 long, hex. hd.	12
9	78366	HEAT SHIELD, Intake pipes (Nos. 1,2,3,4 & 5)	5
10	40J21989	HEAT SHIELD, Intake pipe (No. 6)	1
11	LW-15592-8-24	CLAMP, Hose, 1-13/16 dia. x 9/16 wide	12
12	77504	GASKET, Air inlet	1
13	41A21968	DUCT, Air inlet	1
14	STD-8	WASHER, 1/4 plain	4
15	STD-160	WASHER, 1/4 lock, internal teeth	4
16	LW-25-1.00	BOLT, 1/4-20 x 1.00 long, hex. hd.	4
17	02P21973	TUBE, Air inlet, rear	1
18	02P21972	TUBE, Air inlet, front	1
19	LW-15490	HOSE, 2-1/4 I.D. x 2-5/8 O.D. x 2-3/8 long	1
20	LW-14246	HOSE, 2-1/2 to 2-1/4 I.D. x 3.00 long	2
21	LW-15592-8-36	CLAMP, Hose	4
22	LW-15592-8-40	CLAMP, Hose	2
23	07E21978	SUPPORT, Air inlet tube, front	1
24	07C21979	CLAMP, 2-1/4 I.D. x 5/8 wide	2
25	LW-19189	CABLE, Retainer	1
26	STD-1411	NUT, 1/4-20 plain	2
27	LW-25SS-0.63	BOLT, 1/4-20 x 5/8 long, hex. hd.	2
28	STD-2044	NUT, 1/4-20 self-locking	2
29	STD-475	WASHER, 5/16 lock, internal teeth	1
30	LW-31-1.25	BOLT, 5/16-18 x 1-1/4 long, hex. hd.	1

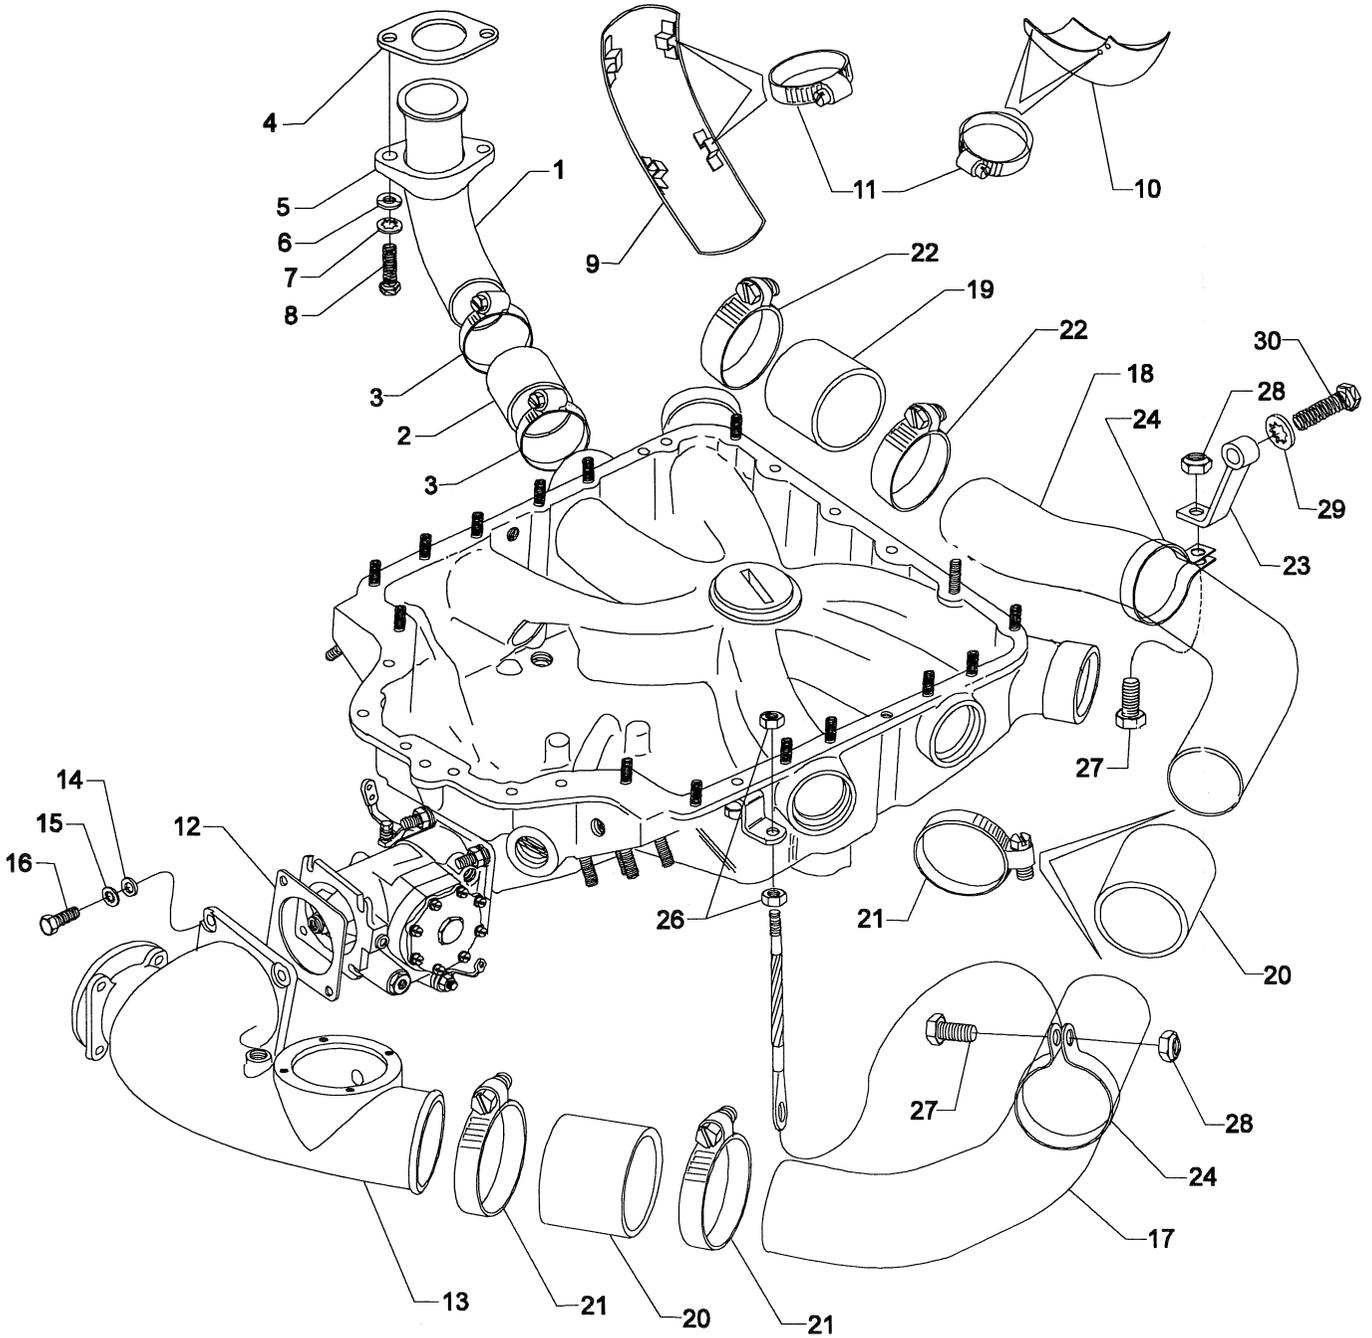


Figure 23. INTAKE PIPES, HEAT SHIELDS AND AIR INLET DUCT

## OIL SUMP AND INDUCTION SYSTEM INJECTOR NOZZLE VENT MANIFOLDS, HOSES AND ATTACHMENTS

FIG. REF. 24	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	63E21054	MANIFOLD, Right, injection nozzle vent	1
2	63E21046	MANIFOLD, Left, injection nozzle vent	1
3	LW-18737	HOSE, 3/16 I.D. x 7/16 O.D. x 2.00 long	6
4	LW-15592-5-04	CLAMP, 7/16 O.D. hose	12
5	78127	TUBE, Crossover, injection nozzle vent manifold	1
6	STD-2048	HOSE, 1/4 I.D. x 19/32 O.D. x 2-7/16 long	2
7	LW-15592-5-04	CLAMP, 7/16 O.D. hose	4
8	LW-16266-10-25	CLIP, 1/4 I.D. for No. 10 screw	4
9	73152	BRACKET, Support clamp	4
10	STD-1856	SCREW, 1/4-20 x 1.00 long, hex. hd.	4
11	STD-1685	NUT, 1/4-20 self-locking	4
12	LW-16266-25-25	CLIP, One wire	2
13	78753	BRACKET, Injector nozzle vent crossover	1
14	STD-692	SCREW, No. 10-32 x 1/2 long, rd. hd.	5
15	STD-425	WASHER, No. 10 plain	5
16	STD-670	LOCKNUT, No. 10-32.	5
17	STD-1339	PLUG, 1/16-27 NPT	3
18	AN821-4	ELBOW, 1/4 flared tube, 90°	1
19	LW-12798-4S172	HOSE ASSY., Left side	1
20	MS20822-4	ELBOW, 1/4 tube & 1/8 NPT, 90°	1
21	LW-12798-4S111	HOSE ASSY., Right side	1

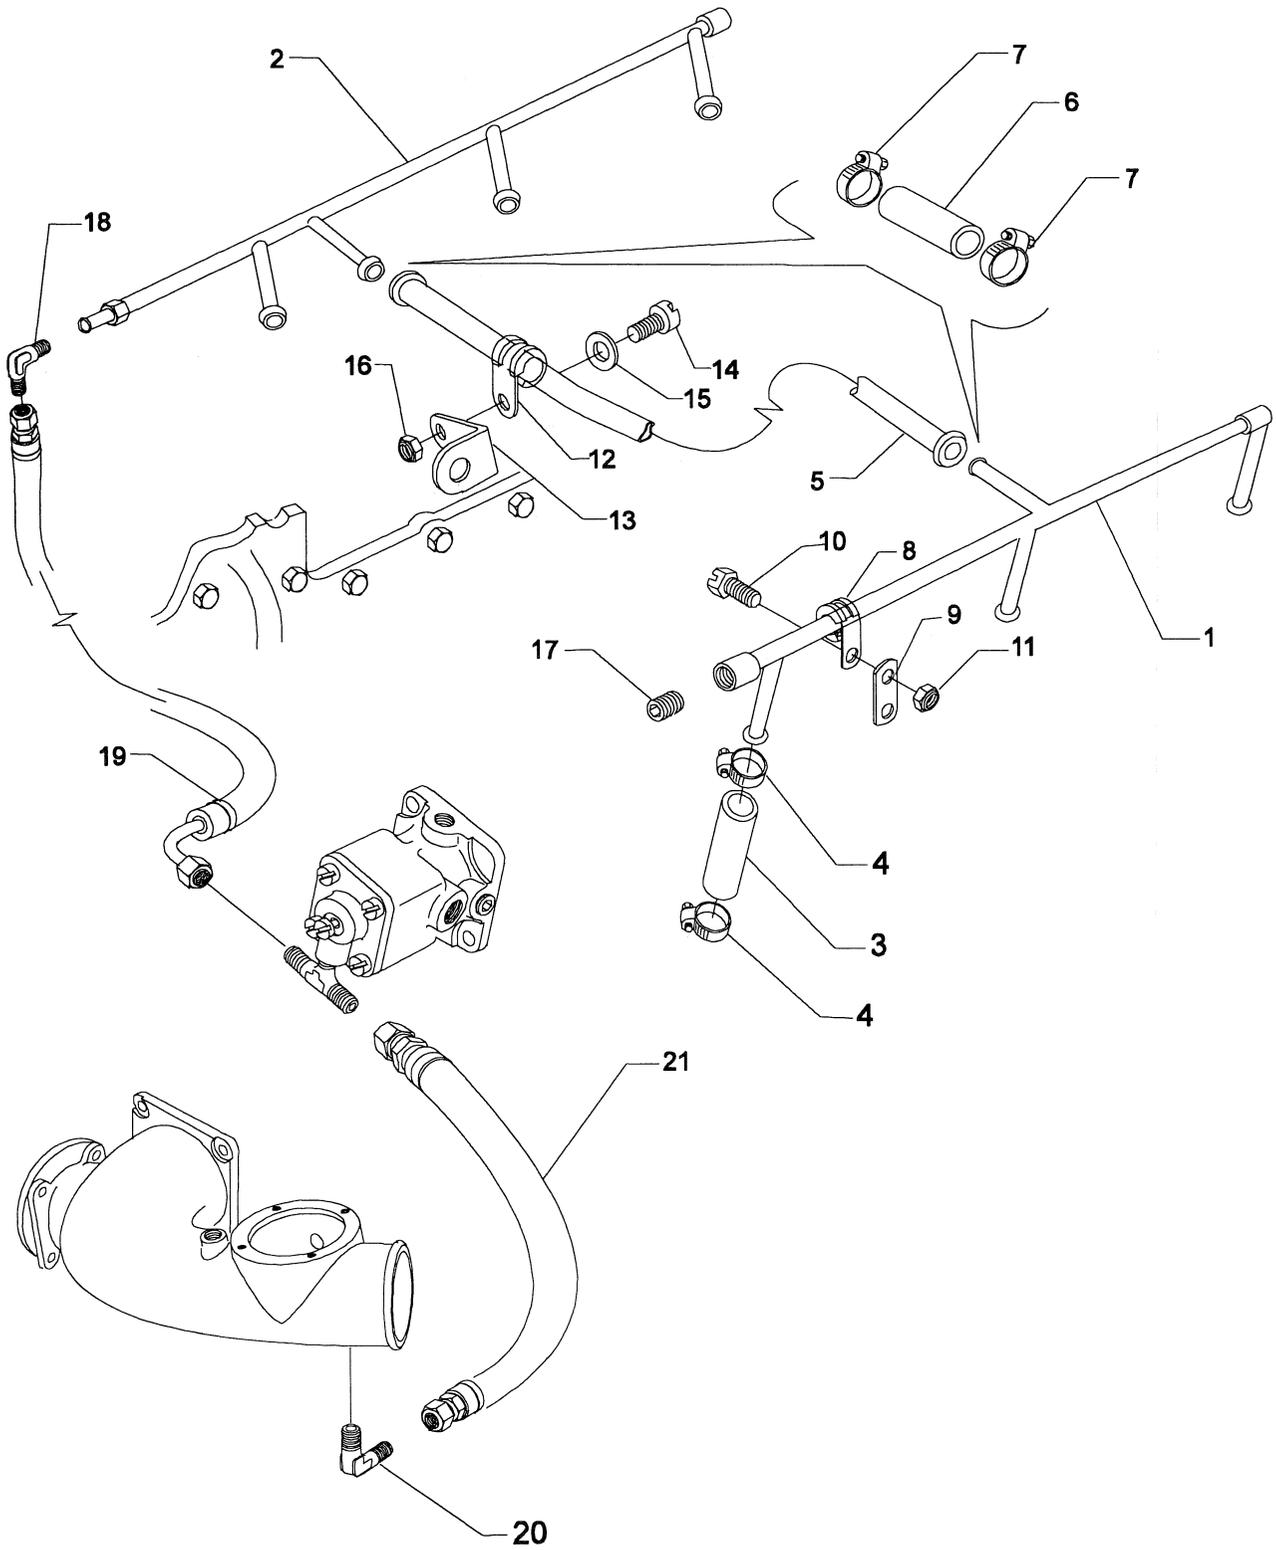


Figure 24. INJECTOR NOZZLE VENT MANIFOLDS, HOSES AND ATTACHMENTS

**TURBOCHARGER AND EXHAUST SYSTEMS  
EXHAUST PIPES AND TRANSITION ASSEMBLY**

FIG. REF. 25	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	77611	GASKET, Exhaust flange	6
2	LW-12728	ADAPTER, Exhaust pipe	1
3	40B19822	PIPE, Exhaust, cyls. nos. 1 & 3	1
4	40B19825	PIPE, Exhaust, cyl. no. 5	1
5	40B21964	PIPE, Exhaust, cyl. no. 2 & crossover	1
6	40G21969	ADAPTER, Exhaust pipe, cyls. nos. 4 & 6	2
7	40B21967	PIPE, Exhaust, cyls. nos. 4 & 6	2
8	40C19819	FLANGE, V-band coupling, 2.00 tube	1
9	78084	GASKET, V-band coupling, 2.00 tube	1
10	LW-12093-5	COUPLING, V-band	1
11	STD-2233	LOCKNUT, 5/16-18 hex.	12
12	AN960C516	WASHER, 5/16 plain	12
13	47C21963	TRANSITION, Exhaust	1
14	LW-19189	CABLE, Exhaust manifold retainer	1
15	STD-1411	NUT, 1/4-20 plain	2
16	LW-25SS-0.63	BOLT, 1/4-20 x 5/8 long, hex. hd.	1
17	STD-2044	NUT, 1/4-20 self-locking	1
18	LW-14525	CLAMP, Exhaust pipe	1

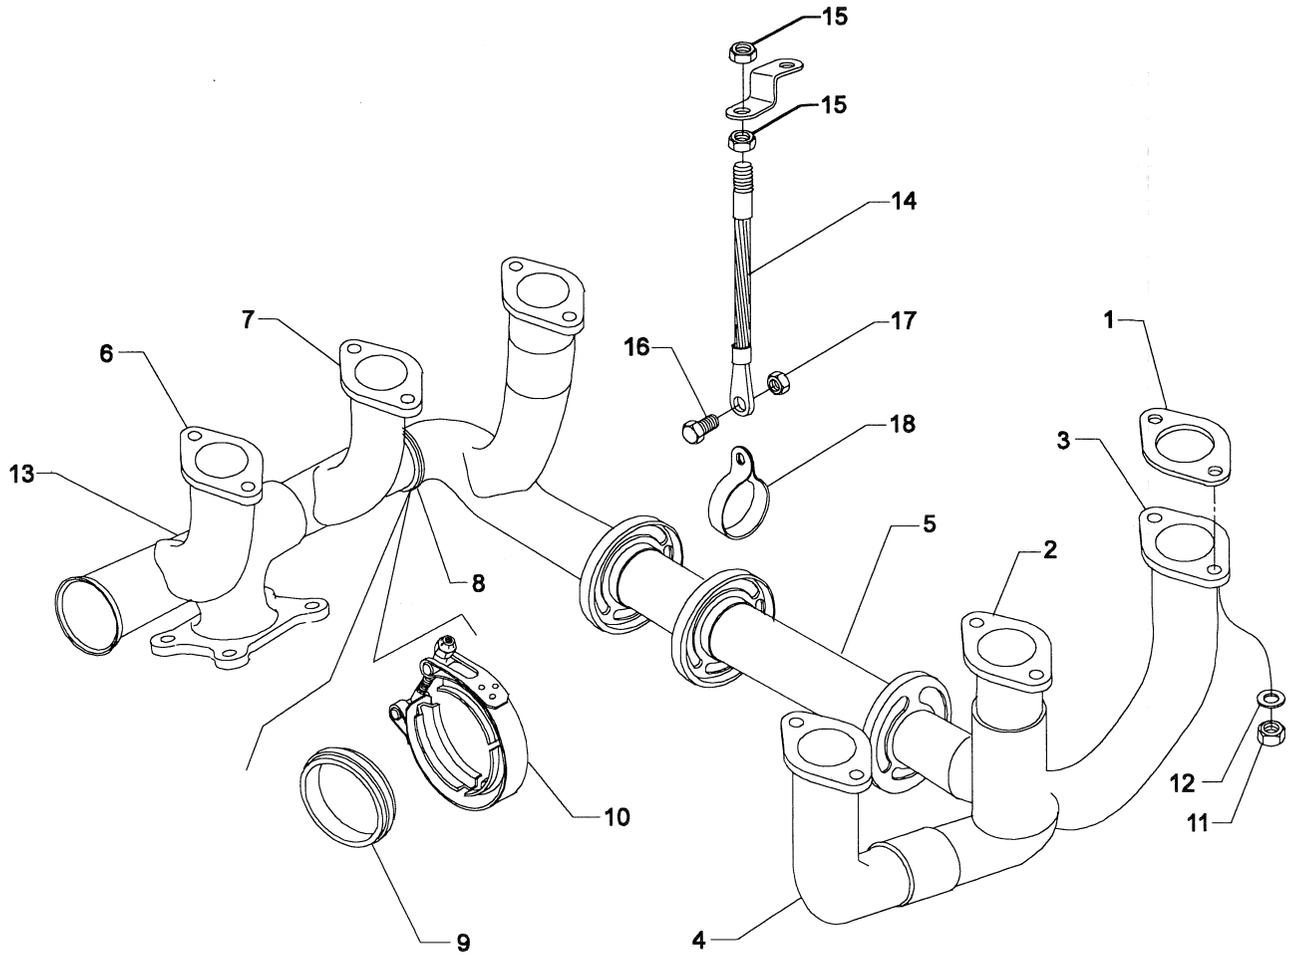


Figure 25. EXHAUST PIPES AND TRANSITION ASSEMBLY

**TURBOCHARGER AND EXHAUST SYSTEMS  
TURBOCHARGER, SUPPORT AND ATTACHING PARTS**

FIG. REF. 26	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	07A21962	BRACKET, Turbocharger mounting	1
2	STD-678	WASHER, 3/8 lock, internal teeth	2
3	LW-38-2.94	BOLT, 3/8-16 x 2-15/16 long, hex. hd.	2
4	07F21995	STRUT, Turbo mounting	1
5	STD-2032	WASHER, 3/4 O.D. x 25/64 I.D. x 3/32 thick	1
6	STD-678	WASHER, 3/8 lock, internal teeth	1
7	LW-38-1.13	BOLT, 3/8-16 x 1-1/8 long, hex. hd.	1
8	STD-475	WASHER, 5/16 lock, internal teeth	1
9	LW-31-1.69	BOLT, 5/16-18 x 1-11/16 long, hex. hd.	1
10	STD-1410	NUT, 5/16-18 plain	1
11	46C19836	TURBOCHARGER (TA0413) (466011-2)	1
12	AN960C616	WASHER, 3/8 plain	4
13	MS9321-12	WASHER, 3/8 I.D. x 3/4 O.D. x 5/64 thick	4
14	AN6C12A	BOLT, 3/8-24 UNF x 1-21/64 long	4
15	AN960C516	WASHER, 5/16 plain	2
16	STD-475	WASHER, 5/16 lock, internal teeth	2
17	LW-31SS-0.88	BOLT, 5/16-18 x 7/8 long, hex. hd.	2
18	MS20500-624	NUT, 3/8-24 UNF, self-locking	4
19	LW-18861	VALVE, Exhaust bypass	1
20	LW-12125-3	COUPLING, V-band, 2-1/4 O.D. tube	1
21	75845	GASKET, V-band coupling, 2-1/4 O.D. tube	1

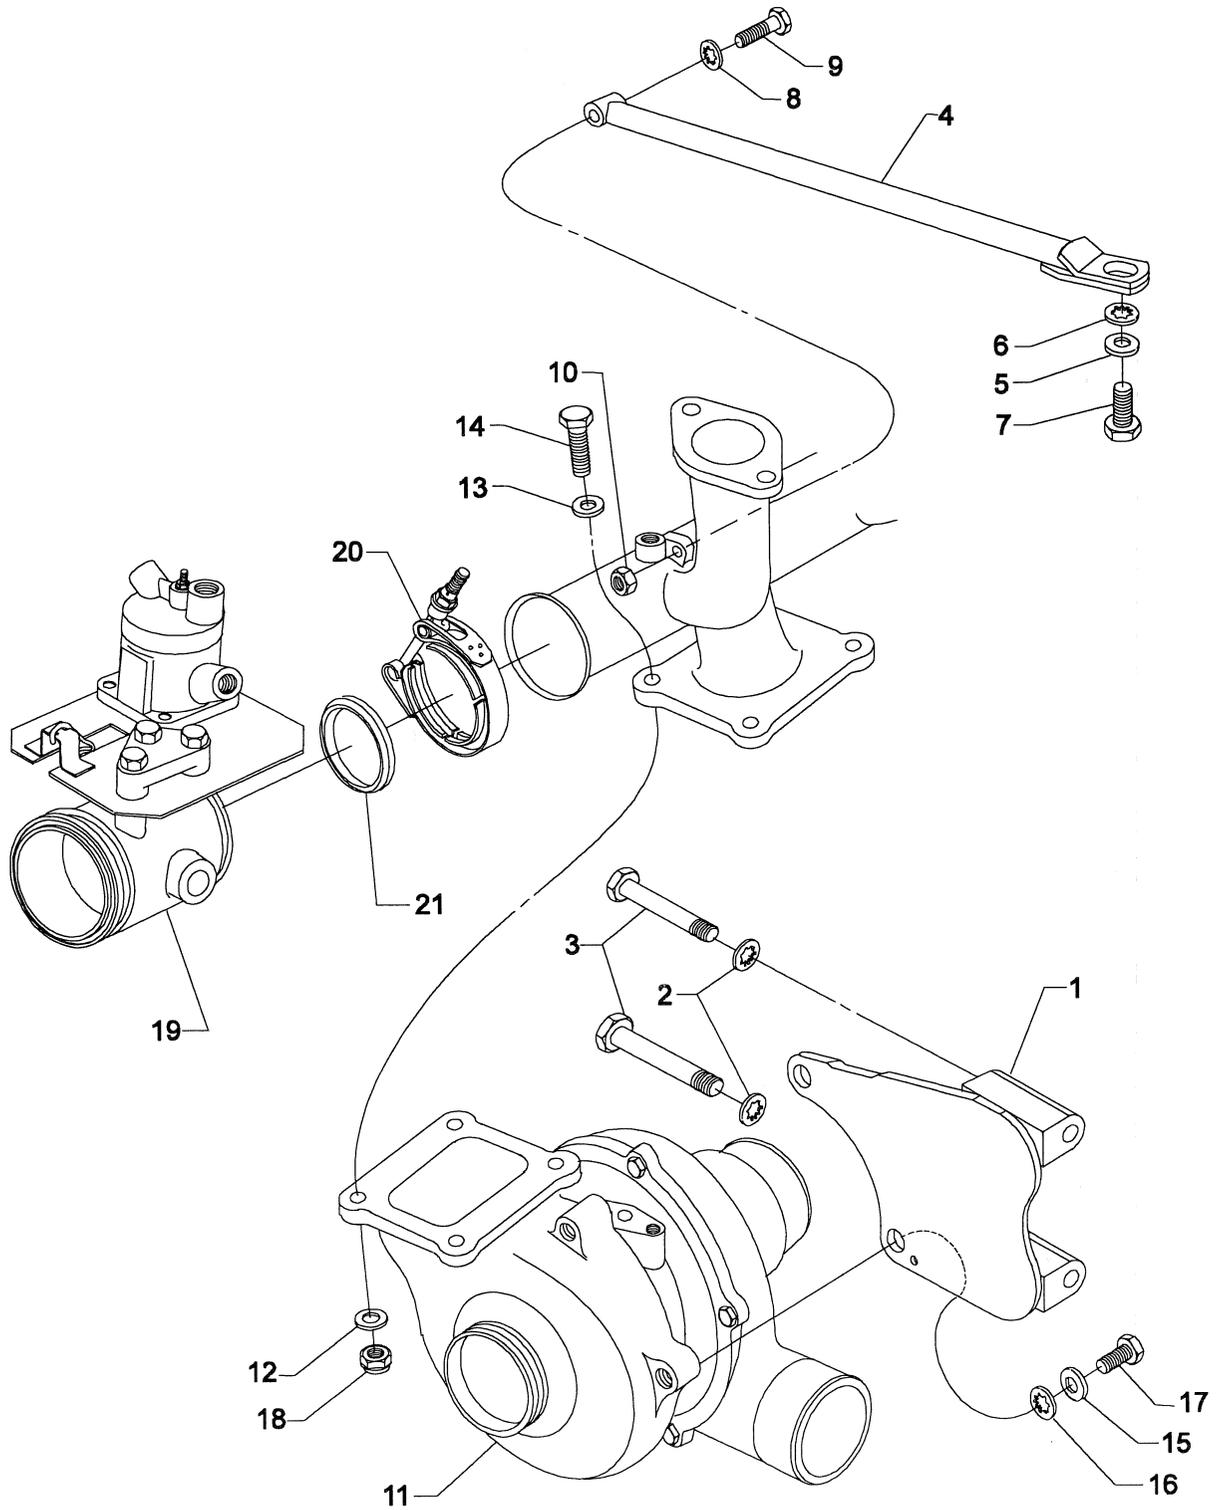


Figure 26. TURBOCHARGER, SUPPORT AND ATTACHING PARTS

## TURBOCHARGER AND EXHAUST SYSTEMS TURBO OIL DRAIN TANK AND RELATED PARTS

FIG. REF. 27	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	77813	GASKET, Turbo oil inlet adapter	1
2	LW-12287	ADAPTER, Turbo oil inlet	1
3	STD-35	WASHER, 5/16 plain	2
4	STD-475	WASHER, 5/16 lock, internal teeth	2
5	LW-31-0.94	BOLT, 5/16-18 x 15/16 long, hex. hd.	2
6	78212	CHECK VALVE ASSY.	1
7	LW-12878-4S373	HOSE ASSY., 1/4 hose, 45° elbow	1
8	LW-16266-25-63	CLAMP, 5/8 I.D. x 1/4 dia.	1
9	LW-18038	GASKET, Turbo oil drain adapter	1
10	58B21913	TANK, Turbo oil drain	1
11	STD-33	WASHER, 3/8 plain	2
12	STD-678	WASHER, 3/8 lock, internal teeth	2
13	LW-38-0.75	BOLT, 3/8-16 x 3/4 long, hex. hd.	2
14	MS20822-8	ELBOW, 1/2 flared tube, 3/8 NPT	1
15	MS20822-4	ELBOW, 1/4 tube & 1/8 NPT, 90°	1
16	LW-10637	ELBOW, 1/2 tube, 3/4-16, 90°	1
17	MS29512-08	"O" RING, 41/64 I.D. x 5/64 section	1
18	LW-14848-8S360	HOSE ASSY., 1/2 hose, 90° elbow	1
19	MS20822-4	ELBOW, 1/4 tube & 1/8 NPT, 90°	1
20	LW-12798-4S274	HOSE ASSY., 1/4 hose, straight	1
21	07A21987	BRACKET, Turbo oil drain tank	1
22	STD-425	WASHER, No. 10 plain	2
23	STD-670	LOCKNUT, No. 10-32	1
24	STD-251	WASHER, No. 10, internal lock	1
25	STD-63	NUT, No. 10-32 plain	1
26	STD-860	SCREW, No. 10-32 x 5/8 long, fill. hd.	1
27	STD-692	SCREW, No. 10-32 x 1/2 long, rd. hd.	1
28	72376	ELBOW, 1/4 tube, 90°	1
29	MS29512-04	"O" RING	1

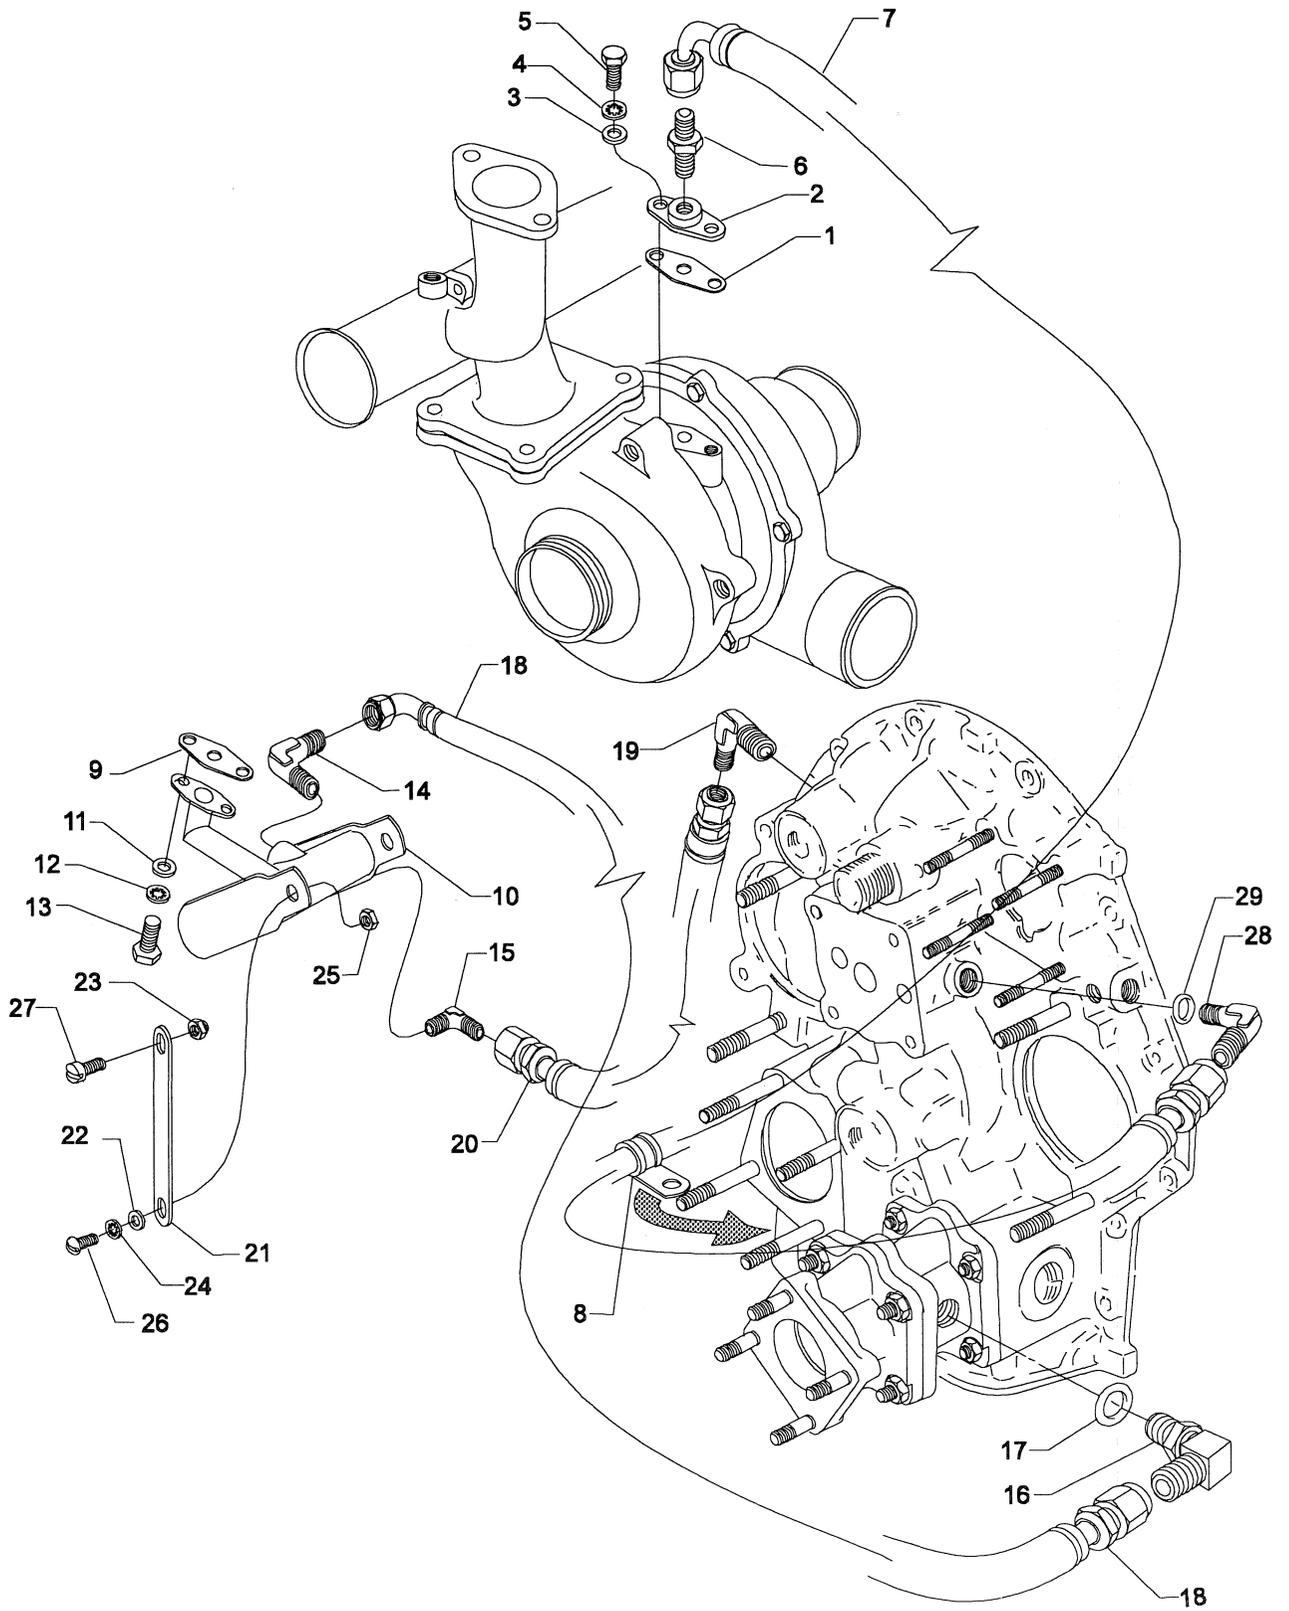


Figure 27. TURBO OIL DRAIN TANK AND RELATED PARTS

### TURBOCHARGER AND EXHAUST SYSTEMS TURBOCHARGER CONTROLLERS, WASTEGATE AND HOSES

FIG. REF. 28	PART NUMBER	DESCRIPTION	QTY. PER ASSY.
1	72376***	ELBOW, 1/4 tube, 90°	1
2	LW-12798-4S313	HOSE ASSY., 1/4 hose, straight	1
3	72377**	ELBOW, 3/8 flared tube, adj.	1
4	LW-12879-6S170	HOSE ASSY., 3/8 hose, 45° elbow	1
5	LW-15476**	TEE	1
6	LW-12877-6S110	HOSE ASSY., 3/8 hose, 90° elbow	1
7	77461**	TEE, 3/8 tube	1
8	72377**	ELBOW, 3/8 flared tube, adj.	1
9	AN893-12	BUSHING, Reducer, 3/4-16 to 9/16	1
10	MS29512-08	"O" RING, 41/64 I.D. x 5/64 section	1
11	72377**	ELBOW, 3/8 flared tube, adj.	1
12	LW-12877-6S142	HOSE ASSY., 3/8 hose, 90° elbow	1
13	LW-12879-6S120	HOSE ASSY., 3/8 hose, 45° elbow	1
14	AN912-9	BUSHING, Reducer, 3/4 NPT	1
15	AN816-6	NIPPLE, 3/8 flared tube x 1/4 NPT	1
16	AN816-4	NIPPLE, 1/4 tube & 1/8 NPT	1
17	STD-1932	BUSHING, 1/4 to 1/8 NPT	1
18	73143	ELBOW, 1/4 to 1/8 NPT, 90°	1
19	LW-12876-4S120	HOSE ASSY., 1/4 hose, 90° elbow	1
20	LW-16572***	NIPPLE, 1/4 tube to 7/16-20	1
21	LW-12798-4S130	HOSE ASSY., 1/4 hose, straight	1
22	AN814-4L	PLUG & BLEEDER, 7/16-20 UNF	1
23	MS29512-04	"O" RING, 23/64 I.D. x 5/64 section	1
24	LW-16561**	NIPPLE, 1/4 tube to 9/16-18	1
25	AN929-4*	CAP ASSY., 1/4 tube, pressure seal	1
26	73314	GASKET, Density & differential	2
27	LW-10682	CONTROLLER, Density	1
28	48B21935	CONTROLLER, Differential pressure	1
29	STD-28	WASHER, No. 10 plain	8
30	STD-1566	SCREW, No. 10-24 x 3/4 long, fill. hd.	8

\* Install on LW-16561 Nipple.

\*\* - Requires P/N MS29512-06 "O" Ring.

\*\*\* - Requires P/N MS29512-04 "O" Ring.

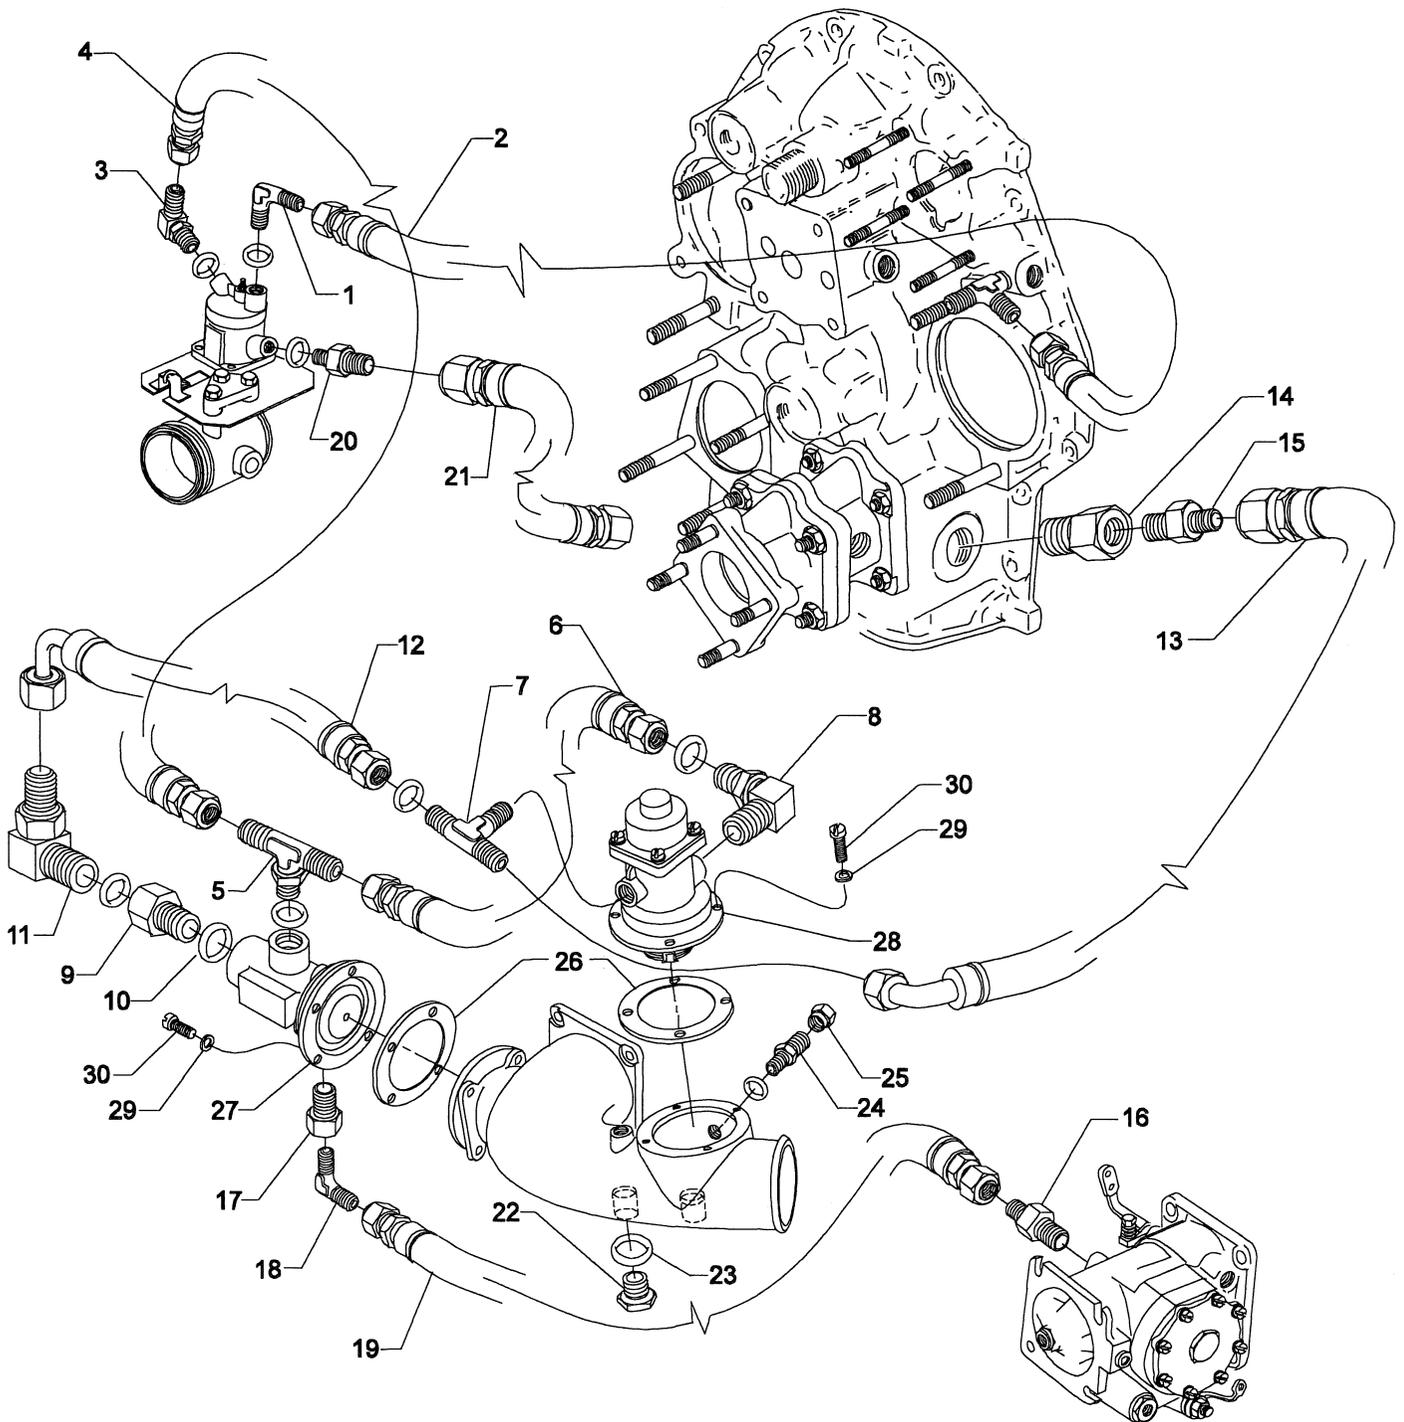


Figure 28. TURBOCHARGER CONTROLLERS, WASTEGATE AND HOSES

SERVICE KIT SECTION ..... SEAL AND GASKET KIT
---

Part No.	Part Name	Qty.
05K21173	SEAL AND GASKET SET	1
LW-12272	LOCKPLATE, Shroud tube	6
LW-12681	GASKET, Magneto	2
LW-12795	GASKET, Oil filter adapter	1
06B21326	GASKET, Oil sump	1
LW-13792	SEAL, Crankshaft oil	1
LW-14260	SEAL, Tachometer drive oil	1
LW-14995	SPRING, Shroud tube	6
LW-18038	GASKET, Turbo. oil drain adapter	1
LW-18638	LOCKPLATE, Crankshaft gear	1
LW-18661	SEAL, Shroud tube	12
MS9068-009	RING, Oil seal	1
STD-2231	RING, Internal retaining	1
MS29512-04	SEAL, "O" Ring	2
STD-213	SEAL, Fuel pump adapter	1
06A19956	SEAL, Vac. and hyd. pump adapter	1
8313	GASKET, Vacuum pump	2
61183	GASKET, Accessory adapter	1
62224	GASKET, Magneto adapter	1
66224	GASKET, Fuel injector	2
68315	GASKET, Accessory drive adapter	1
69164	GASKET, Fuel pump adapter	1
70310	SEAL, Shroud tube	12
70455	GASKET, Prop. drive plug	1
70457	GASKET, Oil filler adapter	1
71481	RING, Seal, cylinder base	6
71667	LOCKPLATE, Fuel idler gearshaft	1
71973	GASKET, Intake flange	6
72053	GASKET, Governor	1
72091	RING, Oil seal	2
73314	GASKET, Density controller	2
73818	GASKET, Accessory housing	1
74068	SEAL, Oil level gage	1
75845	GASKET, V-Band (2.25 tube)	1
75906	GASKET, Rocker box cover	6
77504	GASKET, Fuel injector	1
77611	GASKET, Exhaust flange	6
77813	GASKET, Turbo. oil inlet adapter	1
78084	GASKET, V-Band (2.00 tube)	1
06E 19769-0.63	GASKET, Oil cooler bypass	1
06E 19769-1.00	GASKET, Oil suction screen	1
06E 19769-1.25	GASKET, Oil pressure relief	1
06E 19769-1.63	GASKET, Oil sump plug	1
MS29512-08	SEAL, "O" Ring	2

**SERVICE KIT SECTION ..... CYLINDER, PISTON AND RING ASSY.**

Part No.	Part Name	Qty.
05K22025	KIT, CYLINDER, PISTON AND RING ASSY.	1
16A22023	CYLINDER ASSEMBLY	1
LW-19001	VALVE, Exhaust	1
73938	VALVE, Intake	1
LW-11800	SPRING, Valve, outer	2
LW-11795	SPRING, Valve, inner	2
LW-10077	SEAT, Valve spring, upper intake	1
LW-16475	SEAT, Valve spring, upper exhaust	1
17E22020	SEAT, Valve spring, lower exhaust	1
65441	SEAT, Valve spring, lower intake	1
60009	KEY, Valve, intake	2
17C21191	KEY, Valve, exhaust	2
17C19386	CAP, Valve stem, exhaust	1
LW-12733	PISTON (8.00:1 compression)	1
74241	RING, Piston, compression	2
14H21950	RING, Piston, oil regulating	1
LW-14077	PIN, Piston	1
60828	PLUG, Piston pin	2
LW-11775	PLUG, Piston pin	2
71481	RING, Cylinder base seal	1
70310	SEAL, Shroud tube	2
LW-18661	SEAL, Shroud tube	2
75906	GASKET, Rocker box cover	1
SSP-2472-1	TAG	1
SSP-2272	TAG	1
77611	GASKET, Exhaust flange	1
71973	GASKET, 2 bolt flange	1

### SERVICE KIT SECTION ..... CRANKCASE ASSY. AND THRU STUD KIT

Part No.	Part Name	Qty.
11E20003-S3-S	CRANKCASE ASSY. AND THRU STUD KIT	1
11E20003-S3*	CRANKCASE ASSEMBLY	1
76220	THRU STUD	8
31C-14	STUD, AN Governor	4
31C-16	STUD, Woodward Governor	4
STD-1339	PLUG	7
AN565B1032H4	SET SCREW	1
AN565B1032H5	SET SCREW	1
SSP-272	TAG, Piston cooling nozzles	1
SSP-582	TAG, Thin wall bearings	1
SSP-1576	TAG, Governor drive idler shaft	1
SSP-1769	TAG, Governor drive pad studs	1
1102	PLUG, 1/8 pipe, oil pressure	4

\* See Figure 1, Page 1-1 for component parts.

### NUMERICAL INDEX

PART NO.	PART NAME	PAGE NO.	PART NO.	PART NAME	PAGE NO.
AN310-7	Nut	5-3	LW-31-1.69	Bolt	7-3
AN565B1032H5	Set Screw	1-9	LW-31H0.88	Bolt	1-11
AN6-13	Bolt	5-3	LW-31H0.88	Bolt	5-3
AN6-34A	Bolt	1-13	LW-31H2.13	Bolt	5-3
AN6C12A	Bolt	7-3	LW-31SS-0.88	Bolt	7-3
AN7-44	Bolt	5-3	LW-38-0.75	Bolt	7-5
AN7-46	Bolt	5-3	LW-38-1.13	Bolt	7-3
AN814-4L	Plug & Bleeder	7-7	LW-38-2.94	Bolt	7-3
AN816-4	Nipple	6-3	LW-38H1.09	Bolt	5-3
AN816-4	Nipple	7-7	LW-38H1.31	Bolt	5-3
AN816-6	Nipple	2-5	LW-RF2.239-0.70	Ring	2-9
AN816-6	Nipple	7-7	LW-10077	Seat	3-5
AN821-4	Elbow	6-7	LW-10442	Gear	1-9
AN826-4	Tee	4-1	LW-10541	Gear Assy.	1-9
AN893-12	Bushing	7-7	LW-10637	Elbow	7-5
AN912-9	Bushing	7-7	LW-10682	Density	
AN929-4	Cap Assy.	7-7		Controller	7-7
AN932-6	Plug	2-1	LW-10799	Spacer	2-5
AN960C516	Washer	7-1	LW-11485	Shroud Tube Assy.	3-5
AN960C516	Washer	7-3	LW-11635	Shield	5-3
AN960C616	Washer	7-3	LW-11713	Spring	1-5
LW-25-0.63	Screw	1-11	LW-11750	Conn. Rod. Assy.	3-1
LW-25-0.94	Bolt	2-3	LW-11775	Plug	3-1
LW-25-1.00	Bolt	6-1	LW-11795	Spring	3-5
LW-25-1.00	Bolt	6-5	LW-11800	Spring	3-5
LW-25-1.13	Bolt	1-13	LW-11997	Seal	1-5
LW-25-1.13	Bolt	2-3	LW-12093-5	Coupling	7-1
LW-25-1.13	Bolt	6-1	LW-12098-0-170	Tube Assy.	6-3
LW-25-1.25	Bolt	6-5	LW-12098-0-210	Tube Assy.	6-3
LW-25-1.50	Bolt	1-13	LW-12125-3	Coupling	7-3
LW-25-1.50	Bolt	2-3	LW-12186	Nut	3-1
LW-25-1.63	Bolt	6-1	LW-12272	Lockplate	3-5
LW-25-1.75	Bolt	1-13	LW-12287	Adapter	7-5
LW-25-1.88	Bolt	1-13	LW-12545	Plug	6-1
LW-25-2.00	Bolt	1-13	LW-12681	Gasket	4-1
LW-25S1.50	Bolt	1-13	LW-12707	Adapter	4-1
LW-25SS-0.63	Bolt	6-5	LW-12728	Adapter	7-1
LW-25SS-0.63	Bolt	7-1	LW-12733	Piston	3-1
LW-31-0.94	Bolt	7-5	LW-12795	Gasket	2-11
LW-31-1.16	Bolt	5-1	LW-12798-4S111	Hose Assy.	4-1
LW-31-1.25	Bolt	6-5	LW-12798-4S111	Hose Assy.	6-7

### NUMERICAL INDEX (Continued)

PART NO.	PART NAME	PAGE NO.	PART NO.	PART NAME	PAGE NO.
LW-12798-4S130	Hose Assy.	7-7	LW-15592-8-24	Clamp	6-5
LW-12798-4S160	Hose Assy.	4-1	LW-15592-8-28	Clamp	6-5
LW-12798-4S172	Hose Assy.	6-7	LW-15592-8-36	Clamp	6-5
LW-12798-4S274	Hose Assy.	7-5	LW-15592-8-40	Clamp	6-5
LW-12798-4S313	Hose Assy.	7-7	LW-15853	Shaft	2-9
LW-12798-4S340	Hose Assy.	6-3	LW-16152	Spacer	5-1
LW-12876-4S120	Hose Assy.	7-7	LW-16266-10-13	Clamp	6-3
LW-12877-6S142	Hose Assy.	7-7	LW-16266-10-25	Clip	6-7
LW-12877-6S110	Hose Assy.	7-7	LW-16266-10-63	Clamp	6-3
LW-12878-4S373	Hose Assy.	7-5	LW-16266-10-75	Clamp	6-3
LW-12879-6S120	Hose Assy.	7-7	LW-16266-25-25	Clip	6-7
LW-12879-6S170	Hose Assy.	7-7	LW-16266-25-63	Clamp	7-5
LW-12892	Thrust Button	3-5	LW-16475	Seat	3-5
LW-13226	Nut	4-1	LW-16561	Nipple	7-7
LW-13227	Adapter	4-1	LW-16572	Nipple	7-7
LW-13323	Seat	3-5	LW-16711	Bearing	1-5
LW-13521	Bearing	3-1	LW-16783-14	Gage Assy.	1-3
LW-13641	Cushion	4-1	LW-18038	Gasket	7-5
LW-13790	Shaft	3-5	LW-18085	Spring	1-5
LW-13792	Seal	1-5	LW-18434	Plug	6-1
LW-13794	Stud	1-1	LW-18638	Lockplate	1-7
LW-13795	Shaft	1-11	LW-18661	Seal	3-5
LW-13807	Adapter Assy.	6-1	LW-18667	Pin	1-7
LW-13884	Bearing	1-5	LW-18696	Tee	2-1
LW-13896	Plug	1-9	LW-18737	Hose	6-7
LW-13923	Bushing	3-1	LW-18854	Nozzle Assy.	6-3
LW-13926	Adapter	4-1	LW-18861	Valve	7-3
LW-14021	Shaft	1-9	LW-19001	Valve	3-5
LW-14077	Pin	3-1	LW-19096	Gear Retainer Assy.	4-1
LW-14246	Hose	6-5	LW-19189	Retainer Cable	6-5
LW-14260	Seal	2-3	LW-19189	Retainer Cable	7-1
LW-14525	Clamp	7-1	LW-19191	Bracket	6-1
LW-14650	Shim	5-3	LW-19227	Counterweight Assy.	1-7
LW-14820	Ring	1-7	LW-19238	Shaft	5-3
LW-14848-8S360	Hose Assy.	7-5	LW-19340	Camshaft	
LW-14995	Spring	3-5		Assy.	1-7
LW-15476	Tee	7-7	MS16562-28	Pin	2-9
LW-15490	Hose	6-5	MS16625-1125	Ring	5-3
LW-15550	Gerator Pump	2-9	MS20500-624	Nut	7-3
LW-15592-5-04	Clamp	6-7	MS20822-4	Elbow	4-1
LW-15592-5-05	Clamp	3-7	MS20822-4	Elbow	6-7

## NUMERICAL INDEX (Continued)

PART NO.	PART NAME	PAGE NO.	PART NO.	PART NAME	PAGE NO.
MS20822-4	Elbow	7-5	STD-160	Washer	6-1
MS20822-8	Elbow	7-5	STD-160	Washer	6-5
MS20823-6D	Elbow	3-3	STD-213	Oil Seal	1-11
MS29512-04	"O" Ring	4-1	STD-251	Washer	6-3
MS29512-04	"O" Ring	7-5	STD-251	Washer	7-5
MS29512-04	"O" Ring	7-7	STD-425	Washer	6-3
MS29512-08	"O" Ring	7-5	STD-425	Washer	6-7
MS29512-08	"O" Ring	7-7	STD-425	Washer	7-5
MS9321-12	Washer	7-3	STD-475	Washer	1-9
STD-8	Washer	1-13	STD-475	Washer	2-5
STD-8	Washer	2-3	STD-475	Washer	2-9
STD-8	Washer	2-7	STD-475	Washer	4-1
STD-8	Washer	2-9	STD-475	Washer	5-1
STD-8	Washer	2-11	STD-475	Washer	6-3
STD-8	Washer	6-1	STD-475	Washer	6-5
STD-8	Washer	6-5	STD-475	Washer	7-3
STD-19	Dowel	1-9	STD-475	Washer	7-5
STD-28	Washer	7-7	STD-514	Dowel	1-1
STD-33	Washer	1-3	STD-551	Plug	6-1
STD-33	Washer	1-13	STD-557	Dowel	1-1
STD-33	Washer	4-1	STD-596	Nut	1-3
STD-33	Washer	5-3	STD-596	Nut	1-13
STD-33	Washer	7-5	STD-632	Washer	5-3
STD-35	Washer	1-9	STD-669	Washer	5-3
STD-35	Washer	2-3	STD-670	Locknut	6-3
STD-35	Washer	2-5	STD-670	Locknut	6-7
STD-35	Washer	2-9	STD-670	Locknut	7-5
STD-35	Washer	5-1	STD-678	Washer	1-3
STD-35	Washer	5-3	STD-678	Washer	1-13
STD-35	Washer	6-3	STD-678	Washer	5-3
STD-35	Washer	7-5	STD-678	Washer	7-3
STD-63	Nut	7-5	STD-678	Washer	7-5
STD-71	Plug	6-1	STD-684	Nipple	3-7
STD-82	Screw	6-3	STD-692	Screw	6-7
STD-95	Key	2-9	STD-692	Screw	7-5
STD-148	Nipple	6-3	STD-713	Cotter Pin	4-1
STD-160	Washer	1-13	STD-713	Cotter Pin	5-3
STD-160	Washer	2-3	STD-714	Pin	2-3
STD-160	Washer	2-7	STD-784	Plug	2-7
STD-160	Washer	2-9	STD-798	Dowel	1-9
STD-160	Washer	2-11	STD-860	Screw	6-3

### NUMERICAL INDEX (Continued)

PART NO.	PART NAME	PAGE NO.	PART NO.	PART NAME	PAGE NO.
STD-860	Screw	7-5	STD-2032	Washer	7-3
STD-872	Nut	1-13	STD-2044	Nut	6-5
STD-872	Nut	5-3	STD-2044	Nut	7-1
STD-1065	Dowel	1-7	STD-2048	Hose	6-7
STD-1164	Insert	6-1	STD-2090	Nut	3-7
STD-1171	Insert	6-1	STD-2092	Washer	5-3
STD-1211	Plug	1-7	STD-2168	Nut	1-11
STD-1339	Plug	1-1	STD-2209	Bolt	1-7
STD-1339	Plug	2-3	STD-2221	Nut	5-3
STD-1339	Plug	6-7	STD-2231	Ring	1-7
STD-1342	Washer	5-3	STD-2233	Locknut	7-1
STD-1353	Insert	3-3	25C-8	Stud	3-3
STD-1409	Nut	1-13	25C-10	Stud	2-11
STD-1410	Nut	1-9	25C-11	Stud	2-9
STD-1410	Nut	2-5	25C-11	Stud	6-1
STD-1410	Nut	2-9	25C-12	Stud	2-9
STD-1410	Nut	4-1	25C-16	Stud	6-1
STD-1410	Nut	5-1	25C-21	Stud	2-1
STD-1410	Nut	6-3	31C-12	Stud	1-1
STD-1410	Nut	7-3	31C-12	Stud	2-1
STD-1411	Nut	1-13	31C-12	Stud	3-3
STD-1411	Nut	2-7	31C-13	Stud	1-1
STD-1411	Nut	2-9	31C-14	Stud	6-1
STD-1411	Nut	2-11	31C-16	Stud	1-1
STD-1411	Nut	3-5	31C-19	Stud	2-1
STD-1411	Nut	6-1	31C-21	Stud	2-1
STD-1411	Nut	6-5	31CD-20	Stud	2-1
STD-1411	Nut	7-1	38-13	Stud	1-1
STD-1420	Nut	2-3	38-15	Stud	1-1
STD-1566	Screw	7-7	38-15	Stud	6-1
STD-1685	Nut	6-7	38-22	Stud	1-1
STD-1737	Ring	1-11	38D-17	Stud	1-1
STD-1774	Pin	1-11	50-15	Stud	1-1
STD-1774	Pin	2-7	383-B	Nut	3-7
STD-1774	Pin	2-9	383-B	Nut	5-3
STD-1821	Hose	3-7	1028-B	Ball	1-5
STD-1856	Screw	2-11	1102	Plug	1-1
STD-1856	Screw	6-7	1102	Plug	2-1
STD-1925	Screw	3-7	1102	Plug	3-3
STD-1932	Bushing	7-7	1102	Plug	6-1
STD-2007	Washer	4-1	1182-H7	Spark Plug	4-1

### NUMERICAL INDEX (Continued)

PART NO.	PART NAME	PAGE NO.	PART NO.	PART NAME	PAGE NO.
8313	Gasket	2-7	71610	Hook	3-7
8313	Gasket	2-9	71611	Retainer	3-7
60009	Key	3-5	71640	Plug	1-7
60329	Shaft	2-3	71651	Fitting	2-7
60430	Cover	2-7	71664	Gear Assy.	1-11
60430	Cover	2-9	71667	Lockplate	1-11
60803	Strap	1-13	71668	Gear Assy.	1-11
61084	Spring	1-5	71699	Connection	6-1
61183	Gasket	2-7	71737	Tube Assy.	3-7
61247	Cover	3-7	71903	Bushing	1-7
61297	Impeller	2-3	71907	Washer	1-7
61298	Impeller	2-3	71973	Gasket	6-5
61681	Guide, Intake		72053	Gasket	1-9
		3-3	72057	Seat	3-3
62224	Gasket	4-1	72058	Seat	3-3
62417	Plug	2-7	72091	Ring	1-5
62732	Cap	2-7	72155-S	Bushing	1-7
65441	Seat	3-5	72158	Bushing	1-1
66224	Gasket	6-3	72246	Shaft	1-11
66610	Bushing	3-3	72376	Elbow	7-7
67530	Bushing	1-11	72377	Elbow	7-7
67536	Adapter Assy.	2-7	72378	Cover	1-9
67542	Ball Bearing	4-1	72566	Gear	1-7
68315	Gasket	2-9	72797	Roller	1-7
68668	Spring	1-5	72877	Body	1-5
68759	Tube Assy.	3-7	72962	Thrust Button	1-11
68761	Tube Assy.	3-7	72965	Roller	1-7
69159	Adapter Assy.	1-11	72972	Shaftgear Assy.	1-11
69164	Gasket	1-11	72974	Gear Assy.	2-7
69260	Insert	3-3	73000	Coupling	4-1
69603	Hose	6-5	73136	Bracket	6-3
69796	Dowel	1-1	73143	Elbow	7-7
70310	Seal	3-5	73152	Bracket	6-7
70455	Gasket	1-9	73249	Washer	1-9
70456	Bracket	1-3	73250	Washer	1-9
70457	Gasket	1-3	73251	Washer	1-9
70474	Washer	1-11	73252	Washer	1-9
70484	Screen	6-1	73314	Gasket	7-7
70485	Intake Pipes	6-5	73346	Flange	6-5
71481	Ring	3-7	73437	Rod Assy.	3-5
71596	Washer	2-7	73772	Nozzle Assy.	1-1

### NUMERICAL INDEX (Continued)

PART NO.	PART NAME	PAGE NO.	PART NO.	PART NAME	PAGE NO.
73810	Bushing	1-7	78084	Gasket	7-1
73818	Gasket	2-1	78127	Tube	6-7
73938	Valve	3-5	78212	Check Valve Assy.	7-5
73965	Bracket	6-3	78290	Plunger Assy.	3-5
73966	Spacer	6-3	78366	Heat Shield	6-5
74068	"O" Ring	1-3	78614	Pulley	5-3
74241	Ring	3-1	78629	Ball Bearing	5-3
74494	Plate	3-7	78753	Bracket	6-7
74637	Bushing	3-5	951391	"O" Ring	6-3
74655	Spacer	6-1	01L21418	Washer	1-9
74887	Spacer	3-7	01L21504	Spacer	5-3
75061	Bolt	3-1	01N19833-218	Plug	2-9
75287	Body Assy.	2-3	01P19762-4-17	Harness Attaching	4-1
75339	Baffle Assy.	3-7	02A21171	Tee	2-5
75656-S	Bushing	1-7	02G21382	Nipple	6-3
75657-S	Bushing	1-7	02P21972	Air Inlet Tube, Front	6-5
75737	Extension	1-3	02P21973	Air Inlet Tube, Rear	6-5
75845	Gasket	7-3	05K21194	Shim Kit	5-1
75906	Gasket	3-7	05K21302-2	Starter Kit	5-1
76118	Spacer	1-7	06A19956	Oil Seal	2-7
76155	Shaft Assy.	1-7	06A19956	Oil Seal	2-9
76220	Stud	1-13	06B21326	Gasket	6-1
76510	Gasket	2-11	06E19769-0.63	Gasket	2-7
76534	Shim	5-3	06E19769-1.00	Gasket	6-1
76768	Lockwasher	5-3	06E19769-1.25	Gasket	1-5
76769	Locknut	5-3	06E19769-1.63	Gasket	6-1
76784	Shaft	2-3	07A21292	Bracket	5-3
77309	Bushing	1-11	07A21962	Bracket	7-3
77433	Elbow	2-5	07A21987	Bracket	7-5
77461	Tee	7-7	07A22002	Bracket	5-3
77467	Spring	1-5	07A22097	Bracket	5-3
77504	Gasket	6-5	07A22125	Bracket	5-3
77611	Gasket	7-1	07C21979	Clamp	6-5
77708	Washer	2-9	07E21978	Support	6-5
77808	Valve Assy.	1-5	07F19875	Link	5-3
77813	Gasket	7-5	07F21995	Strut	7-3
77825	Shaftgear	2-9	07F21998	Link	5-3
77852	Oil Filter		07H21150	Bracket	6-1
	Base Assy.	2-11	11E20003-S3	Crankcase Assy.	1-1
77872	Bushing	1-9	13S19648	Gear	1-7
77906	Spacer	3-7	13E27622	Crk'shft & Bush. Assy.	1-7

**NUMERICAL INDEX (Continued)**

PART NO.	PART NAME	PAGE NO.	PART NO.	PART NAME	PAGE NO.
14H21950	Ring	3-1	67J20608-P	Harness Assy.	4-1
15B21319	Socket	3-5	67J20609-P	Harness Assy.	4-1
15F19957-34	Rod Assy.	3-5			
15F19957-35	Rod Assy.	3-5			
15F19957-36	Rod Assy.	3-5			
16R22127	Guide, Exhaust	3-3			
16A22130	Cyl. & Head Assy.	3-3			
17C19386	Cap	3-5			
17C21191	Key	3-5			
17F19357	Rocker Assy.	3-5			
18A19441	Bearing	1-5			
21C21542-04	Housing Assy.	2-1			
29A21358	Adapter Assy.	2-9			
29A21372	Drive Assy.	2-9			
29D21310	Adapter	2-9			
31M21994	Support Assy.	1-7			
36A19951	Pulley & Shaft Assy.	5-3			
40B19822	Exhaust Pipe	7-1			
40B19825	Exhaust Pipe	7-1			
40B21964	Exhaust Pipe	7-1			
40B21967	Exhaust Pipe	7-1			
40C19819	Flange	7-1			
40G21969	Adapter	7-1			
40J21989	Heat Shield	6-5			
41A21968	Air Inlet Duct	6-5			
46C19836	Turbocharger	7-3			
47C21963	Transition	7-1			
48B21935	Diff. Pres. Controller	7-7			
53E22144	Valve Assy.	2-11			
54D19625	Oil Filter	2-11			
56A22004	Sump Assy.	6-1			
58B21913	Tank	7-5			
61J22120	Fuel Injector	6-3			
62D21153	Fuel Pump	2-5			
63B21127	Manifold Assy.	6-3			
63E21046	Manifold	6-7			
63E21054	Manifold	6-7			
66LC35SDNP	Magneto	4-1			
66LP-OSCNP	Magneto	4-1			
66M21195	Clamp	4-1			
66N21020	Valve Assy.	4-1			