

# **IO-390-A Series Engine Illustrated Parts Catalog**

---

**June 2025**

---

**| PC-IO-390-A Rev 1**

---



© 2025

652 Oliver Street  
Williamsport, PA 17701

## **IO-390-A Series Engine Illustrated Parts Catalog**

| Lycoming Part Number: PC-IO-390-A Rev 1

### **For additional information:**

#### **Mailing address:**

Lycoming Engines  
652 Oliver Street  
Williamsport, PA 17701 U.S.A.

#### **Phone:**

Factory:           U.S. and Canada toll free: +1(800) 258-3279  
                         International Customers: +1(570) 323-6181

Lycoming's regular business hours are Monday through Friday from 8:00 A.M. through 5:00 P.M. Eastern Time (-5 GMT)

#### **Visit us online at:**

[www.lycoming.com](http://www.lycoming.com)



©2025 Lycoming. All Rights Reserved.

Lycoming and "Powered by Lycoming" are trademarks or registered trademarks of Lycoming.  
Lycoming Engines, a division of AVCO Corporation.

All brand and product names referenced in this publication are trademarks or registered trademarks of their respective companies.

---

## Record of Revisions

**NOTICE:** Service Documents with a later release date than this parts catalog override parts information in this document.

Rev No.	Revision Changes	Issue Date
New	Initial Release	July 2016
Rev. 1	<p><b>Introduction</b></p> <ul style="list-style-type: none"> <li>• Revised the “How to Order Parts and Publications” section</li> <li>• Deleted the Roller Tappets section</li> <li>• Added the Lockwire, Safety Cable section</li> </ul> <p><b>Oversize and Undersize Part Listing</b></p> <ul style="list-style-type: none"> <li>• Changed the P/N for Exhaust Valve Guide from 75838 to 75838-S</li> </ul> <p><b>Chapter 24-30</b></p> <ul style="list-style-type: none"> <li>• Changed the chapter name from AC Generation to DC Generation</li> <li>• Moved the figure and parts list for the Alternator Assembly and Belt from Chapter 74-20 to Chapter 24-20 as new Figure 2 and renumbered remaining figures in the catalog accordingly</li> </ul> <p><b>Chapter 72-10</b></p> <ul style="list-style-type: none"> <li>• Moved the figure and parts list for Compressor Attaching Parts from Chapter 24-20 to Chapter 72-10</li> </ul> <p><b>Chapter 72-20</b></p> <ul style="list-style-type: none"> <li>• Revised Figures 5A and 5B</li> <li>• Deleted Crankcase Assembly part number 11U28750-1S1 from the parts list for Figure 5A/5B</li> <li>• Added new Crankcase Assembly part numbers, 11U28752-1S and 11U28752-1S3, to the parts list for Figure 5A/5B</li> <li>• Changed the part number for item 13 in the parts list for Figure 9 from AN960-616L to NAS1149F0632P</li> <li>• Added new Figures 9A and 9B and new parts list for Figures 9A and 9B</li> <li>• Changed P/N LW-25-2.13 to P/N NASM90725-15in the parts list for Figure 9</li> </ul> <p><b>Chapter 72-30</b></p> <ul style="list-style-type: none"> <li>• Changed the part number for the Connecting Rod Upper Bushing in the parts list for Figure 10 from LW-13923 to 01K28983</li> <li>• Changed the part number for the oil regulating piston ring from 14H23148 to 14H29865 in the parts list for Figure 10</li> <li>• Revised the part numbers for items 2, 3, 4, 5, and 6 in the parts list for Figure 11</li> <li>• Revised the part numbers for items 3 and 4 in the parts list for Figure 12</li> <li>• Deleted part number 15G23462-C from the parts list for Figure 12</li> <li>• Revised the part numbers for all push rods in the parts list for Figure 12</li> <li>• Revised Figure 14 to show more accurate depiction of the rocker box cover</li> <li>• Added part number LW-15592-5-04 to the parts list for Figure 14</li> <li>• Added new footnote to the parts list for Figure 14</li> </ul>	June 2025

## Record of Revisions (Cont.)

Rev No.	Revision Changes	Issue Date
Rev. 1 (Cont.)	<p><b>Chapter 72-60</b></p> <ul style="list-style-type: none"> <li>Added part number 21A21533-27 for item 2 in the part list for Figure 18</li> </ul> <p><b>Chapter 73-10</b></p> <ul style="list-style-type: none"> <li>Revised the model designation for fuel injector P/N 61J26426 in the parts list for Figure 24A</li> <li>Revised the model designation for fuel injector P/N 61J28175 in the parts list for Figure 24B</li> <li>Deleted Figure 25 and created new Figures 25A and 25B</li> <li>Deleted parts list for Figure 25 and created new parts lists for Figures 25A and 25B</li> </ul> <p><b>Chapter 74-20</b></p> <ul style="list-style-type: none"> <li>Added HET magnetos as an approved alternate to the parts list for Figure 26</li> <li>Added footnote referencing S.I. 1443 to the parts list for Figure 26</li> </ul> <p><b>Service Kit Section</b></p> <ul style="list-style-type: none"> <li>Revised the Description for P/N 06B26811 in the Seal and Gasket Set Table</li> <li>Revised the P/N of the Cylinder and Head Assembly in the Cylinder, Piston and Ring Assembly parts list</li> <li>Revised the P/N and description for the Rocker Box Cover Gaskets in the Cylinder, Piston and Ring Assembly parts list</li> <li>Changed the part number for the oil regulating piston ring from 14H23148 to 14H29865 in the Cylinder, Piston and Ring Assembly parts list</li> </ul>	June 2025

## Table of Contents

<u>Subject</u>	<u>Chapter - Section</u>	<u>Page</u>
<b>Frontal</b>		
Record of Revisions .....	i	
Table of Contents.....	iii	
Introduction .....	v	
Abbreviations and Acronyms.....	ix	
Oversize and Undersize Part Listing .....	xi	
<b>Electrical Power</b>	<b>24-00</b>	
<b>DC Generation</b> .....	24-30	
1. Alternator Attaching Parts .....	0-9	
2. Alternator Assembly and Belt .....	12-13	
<b>Reciprocating Engine</b>	<b>72-00</b>	
<b>Front Section</b> .....	72-10	
1. Compressor Attaching Parts .....	14-15	
2. Propeller Governor Drive and Attaching Parts.....	16-17	
<b>Power Section</b> .....	72-20	
1. Crankcase Assembly .....	18-21	
2. Crankcase Related Parts .....	22-23	
3. Crankshaft and Counterweight Assembly and Related Parts .....	24-25	
4. Crankshaft Idler Gears, Tachometer Drive, and Camshaft .....	26-27	
5. Crankcase Attaching Parts .....	28-33	
<b>Cylinder Section</b> .....	72-30	
1. Connecting Rods, Pistons, and Ring Assemblies .....	34-35	
2. Cylinder Assembly .....	36-37	
3. Valve Assembly and Related Parts .....	38-41	
4. Cylinder Related Parts .....	42-43	
5. Cylinder Head Drain Tubes and Intercylinder Cooling Baffles.....	44-45	
6. Intake Pipes Assembly .....	46-47	
<b>Lubrication System</b> .....	72-50	
1. Oil Level Gage .....	48-49	
2. Oil Sump Assembly and Oil Suction Screen.....	50-51	
<b>Accessory Drives</b> .....	72-60	
1. Accessory Housing Assembly .....	52-53	
2. Oil Pump Assembly and Accessory Housing Attaching Parts.....	54-55	
3. Fuel Pump, Propeller Governor Adapter and Cover .....	56-57	

<u>Subject</u>	<u>Chapter - Section</u>	<u>Page</u>
<b>Accessory Drives (Cont.)</b> .....	72-60	
4. Propeller Governor Oil Line Tube Assembly and Attaching Parts .....	58-59	
5. Vacuum Pump Drive and Cover .....	60-61	
6. Oil Filter Assembly, Oil Cooler Bypass Valve, and Fittings .....	62-63	
<b>Engine and Fuel Control</b> .....	<b>73-00</b>	
<b>Fuel Distribution</b> .....	73-10	
1. Fuel Injector, Fuel Manifold Assembly, and Brackets.....	64-67	
2. Fuel Lines, Fuel Hoses, and Attaching Parts .....	68-73	
<b>Ignition Distribution System</b> .....	<b>74-00</b>	
<b>Distribution</b> .....	74-20	
1. Magnetos, Magneto Drives, and Spark Plugs .....	74-75	
<b>Starting</b> .....	<b>80-00</b>	
<b>Cranking</b> .....	80-10	
1. Starter Motor and Attaching Parts.....	76-77	
<b>Back Section</b> .....		
<b>Service Kit Section</b> .....	78-80	
<b>Numerical Index</b> .....	81-88	

## Introduction

**⚠ CAUTION:** DO NOT USE THIS CATALOG AS AN ASSEMBLY OR INSTALLATION DOCUMENT. THIS CATALOG MUST ONLY BE USED TO IDENTIFY PARTS IN CONJUNCTION WITH THE APPLICABLE OVERHAUL MANUAL.

### Purpose of this Catalog

This Illustrated Parts Catalog contains a complete list of spare parts for the Lycoming IO-390-A Series Certified Series wide cylinder flange model engines.

### How to Use this Catalog

This catalog is based on the Air Transport Association (ATA) Spec100 format.

This catalog is frequently updated by Service Bulletins (SB) and Service Instructions (SI). The updated information will be incorporated into subsequent full revisions of this catalog.

The ATA two element numbering system provides consistency throughout various manuals. The bottom of each page (beyond the frontal section) contains a two element number (##-##). In the two element numbering, the first two digits represent a chapter, and the next two digits subdivide the material into a more specific section.

The ATA 100 format designates chapters by the numeric code. In the example below, Chapter 74 is for Ignition with a subsection 20 for Distribution.

**EXAMPLE:** **74 — 20**  
Chapter                   Section  
Ignition                 Distribution

**NOTE:** See the IPC Table of Contents for the sub-systems listed in each section.

### Numerical Index

The Numerical Index is a single list of part numbers, names and their locations within the IPC. It is useful for locating parts when you only know the number or name of the part.

### Description column

Indentation of a part name represents a lower level of assembly. Attaching parts have the same indentation level and are listed below the parts grouping or assembly they attach to. This column is often referred to as the "Nomenclature" on other ATA Spec manuals.

### Units per Assembly Column

Where more than one assembly exists, this column contains the quantity of a specific part required in the build sequence of only one next higher assembly. The letters "AR" represent "as required" for bulk items or non-illustrated select-from-range-parts. "RF" represents items listed for reference purposes only.

## Lockwire, Safety Cable

To maintain as assembled torque integrity Lockwire used is to be a one continuous strand twisted to keep tension on various internal fasteners ensuring a minimum torque is retained. Lockwire installed correctly will pull in the direction of fastener assembled tension. Lycoming Engines does not recommend the use of safety cable for retention of internal engine parts or assemblies. Refer to the latest revision of **Service Instruction No. 1566**.

## Vendor Accessories

Parts coverage of Vendor Accessories used on Lycoming engines are found in the applicable Vendor's Parts Catalog. A list of vendors' addresses is included in the latest revision of Lycoming Service Letter No. L114.


Any reference in this document to the supplier's/part manufacturer's product, by name, trademark, part number or other description is solely for the purpose of identification and does not indicate or infer that Lycoming accepts responsibility for quality control and/or airworthiness of parts, which do not pass through the Lycoming quality control system.

## Environmental Compliance

Lycoming is concerned with preserving the environment. Lycoming strongly urges engine owners and repair/overhaul personnel to observe and comply with all federal, state, and local environmental regulations when solvents, paint, fuel, oil, chemicals, or other consumables are used in operating, maintaining, or overhauling an engine component. Please share our concern for and commitment to a clean earth, clean water, and especially clean air for succeeding generations of flyers.

## Perspective of References

In this manual, all references to locations of various components will be designated as if viewing the engine from the rear (or anti-propeller) end. The front of the engine is the propeller end and the oil sump is on the bottom of the engine. Cylinders are numbered from front to rear with the odd-numbered cylinders on the right-hand side. The firing order for this four-cylinder engine is 1-3-2-4.

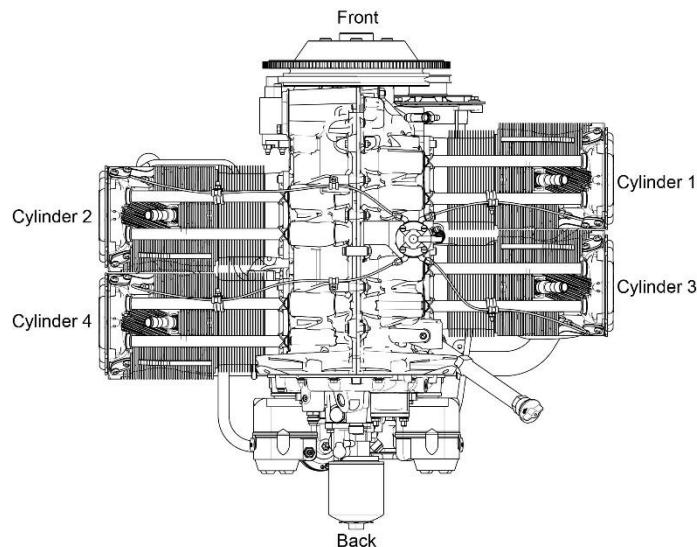

**Top View of Engine**

## How to Order Parts and Publications

An Oversize and Undersize Parts List is included in the front section of this catalog to aid in ordering parts as necessary during overhaul.

To order parts:

1. Contact the applicable Customer Service Hot Lines:
  - U.S. and Canada toll free - +1-800-258-3279
  - International Customers - +1-570-323-6181
  - 8:00 A.M. – 5:00 P.M. EST (-5GMT) Monday through Friday
2. Give the model and serial number of your engine.
3. Give the part number, nomenclature, and quantity.

To supply any comments, suggestions, or corrections to this parts catalog, go online to the Lycoming.com website on the internet.

**NOTICE:** The owner of the manual must give notification to the factory for a change of address.

### **NOTE:**

Lycoming recommends that owners of this manual sign up for email notification on the Technical Publications page of our website <https://www.lycoming.com/contact/knowledge-base/publications>. By submitting your email address, you will receive notification whenever Lycoming publishes a new or revised technical publication, including any revisions to this parts catalog.

©2025 by Lycoming. "All Rights Reserved." All Lycoming publications are to be considered copyrighted and may not be reproduced without permission of the company.



This page intentionally left blank.

## Abbreviations and Acronyms

A	
AR	As Required
Assy.	Assembly
ATA	Air Transport Association
C	
Cyl.	Cylinder
F	
Fill.	Fillister
H	
Hd.	Head
Hex.	Hexagon
I	
I.D.	Inside Diameter
in.	Inch
IPC	Illustrated Parts Catalog
M	
mm	Millimeter
N	
No.	Number
NPT	National Pipe Taper (thread)
O	
O.D.	Outside Diameter
P	
P	Lycoming Proprietary Part
P/N	Part Number
R	
RF	Reference
S	
SB	Service Bulletin
SI	Service Instruction
SSP	Special Service Publication


This page intentionally left blank.

### Oversize and Undersize Parts Listing

PART NO.	DESCRIPTION	OVERSIZE (IN.)					UNDERSIZE (IN.)	
		P05 .005	P10 .010	P20 .020	P30 .030	P50 .050	M03 .003	M06 .006
18B23885	BEARING, Front Crankshaft						X	X
18E23886	BEARING, Crankshaft						X	X
18M23887	BEARING, Connecting Rod						X	X
71903-A †	BUSHING, Counterweight	--	--	--	--	--	--	--
72155-S	BUSHING, Prop Flange	X						
75656-S	BUSHING, Prop Flange	X						
75657-S	BUSHING, Prop Flange	X						
66670	BUSHING, Rocker Shaft Inner		X					
STD-1065	DOWEL, Crankshaft		X					
66713	GUIDE, Intake Valve					X		
75838-S	GUIDE, Exhaust Valve					X		
69260	INSERT, Spark Plug		X					
72212	SEAT, Intake Valve			X				
16T19468	SEAT, Exhaust Valve			X				
LW-15628	SEAL, Crankshaft Oil					X		

† - 71903-A is the undersize part number. When ordering, do not specify an undersize code letter.

**NOTICE:** When ordering oversize and undersize parts, be sure to specify the required oversize and undersize dimension along with the proper part number. For example, to order bearing Part Number (P/N) 18D26098 bearing in 0.003 in. undersize, order P/N 18D26098-M03. Undersize code letter is "M" while oversize code letter is "P". These letters are then followed by the number designating the size in thousandths of an inch.

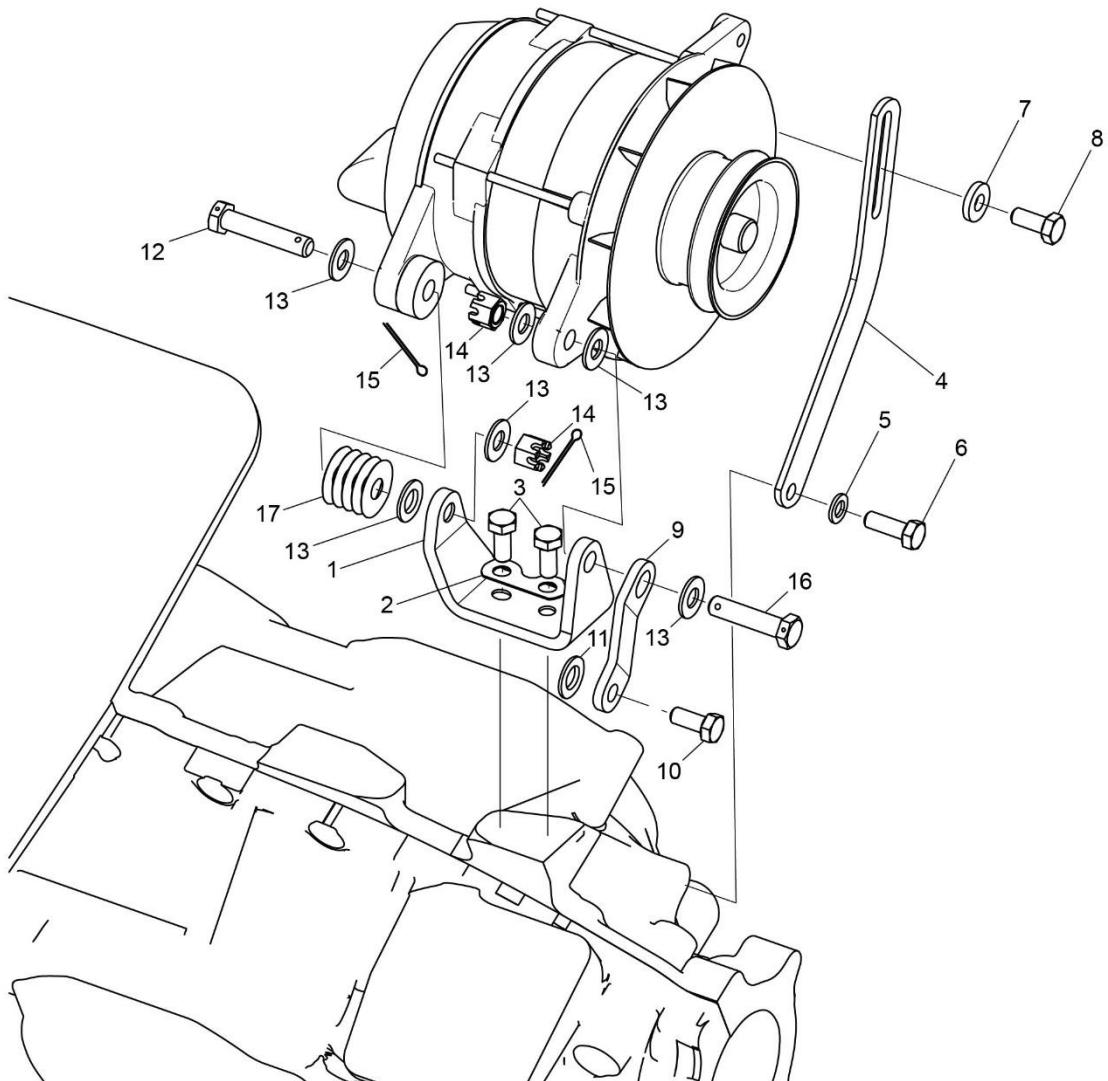

**Figure 1A**  
**Alternator Attaching Parts**

**| DC GENERATION****Figure 1A - Alternator Attaching Parts**


Figure Item	Code	Part Number	Description	Units per Assembly			
				A 1 A 6	A 3 A 6	A 1 B 6	A 3 B 6
1		07A19474	BRACKET, Alternator	1		1	1
2		73383	LOCKPLATE, 5/16 bolt x 1.00 spacing	1		1	1
3		LW-31-0.94	BOLT, 5/16-18 x 15/16 long, hex. head	2		2	2
4		75380	LINK, Alternator, adjusting	1		1	1
5		STD-35	WASHER, 5/16 plain	1		1	1
6		LW-31H0.75	BOLT, 5/16-18 x 3/4 long, hex. head	1		1	1
7		STD-1727	WASHER, Plain, 3/4 O.D. x 11/32 I.D. x 1/8 thick	1		1	1
8		LW-31H0.75	BOLT, 5/16-18 x 3/4 long, hex. head	1		1	1
9		07F23268	STRUT, Alternator support	1		1	1
10		LW-31H0.75	BOLT, 5/16-18 x 3/4 long, hex. head	1		1	1
11	❖	STD-35	WASHER, 13/16 O.D. x 25/64 I.D. x 1/16 thick	1		1	1
12		AN6-17	BOLT, 3/8-24 x 1-61/64 long, hex. head, drilled end	1		1	1
13		STD-690	WASHER, 13/16 O.D. x 25/64 I.D. x 1/16 thick	10		10	10
14		STD-872	NUT, 3/8-24 slotted	2		2	2
15		STD-713	COTTER PIN, 3/32 diameter x 3/4 long	2		2	2
16		AN6-16	BOLT, 3/8-24 x 1-53/64 long, hex. head	1		1	1
17	AR	76534	SHIM, 1-1/8 O.D. x 13/32 I.D. x .005 thick	AR		AR	AR

AR – As Required  
 ❖ Install between strut and attachment to starter lug.

**| DC GENERATION**
**Figure 1A - Alternator Attaching Parts - Plane Power (Ship Loose)**

Figure Item	Code	Part Number	Description	A1B6
1		07A19474	BRACKET, Alternator	1
2		73383	LOCKPLATE, 5/16 bolt x 1.00 spacing	1
3		LW-31-0.94	BOLT, 5/16-18 x 15/16 long, hex. head	2
4		75380	LINK, Alternator, adjusting	1
5		STD-35	WASHER, 5/16 plain	1
6		LW-31H0.75	BOLT, 5/16-18 x 3/4 long, hex. head	3
7		STD-1727	WASHER, Plain, 3/4 O.D. x 11/32 I.D. x 1/8 thick	1
8		07F23268	STRUT, Alternator support	1
9		STD-690	WASHER, 13/16 O.D. x 25/64 I.D. x 1/16 thick	1
10		76534	SHIM, 1-1/8 O.D. x 13/32 I.D. x .005 thick	2

This page intentionally left blank.

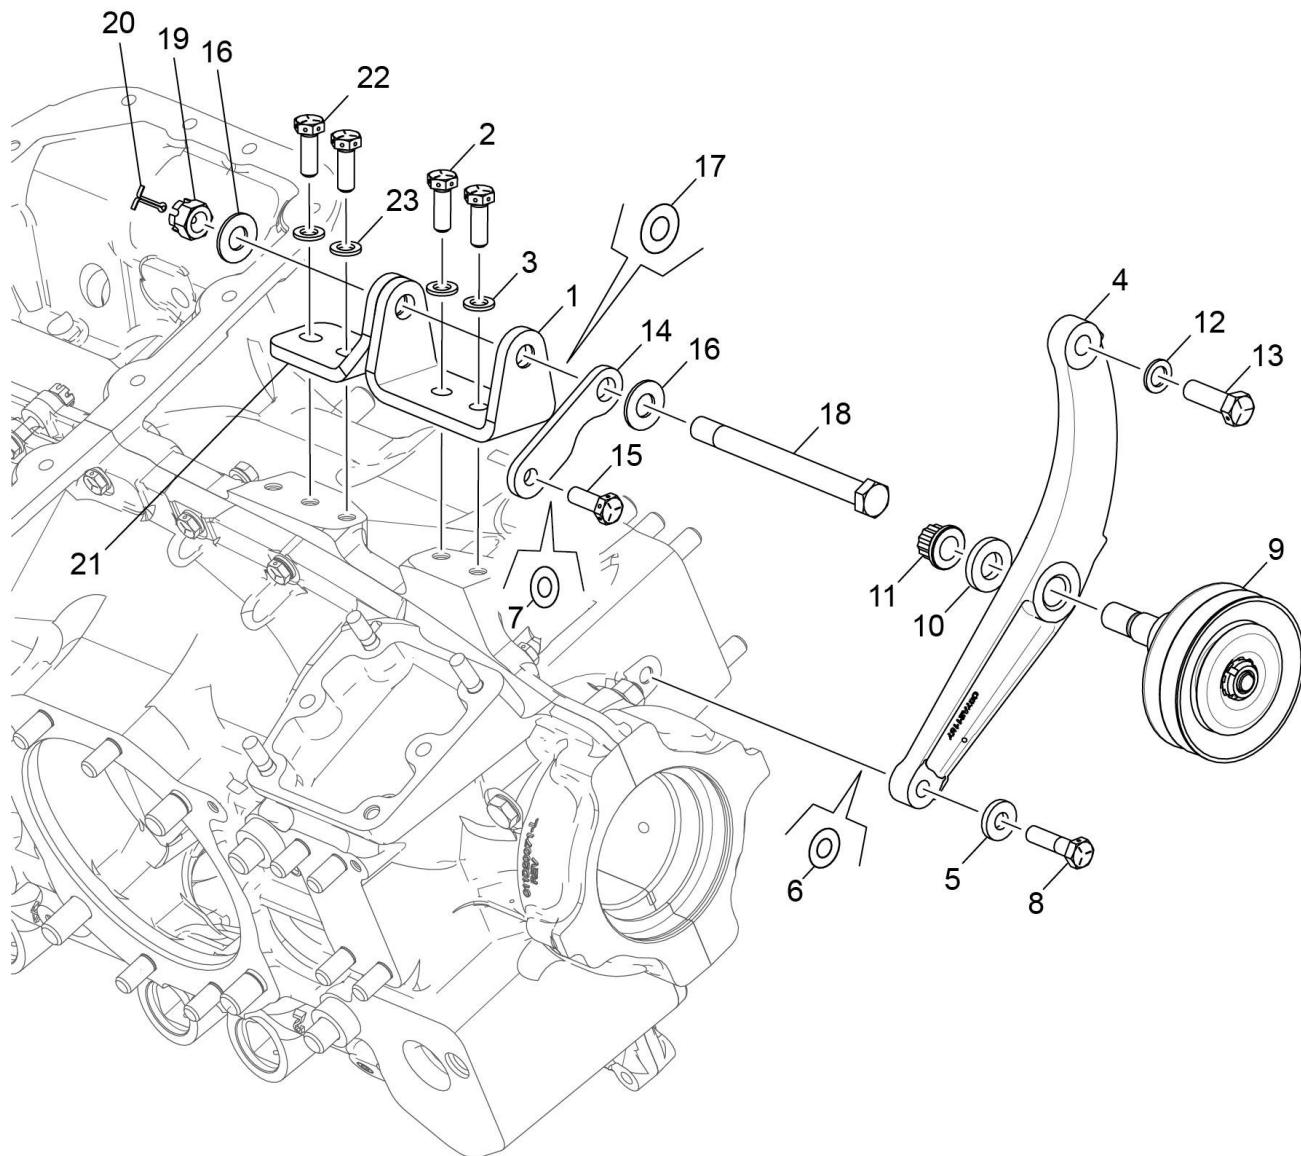


**Figure 1B**  
**Alternator Attaching Parts (Alternator 28V - 95A EL)**

## I DC GENERATION

**Figure 1B - Alternator Attaching Parts  
(28V - 95A)**


<b>Figure Item</b>	<b>Code</b>	<b>Part Number</b>	<b>Description</b>	<b>Units per Assembly</b>			
				<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
1		07A21156	BRACKET, Alternator	1			
2		LW-31H0.88	BOLT, 5/16-18 x 7/8 long, hex head		2		
3		STD-35	WASHER, 5/16 plain		4		
4		07A21157	BRACKET, Alternator belt, adjust		1		
5		STD-1727	WASHER, Plain, 3/4 O.D. x 11/32 I.D. x 1/8 thick		1		
6		LW-14637	SHIM, 13/16 O.D. x 11/32 I.D. x 0.005 thick		3		
7		LW-14649	SHIM, 13/16 O.D. x 11/32 I.D. x 0.010 thick		3		
8		LW-31H1.22	BOLT, 5/16-18 x 1.22 long hex head, drilled		1		
9		LW-19265	PULLEY AND SHAFT ASSY, Alternator		1		
10		STD-669	WASHER, 0.52 I.D. x 1.00 O.D. x 0.13		1		
11		STD-2221	NUT, 1/2-20, self locking		1		
12		STD-33	WASHER, 3/8 plain		1		
13		LW-38H1.19	BOLT, 3/8-16 x 1.19 long hex head, drilled		1		
14		07F21160	STRUT, Alternator support		1		
15		LW-31H0.88	BOLT, 5/16-18 x 7/8 long, hex head		3		
16		STD-632	WASHER, 7/16 plain		2		
17		LW-14650	SHIM, 7/8 O.D. x 0.46 I.D. x 0.005 thick		3		
18		AN7-44	BOLT, 7/16-20 x 4.59 long hex head		1		
19		AN310-7	NUT, 7/16-20 plain, slotted		1		
20		STD-713	PIN, Cotter, 0.09 dia. x 3/4 long		1		
21		07A26130	BRACKET, Alternator, aft		1		
22		LW-31H0.88	BOLT, 5/16-18 x 7/8 long, hex head		2		
23		STD-35	WASHER, 5/16 plain		2		

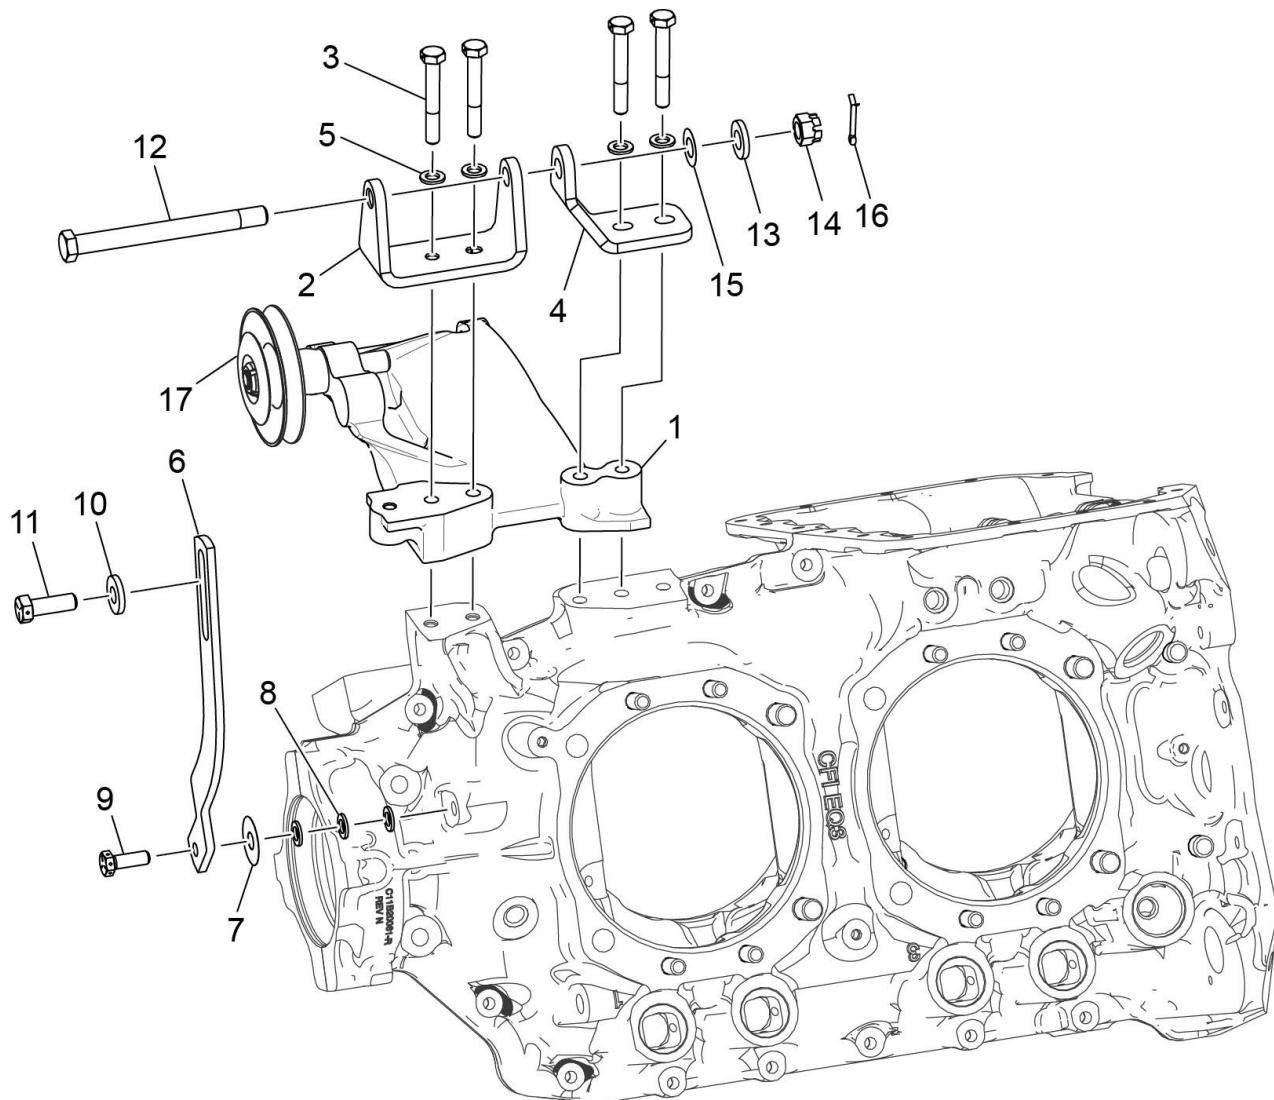

**Figure 1C**  
**Alternator Attaching Parts**  
**Dual 24V-70A-90A**

**| DC GENERATION**
**Figure 1C - Alternator Attaching Parts**  
**(Dual 24V Alt 70A - 90A)**

Figure Item	Code	Part Number	Description	Units per Assembly			
				A 1	A 3	A B	A 3 B 6
1		07A22097	BRACKET, Alternator				1
2		07A22002	BRACKET, Alternator, Ford, right				1
3		LW-31H2.13	BOLT, 5/16-18 x 2-1/8 long hex. head D				4
4		07A22125	BRACKET, Alternator, aft				1
5		STD-35	WASHER, 5/16 plain				4
6		07F21998	LINK, Alternator adjusting, Ford, right				1
7		76534	SHIM, 1/8 O.D. x 13/32 I.D. x 0.005 thick				3
8		STD-35	WASHER, 5/16 plain				1
9		LW-31H0.88	BOLT, 5/16-18 x 7/8 long, hex. head				1
10		STD-1342	WASHER, 7/8 O.D. x 25/64 I.D. x 1/8 thick				1
11		LW-38H1.09	BOLT, 3/8-16 x 1 1/10 long hex. head, drilled				1
12		AN7-44	BOLT, 7/16-20 x 4-19/32 long, hex. head				1
13		STD-2092	WASHER, 29/64 I.D. x 7/8 O.D. x 1/8 thick				1
14		AN310-7	NUT, 7/16-20 plain slotted				2
15		LW-14650	SHIM, 7/8 O.D. x 23/50 I.D. x 0.005 thick				1
16		STD-713	PIN, Cotter, 3/32 diameter x 3/4 long				3
17		36A19951	PULLEY AND SHAFT ASSY-idler				1

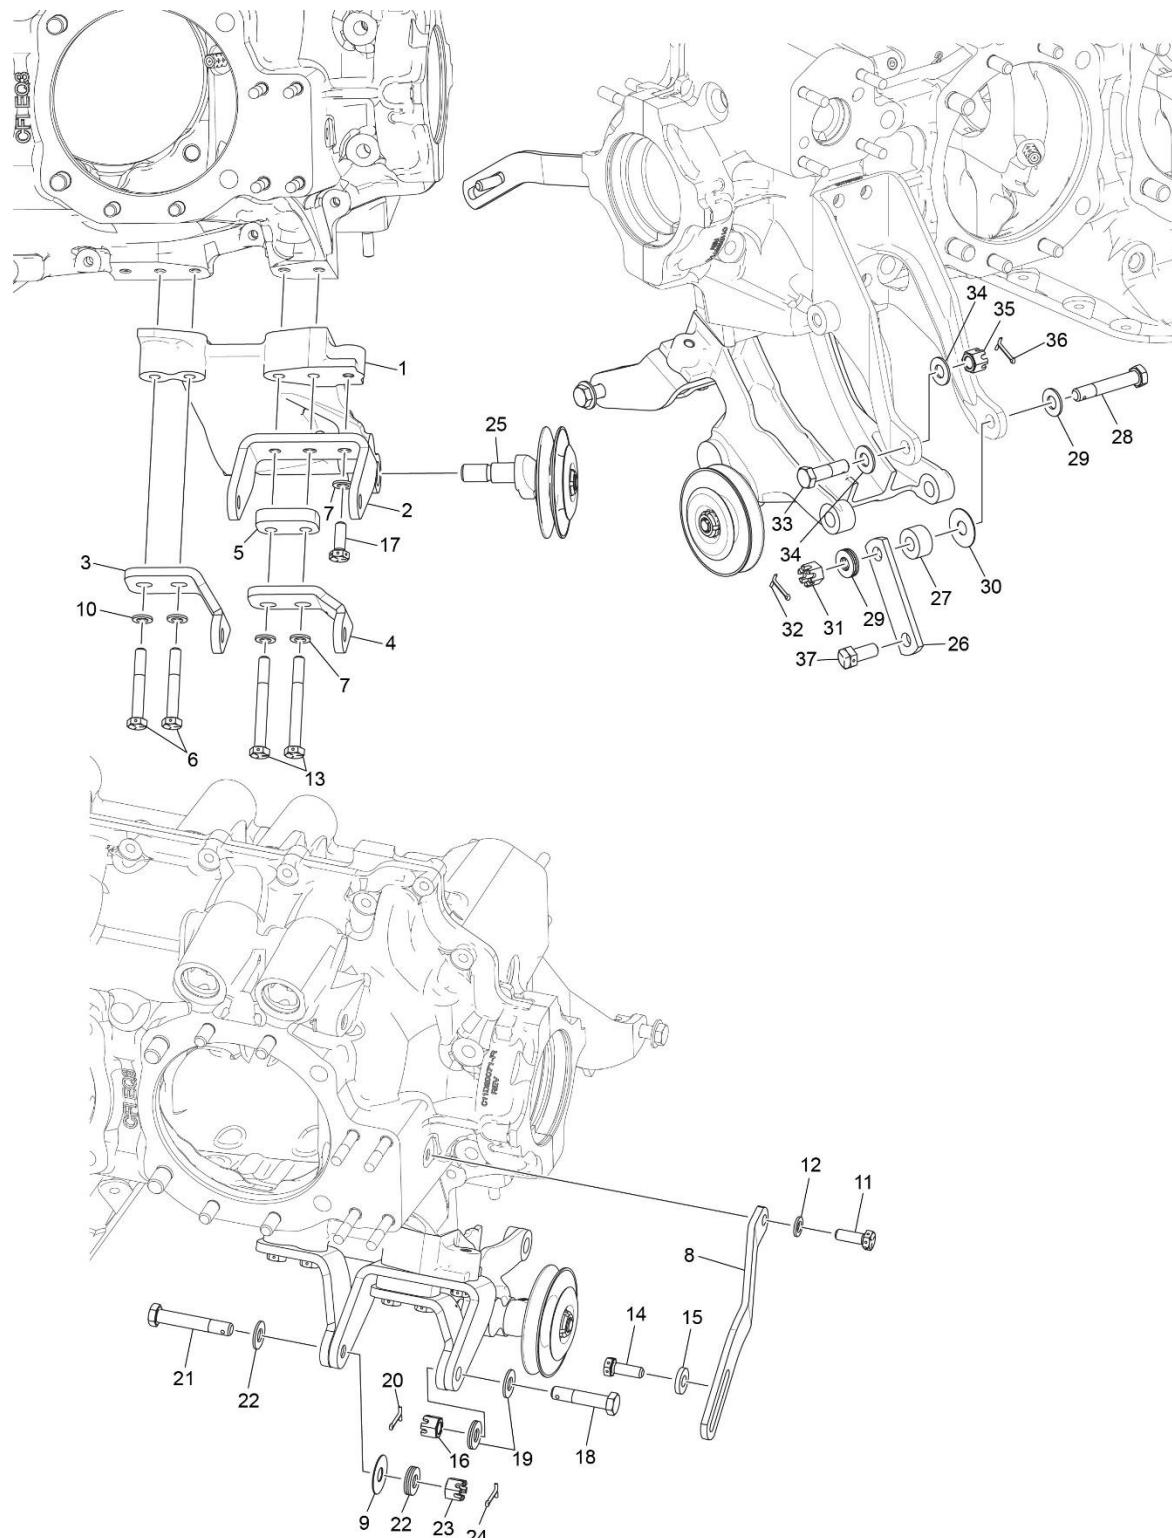

**Figure 1D**  
**Alternator Attaching Parts**  
**Dual Alternator & Compressor Setup**

**I DC GENERATION**
**Figure 1D - Alternator Attaching Parts**  
**Dual Alternator & Compressor Setup**


Figure Item	Code	Part Number	Description	Units per Assembly			
				A 1	A 3	A B 6	A 1 3 B 6
1		07A22097	BRACKET, Alternator				1
2		07A19880	BRACKET, Alternator - Right (Prestolite)				1
3		07A21910	BRACKET, Alternator aft (Malibu)				1
4		07A21908	BRACKET, Alternator - Inner (Malibu)				1
5		01L21909	SPACER, Alt. bracket inner (Malibu)				1
6		LW-31H2.13	BOLT, 5/16-18 x 2.13 long hex dr				2
7		STD-35	WASHER, 5/16 plain				3
8		07F21298	LINK, Alternator Adjusting (Prestolite)				1
9		76534	SHIM, 1.13 O.D. x 0.41 I.D. x 0.005 thick				5
10		STD-35	WASHER, 5/16 plain				2
11		LW-31H0.88	BOLT, 5/16-18 x 7/8 long, hex. head				1
12		STD-35	WASHER, 5/16 plain				1
13		LW-31H2.75	BOLT, 5/16-18 x 2-3/4 long hex dr				2
14		LW-31H0.88	BOLT, 5/16-18 x 7/8 long, hex. head				1
15		STD-1727	WASHER, plain 0.33 I.D. X .75 OD X				1
16		STD-872	NUT, 3/8-24 slotted				1
17		LW-31H0.88	BOLT, 5/16-18 x 7/8 long, hex. head				1
18		AN6-15	BOLT, 3/8-24UNF x 1.70 lg dr				1
19		STD-690	WASHER, 13/16 O.D. x 25/64 I.D. x 1/16 thick				3
20		STD-713	PIN, COTTER, 0.09 DIA x 0.75 long				1
21		AN6-21	BOLT, 3/8-24 UNF x 2.20 lg dr s				1
22		STD-690	WASHER, 13/16 O.D. x 25/64 I.D. x 1/16 thick				4
23		STD-872	NUT, 3/8-24 slotted				1
24		STD-713	PIN, COTTER, 0.09 DIA x 0.75 long				1
25		36A19951	PULLEY AND SHAFT ASSY, Idler				1
26		07F28735	BRACE, Alternator				1

Continued on next page

**| DC GENERATION**
**Figure 1D - Alternator Attaching Parts (Cont.)**
**Dual Alternator & Compressor Setup**

Figure Item	Code	Part Number	Description	Units per Assembly			
				A	A	A	A
27		01L21916	SPACER, Alternator (Prestolite)	1			
28		AN6-21	BOLT, 3/8-24 UNF x 2.20 lg-dr s				1
29		STD-690	WASHER, 0.81 O.D. x 0.39 I.D. x 0.06 thick				5
30		76534	SHIM, 1.13 O.D. x .41 I.D. x 0.005 thick				7
31		STD-872	NUT, 3/8-24 slotted				1
32		STD-713	PIN, COTTER, 0.09 DIA x 0.75 long				1
33		AN6-12	BOLT, 3/8-24 x 1-21/64 lg hx hd				1
34		STD-690	WASHER, 13/16 O.D. x 25/64 I.D. x 1/16 thick				2
35		STD-872	NUT, 3/8-24 slotted				1
36		STD-713	PIN, COTTER, 0.09 DIA x 3/4 long				1
37		LW-31H1.06	BOLT, 5/16-18 x 1-1/16 long hex dr				1

This page intentionally left blank.

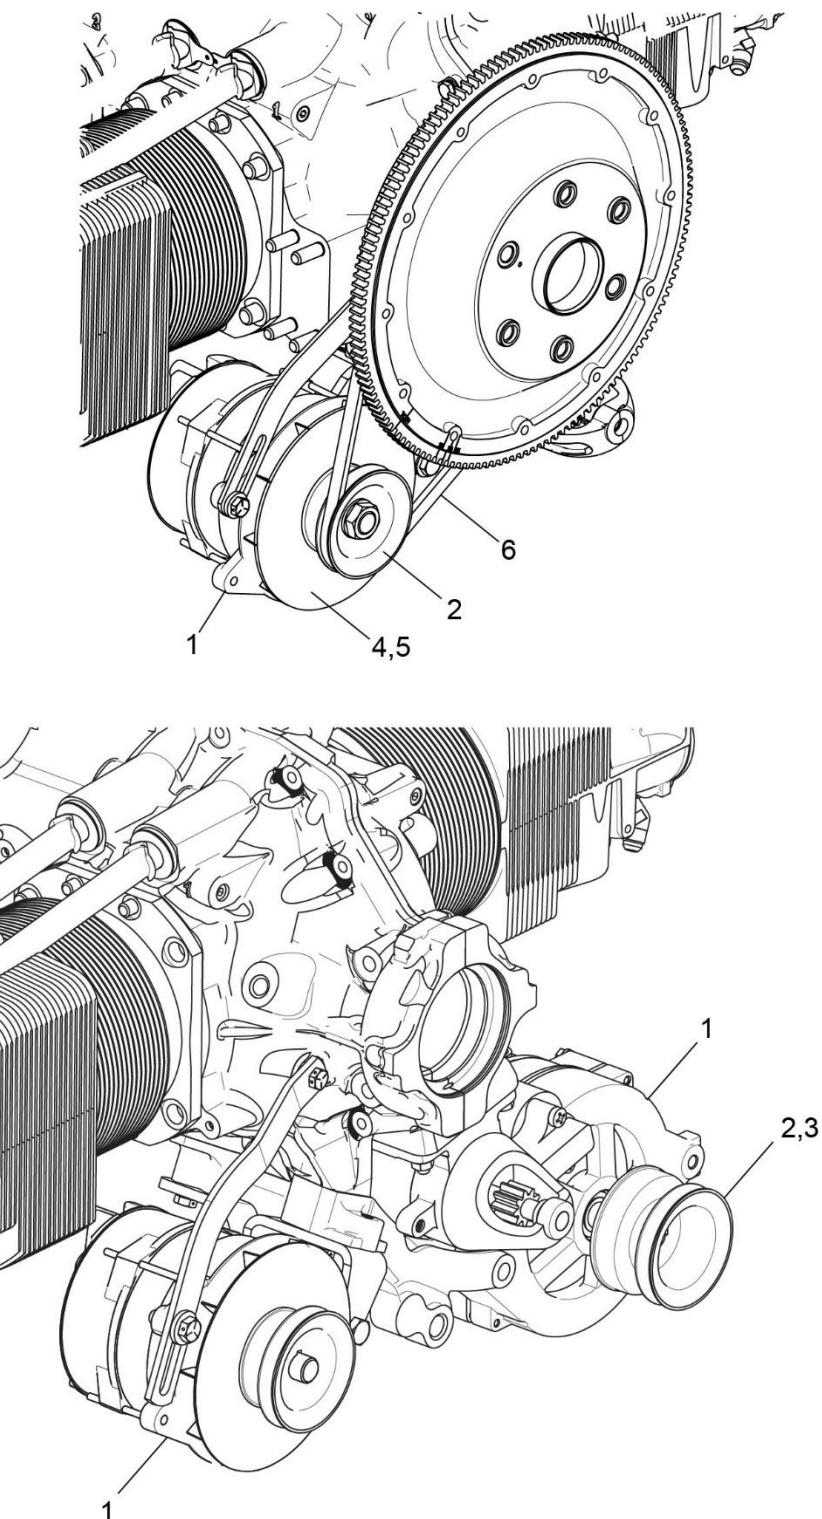


**Figure 2**  
**Alternator Assembly and Belt**

**DC GENERATION****Figure 2 - Alternator Assembly and Belt**

<b>Figure Item</b>	<b>Code</b>	<b>Part Number</b>	<b>Description</b>	<b>Units per Assembly</b>			
				<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
1		32B19549	ALTERNATOR ASSEMBLY, 12V-70A(ALX-8521LS)	1			
		32C19553	ALTERNATOR ASSEMBLY, 24V-70A (ALU8521LS)			1	
		32B19567	ALTERNATOR ASSEMBLY, 12V, 70 AMP, Thermocoupled (Type K) (ALX-8521LS)	1		1	1
		32C19568	ALTERNATOR ASSY, 24V-70A THERMO (K Type)	1			
		32C26767	ALTERNATOR ASSEMBLY, Dual 28V-90A (ES4011-LS) right			1	
		32C26768	ALTERNATOR ASSEMBLY, Dual 28V-70A (ES-4018LS) left			1	
2		36B19484	PULLEY, Alternator	1		1	1
		36B21996	PULLEY, Alternator			1	
		36B22008	PULLEY, Alternator			1	
3		32F21674	SPACER, Alternator fan			1	
		32F21668	SPACER, Alternator fan			1	
4		32G21675	FAN, Alternator			1	
		32G21669	FAN, Alternator			1	
5		32R21676	BACK PLATE, Alternator fan			1	
		32R21670	BACK PLATE, Alternator fan			1	
6		37A19773-376	BELT, Alternator drive, 3/8 wide	1		1	1
		37A19773-390	BELT, Alternator, 3/8 wide, 39.000 long				1
		37A19773-470	BELT, Alternator drive 3/8 wide			1	1
		37D21992	BELT, Alternator drive 11 mm			1	
		37A19773M396	BELT, Alternator drive - set of 2 -0.380 Wide		1		
		37B19774-482	BELT, Compressor drive 1/2 wide				1


**NOTICE:** Refer to the latest revision of Lycoming Service Instruction No. 1154 for complete listing of FAA approved starters and alternators.

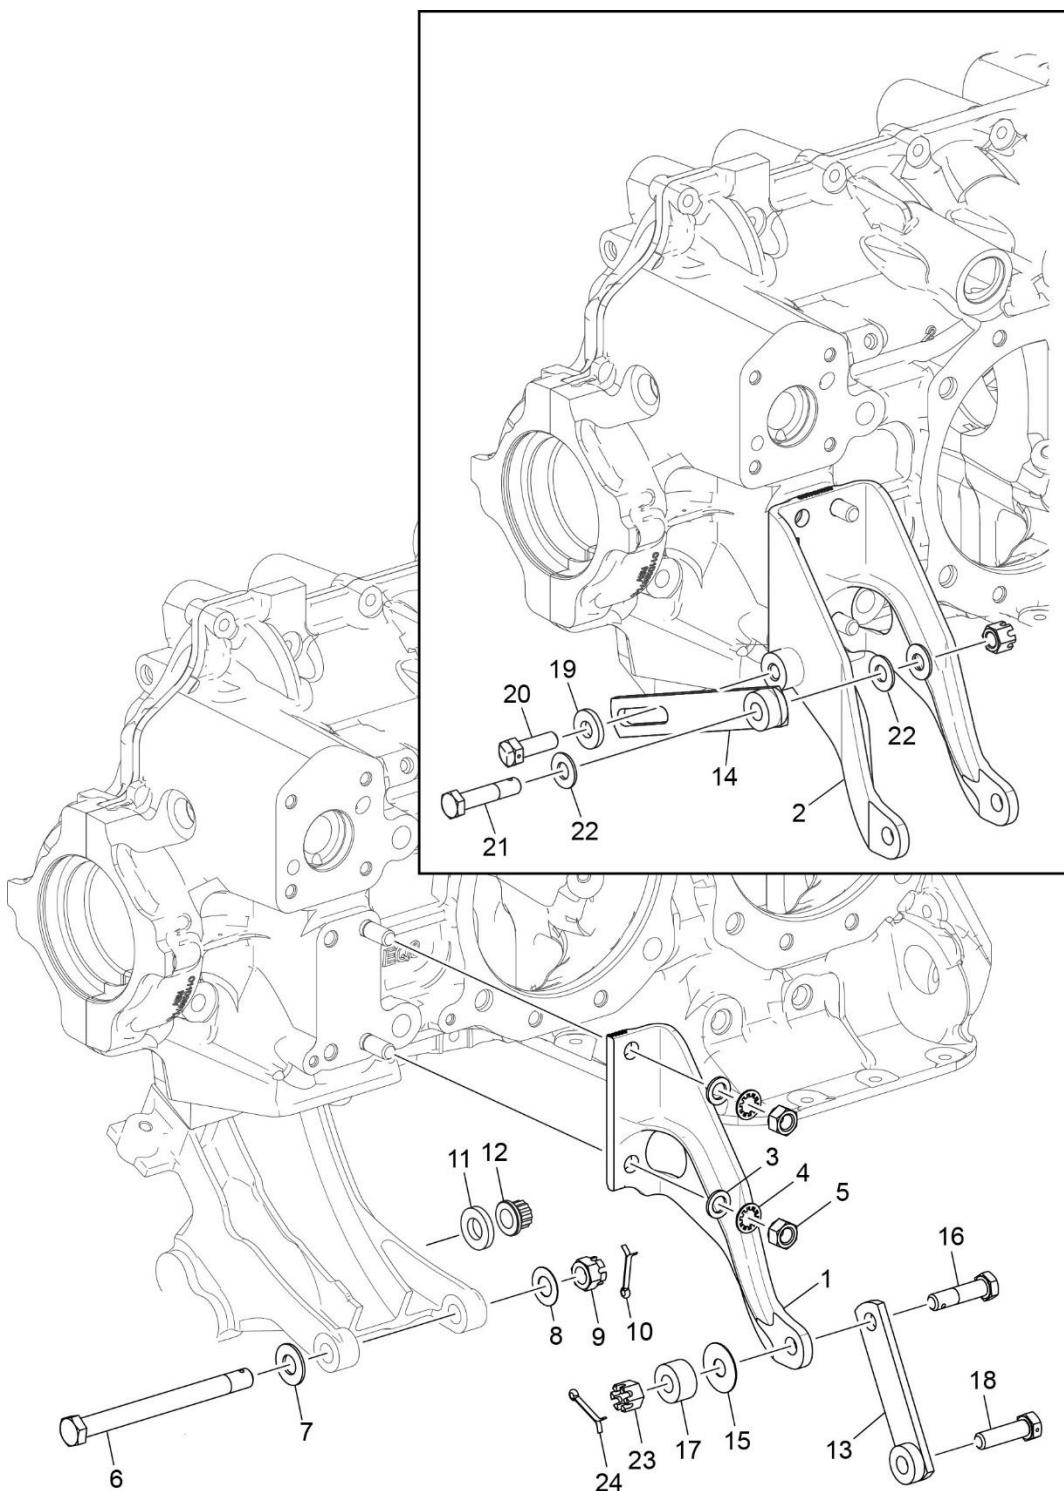

**| Figure 3**  
**Compressor Attaching Parts**

**FRONT SECTION****| Figure 3 - Compressor Attaching Parts**


<b>Figure Item</b>	<b>Code</b>	<b>Part Number</b>	<b>Description</b>	<b>Units per Assembly</b>			
				<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
1		07A21292	BRACKET, Compressor	1	3	1	3
2		07A21030	BRACKET, Compressor				1
3		STD-33	WASHER, 3/8 plain			2	4
4		STD-678	WASHER, 3/8 lock int teeth			2	4
5		383-B	NUT, 3/8-24 plain			2	4
6		AN7-46	BOLT, 7/16-20 x 4.84 lg hex			1	1
7		STD-632	WASHER, 7/16 plain			1	1
8		LW-14650	SHIM, 0.88 O.D. x 0.46 I.D. x .005 thick			3	4
9		AN310-7	NUT, 7/16-20 plain slotted			1	1
10		STD-713	PIN, Cotter, 3/32 diameter x 3/4 long			1	1
11		STD-669	WASHER, 0.52 I.D. x 1.00 O.D. x 0.13			1	1
12		STD-2221	NUT, 1/2-20 self locking			1	1
13		07F19875	LINK, Alt. LT Ford			1	
14		07F28736	LINK, Freon Compressor			1	
15		76534	SHIM, 1.13 O.D. x .41 I.D. x .005 thick			3	
16		AN6-13	BOLT, 3/8-24 x 1.45 lg-dr			1	
17		01L21504	SPACER, 0.40 I.D. x 0.88 O.D. x 0.48 long.			1	
18		LW-38H1.31	BOLT, 3/8-16 X 1.31 long hex dr			1	
19		STD-1342	WASHER, 0.88 O.D. x 0.39 I.D. x .13 thick			1	
20		LW-38H1.09	BOLT, 3/8-16 x 1.09 Long Hex D			1	
21		AN6-15	BOLT, 3/8-24 UNF x 1.70 lg-dr S			1	
22		STD-690	WASHER, 0.81 O.D. x 0.39 I.D. x 0.06 thick			3	
23		STD-872	NUT, 3/8-24 Slotted			1	1
24		STD-713	PIN, Cotter, 0.09 diameter x 0.75 long			1	1

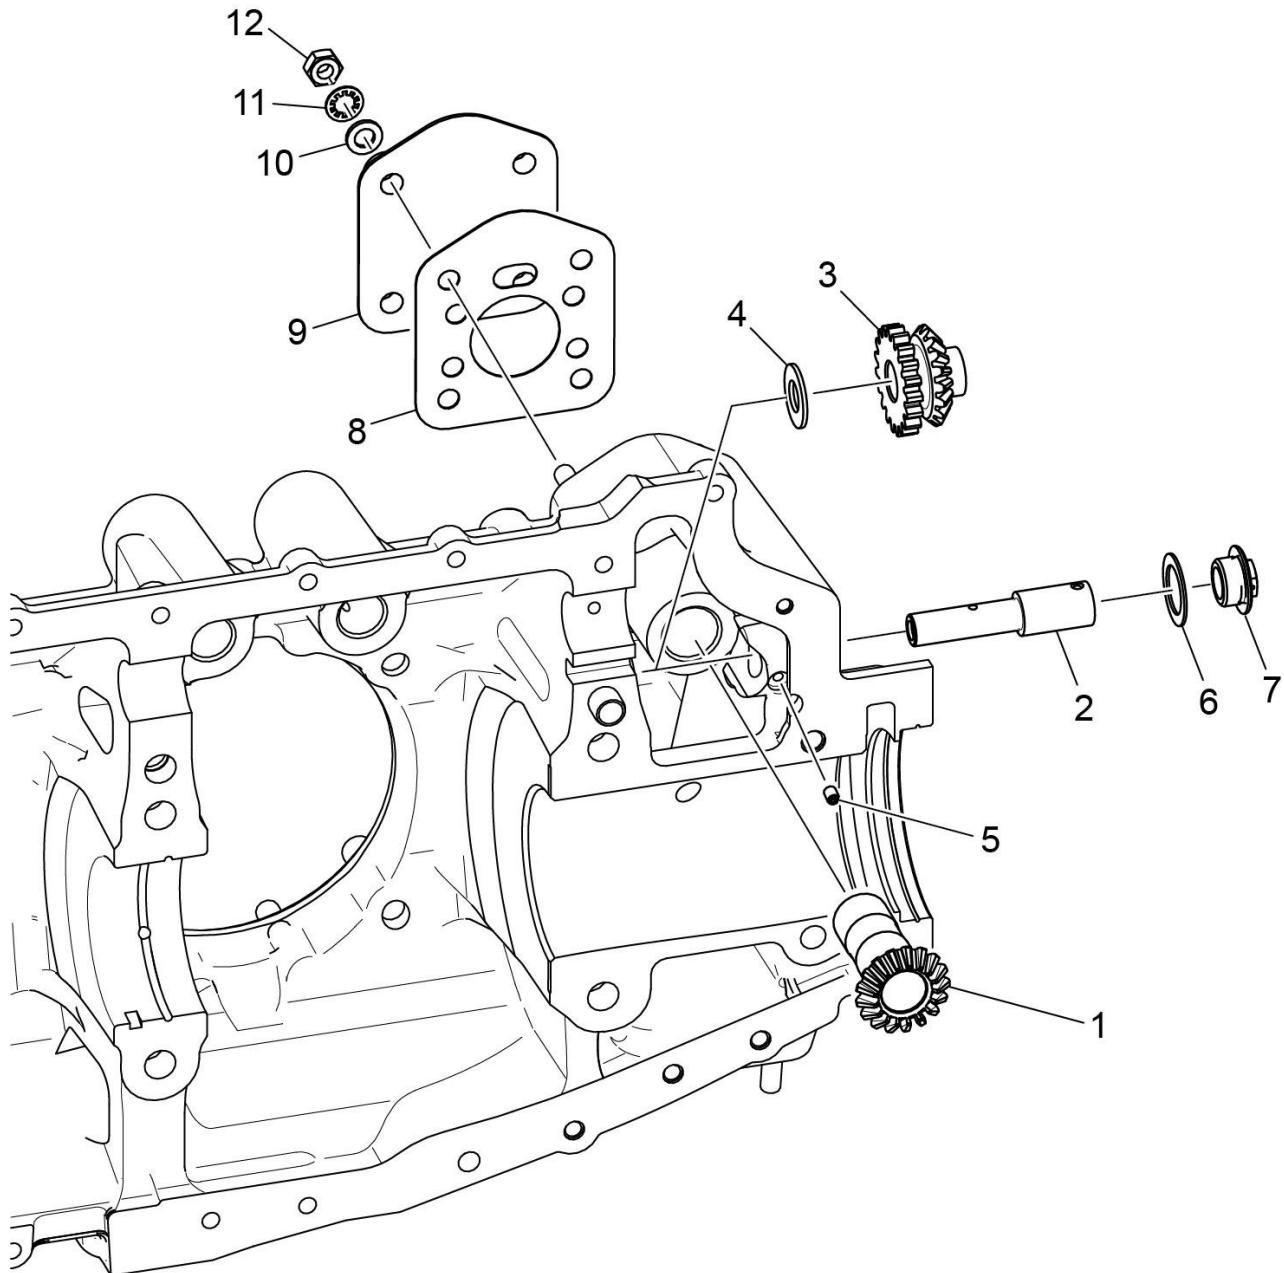


| **Figure 4**  
**Propeller Governor Drive and Attaching Parts**

**FRONT SECTION****| Figure 4 - Propeller Governor Drive and Attaching Parts**

<b>Figure Item</b>	<b>Code</b>	<b>Part Number</b>	<b>Description</b>	<b>Units per Assembly</b>			
				<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
1		77875	GEAR, Propeller governor driven			1	1
2		LW-14021	SHAFT, Propeller governor idler gear			1	1
3		77874	GEAR ASSY, Propeller governor idler			1	1
4		73249	WASHER, Thrust (0.0585 - 0.0595 thick)			AR	AR
		73250	WASHER, Thrust (0.062 - 0.063 thick)			AR	AR
		73251	WASHER, Thrust (0.0655 - 0.0665 thick)			AR	AR
		73252	WASHER, Thrust (0.069 - 0.070 thick)			AR	AR
		01L21418	WASHER, Thrust (0.055 - 0.056 thick)			AR	AR
5		AN565B1032H5	SET SCREW, No. 10-32 x 5/16 long			1	1
6		70455	GASKET, 25/32 I.D. x 1-1/8 O.D. x 1/16 thick			1	1
7		LW-13896	PLUG, 3/4-16 hex. hd			1	1
8		72053	GASKET, Governor			1	1
9		72378	COVER, Governor drive			1	1
10		STD-35	WASHER, 5/16 plain			4	4
11		STD-475	WASHER, 5/16 lock, internal teeth			4	4
12		STD-1410	NUT, 5/16-18 plain			4	4
AR – As Required							

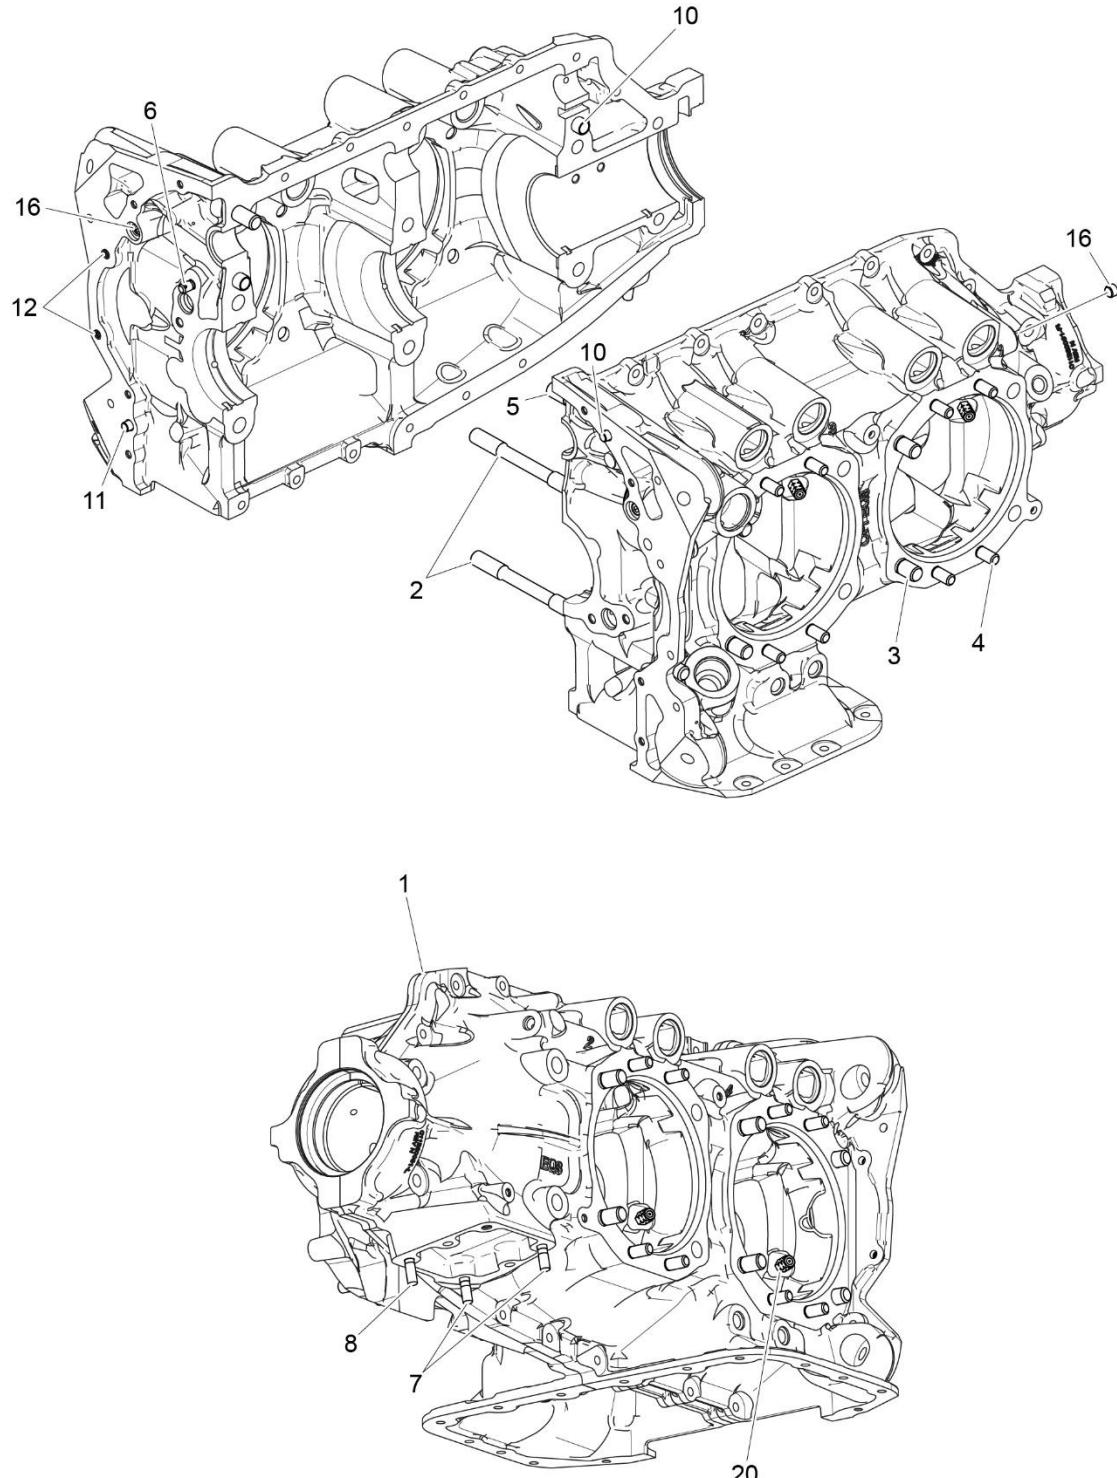

**Figure 5A**  
**Crankcase Assembly A1A6, A3A6**

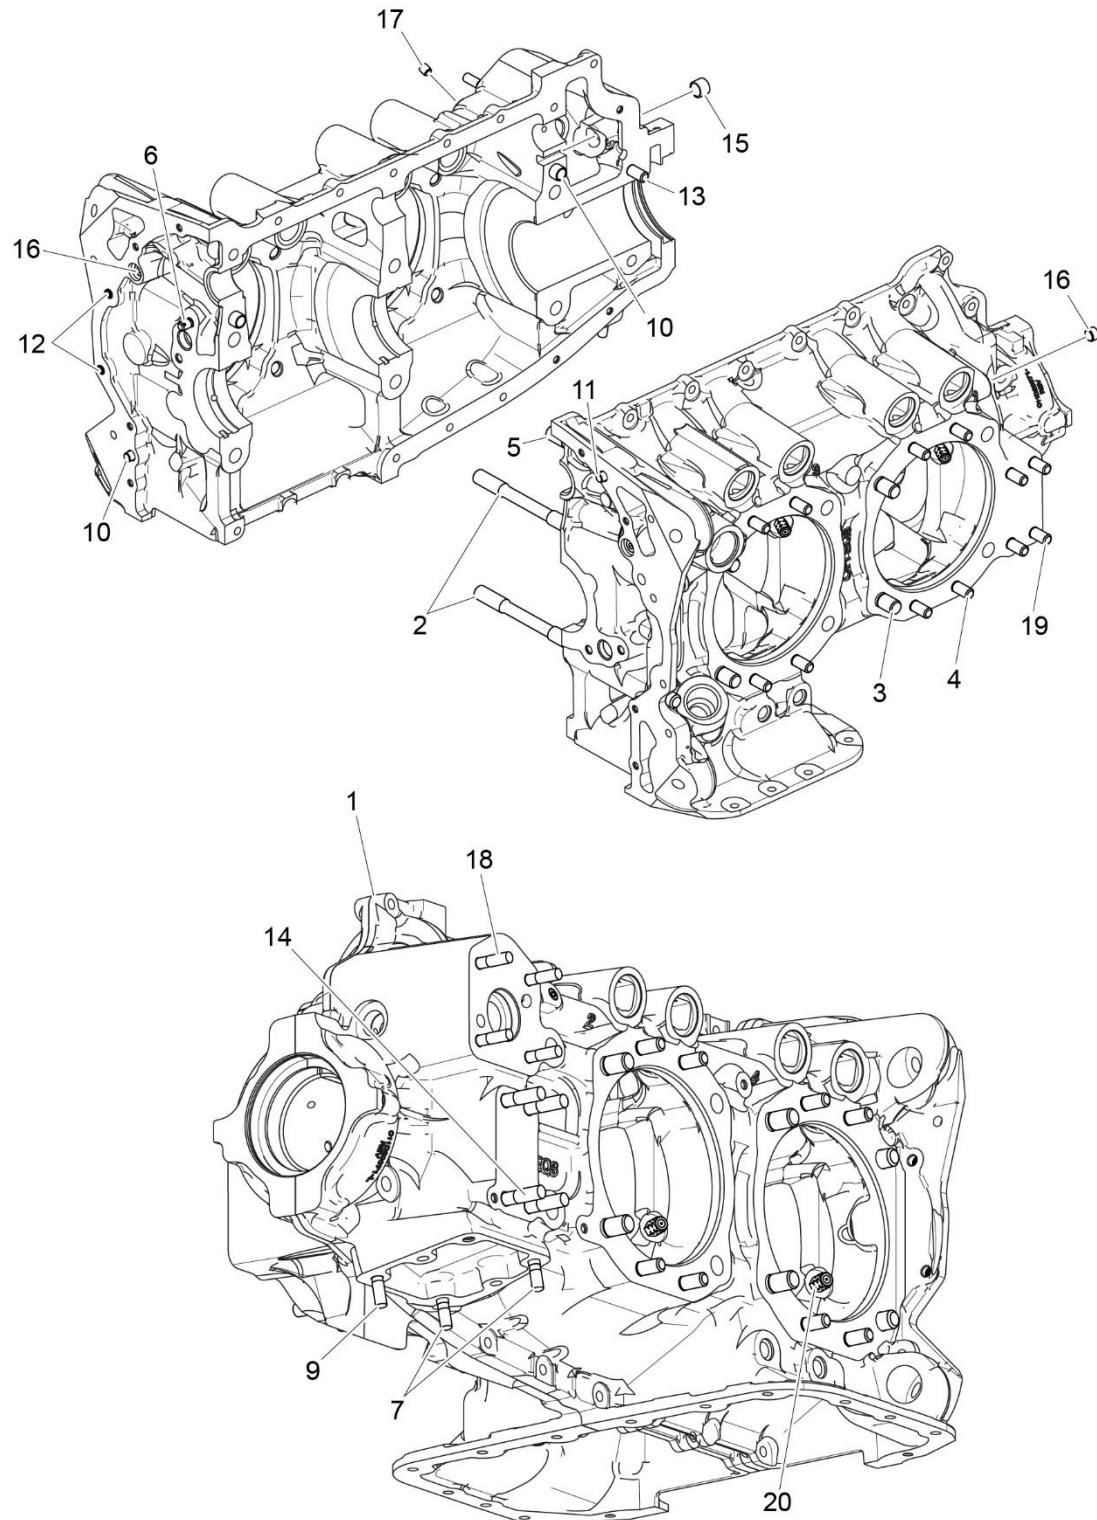


**Figure 5B**  
**Crankcase Assembly A1B6, A3B6**

**POWER SECTION**
**| Figures 5A/5B - Crankcase Assembly**

Figure Item	Code	Part Number	Description	Units per Assembly			
				A 1 A 6	A 3 A 6	A 1 B 6	A 3 B 6
1		11U20391-1S	CRANKCASE ASSEMBLY	1	1		
		11U28752-1S1	CRANKCASE ASSEMBLY			1	1
		11U28752-1S3	CRANKCASE ASSEMBLY			1	1
2		01A23544	STUD, 1/2-13 x 9-27/32 long	2	2	2	2
3		50-15	STUD, 1/2-13 x 1-7/8 long	8	8	8	8
4		38-13	STUD, 3/8-16 x 1-5/8 long	13	13	13	13
5		38D-17	STUD, 3/8-16 x 2-1/8 long, drilled	1	1	1	1
6		LW-13793	STUD, 5/16-18 x 15/16 long, drilled	1	1	1	1
7		31C-12	STUD, 5/16-18 x 1-1/2 long	2	2	2	2
8		31C-13	STUD, 5/16-18 x 1-5/8 long	1	1		
9		31C-14	STUD, 5/16-18 x 1-3/4 long			1	1
10		STD-557	DOWEL, 1/2 diameter x 11/16 long, hollow	2	2	2	2
11		STD-514	DOWEL, 5/16 diameter x 1/2 long	2	2	2	2
12		STD-1623	INSERT, 1/4-20 UNC x 3/8 long	2	2	2	2
13		38-22	STUD, 3/8-16 x 1-58 long			1	1
14		38-13	STUD, 3/8-16 x 1-5/8 long			4	4
15		72158	BUSHING, Governor drive idler shaft			1	1
16		1102	PLUG, 1/8-27 NPT, Allen head	6	6	5	5
17		STD-1339	PLUG, 1/16-27 NPT, Allen head			1	1
18		31C-16	STUD, 5/16-18 x 2.00 long			4	4
19		31C-19	STUD, 1/16-18 x 2.38 long			4	4
20		12E23021	NOZZLE ASSEMBLY, Piston cooling	4	4	4	4

This page intentionally left blank.

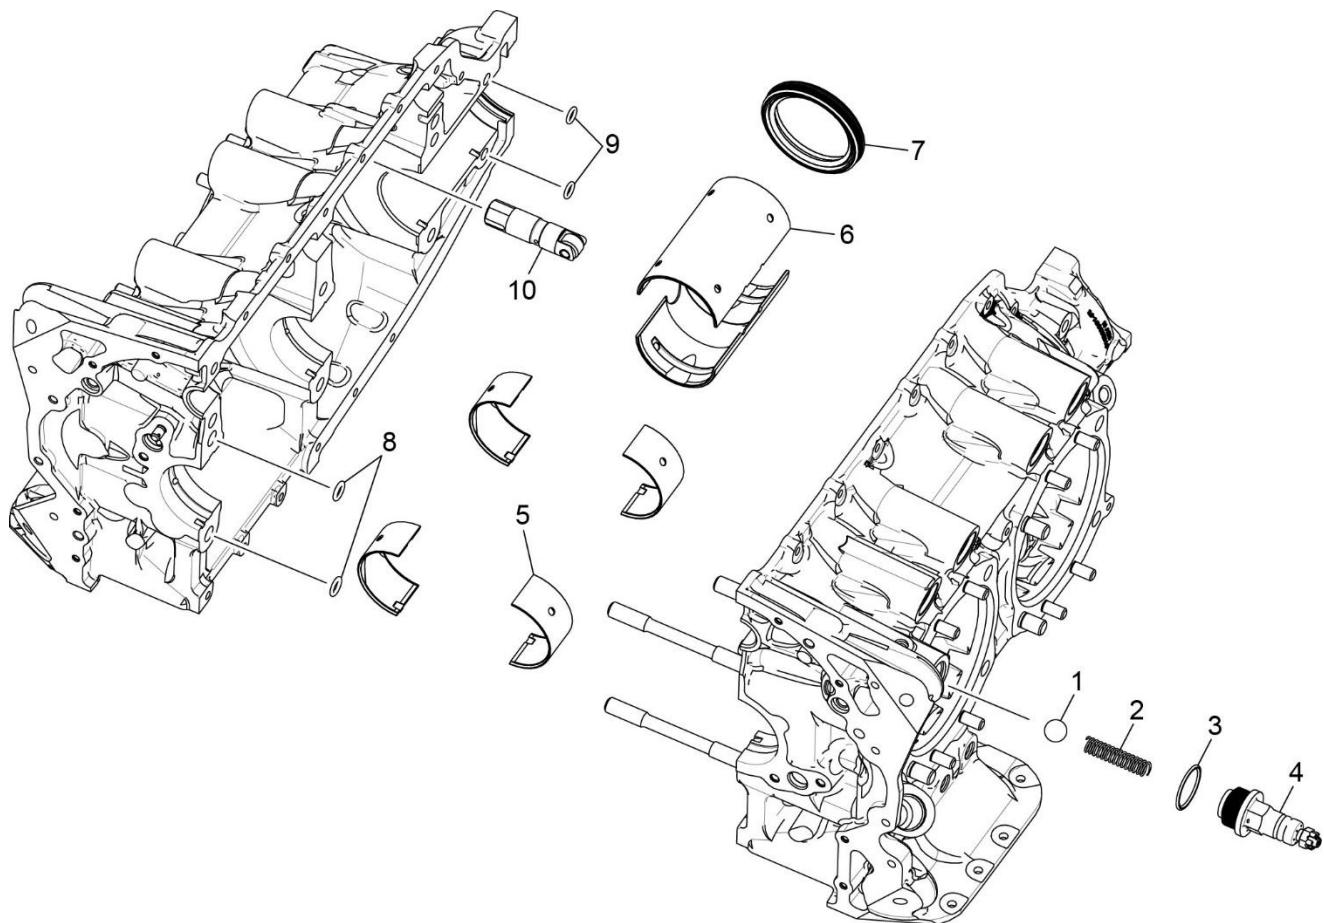


| **Figure 6**  
Crankcase Related Parts

**POWER SECTION****| Figure 6 - Crankcase Related Parts**

Figure Item	Code	Part Number	Description	Units per Assembly
1		1028-B	BALL, 11/16 diameter	1
2	*	61084	SPRING, Oil pressure relief valve	1
	*	68668	SPRING, Oil pressure relief valve	1
	*	77467	SPRING, Oil pressure relief valve	1
	*	LW-11713	SPRING, Oil pressure relief valve	1
	*	LW-18085	SPRING, Oil pressure relief valve	1
3		06E19769-1.25	GASKET, 1-1/4 I.D. x 1-1/2 O.D. x 3/32 annular	1
4		77808	VALVE ASSEMBLY, Oil pressure relief valve	1
5		18E23886	BEARING, Crankshaft hi-crush thin wall	4
6		18B23885	BEARING, Crankshaft-front	2
7	**	LW-15628	SEAL, Crankshaft, Oil	1
8		72075	SEAL, Oil, 3/32 section x 7/16 I.D.	2
9		72091	RING, Oil seal, 23/64 I.D. x 1/10 diameter	2
10	***	LRT23381	BODY ASSEMBLY, Hydraulic roller tappet	8


\* Select spring to give a minimum of three threads exposed on adjusting screw to allow field adjustment. Reference latest revision of Lycoming Table of Limits SSP-1776, Part I for spring identification.  
 \*\* Refer to latest revision of Lycoming Service Instruction No. 1324 for installation.  
 \*\*\* Sold as exchange part only.

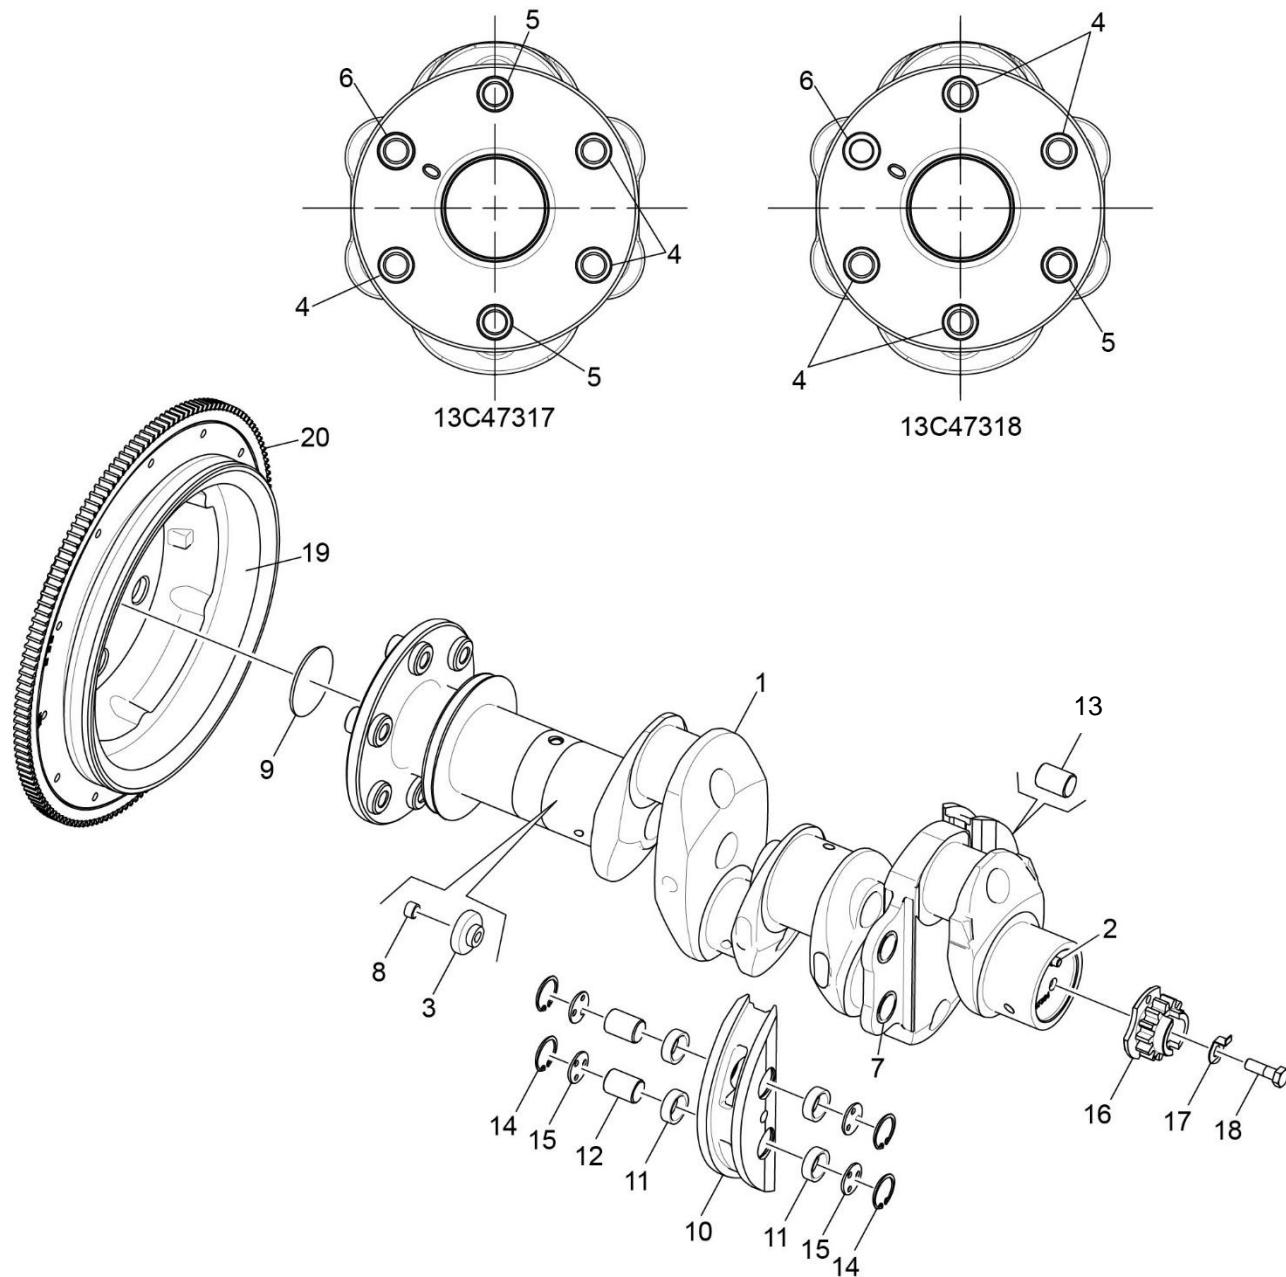

**|Figure 7**  
Crankshaft and Counterweight Assembly and Related Parts

**POWER SECTION****| Figure 7 - Crankshaft and Counterweight Assembly and Related Parts**


Figure Item	Code	Part Number	Description	Units per Assembly			
				A 1 A 6	A 3 A 6	A 1 B 6	A 3 B 6
1		13C47317	CRANKSHAFT AND BUSHING ASSEMBLY	1		1	
		13C47318	CRANKSHAFT AND BUSHING ASSEMBLY		1		1
2		STD-1065	DOWEL, Stepped, 5/16 & 1/4 diameter	1	1	1	1
3		74711	PLUG, 1-1/4	1	1	1	1
4		75656-S	BUSHING, Prop flange, long	3	4	3	4
5		72155-S	BUSHING, Prop flange, short	2	1	2	1
6		79024-S	BUSHING, Propeller flange, indexing	1		1	
		75657-S	BUSHING, Propeller flange, indexing		1		1
7		73810	BUSHING, Crankshaft counterweight	4	4	4	4
8		1102	PLUG, 1/8 pipe	1	1	1	1
9		LW-14529	PLUG, 2-1/16 diameter expansion	1	1	1	1
10		LW-19227	COUNTERWEIGHT ASSY	2	2	2	2
11		71903-A	BUSHING, Dynamic counterweight	8	8	8	8
12		14W21696	ROLLER, Dynamic counterweight	2	2	2	2
13		72797	ROLLER, Dynamic counterweight, 6.3 order	2	2	2	2
14		LW-14820	RING, Internal retaining	8	8	8	8
15		71907	WASHER, Counterweight	8	8	8	8
16		13S19646	GEAR, Crankshaft	1	1	1	1
17		LW-18639	LOCKPLATE, Crankshaft gear	1	1	1	1
18		STD-2246	BOLT, 5/16-24 x 1.00 long	1	1	1	1
19		LW-16471	SUPPORT ASSEMBLY, Starter ring gear	1	1	1	1
		31M19861	SUPPORT ASSEMBLY, Starter ring gear				1
		31M21994	SUPPORT ASSEMBLY, Starter ring gear				1
		74977	SUPPORT ASSEMBLY, Starter ring gear		1		
20		72566	GEAR, Starter ring, 12/14 pitch	1	1	1	1

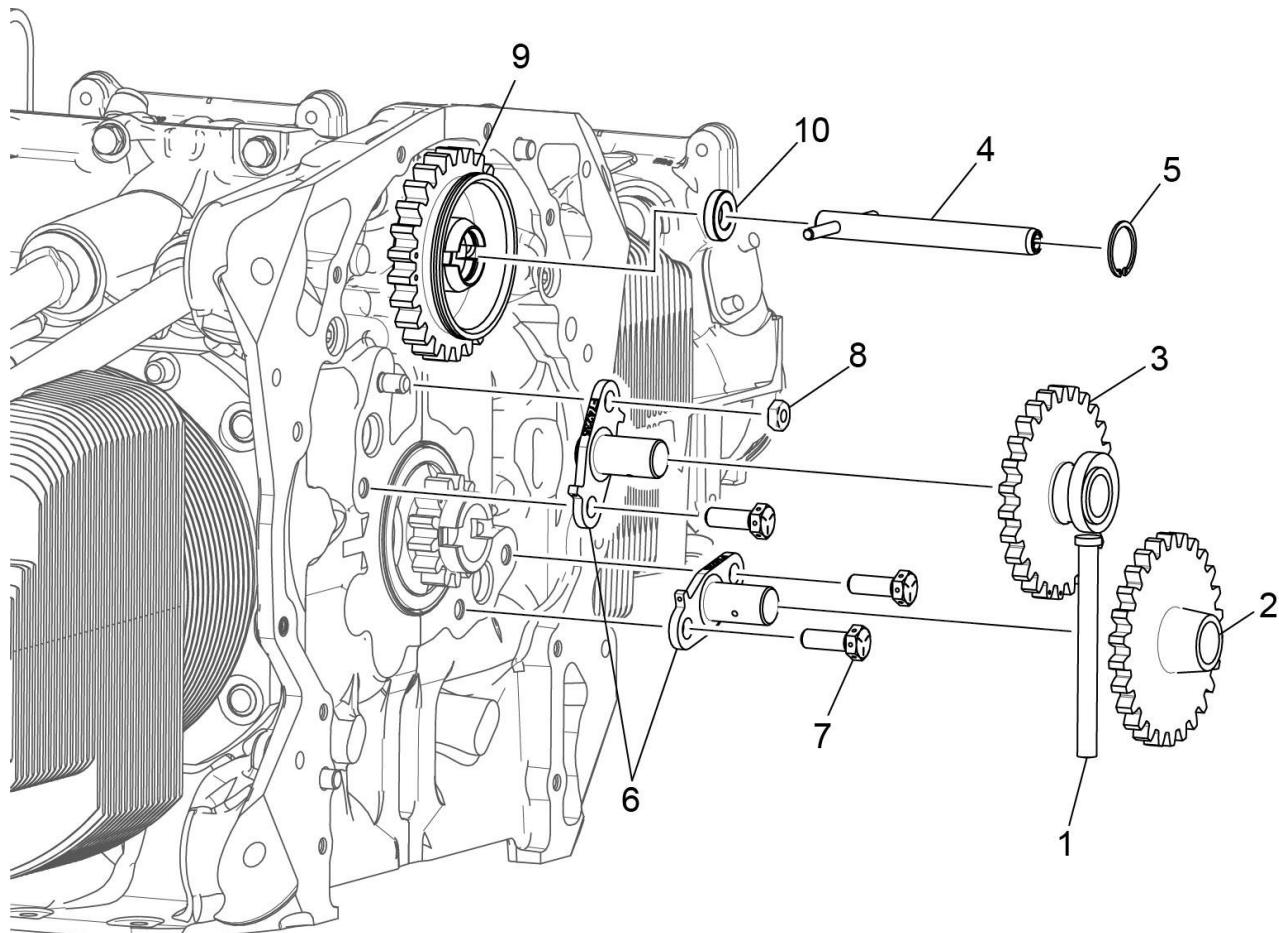

**| Figure 8**  
**Crankshaft Idler Gears, Tachometer Drive, and Camshaft**

**POWER SECTION****| Figure 8 - Crankshaft Idler Gears, Tachometer Drive, and Camshaft**

Figure Item	Code	Part Number	Description	Units per Assembly			
				A 1 A 6	A 3 A 6	A 1 B 6	A 3 B 6
1		23D26777	PLUNGER, Fuel pump, long	1	1	1	1
2		74996	GEAR ASSEMBLY, Crankshaft idler, plain	1	1	1	1
3		75072	GEAR ASSEMBLY, Crankshaft idler	1	1	1	1
4		76121	SHAFT ASSEMBLY, Tachometer	1	1	1	1
5		STD-2231	RING, Internal retaining	1	1	1	1
6		LW-13796	SHAFT, Crankshaft idler gear	2	2	2	2
7		LW-31H0.88	BOLT, 5/16-18 x 7/8 long, hex. head, drilled	3	3	3	3
8		STD-2168	NUT, 5/16-18 NC-3 slotted shear	1	1	1	1
9		15M23452	CAMSHAFT ASSEMBLY	1	1		
		15M23456	CAMSHAFT ASSEMBLY			1	1
		15M28669	CAMSHAFT ASSEMBLY, (with plug, no tach)		1		
10		76118	SPACER, Tachometer shaft centering	1	1	1	1

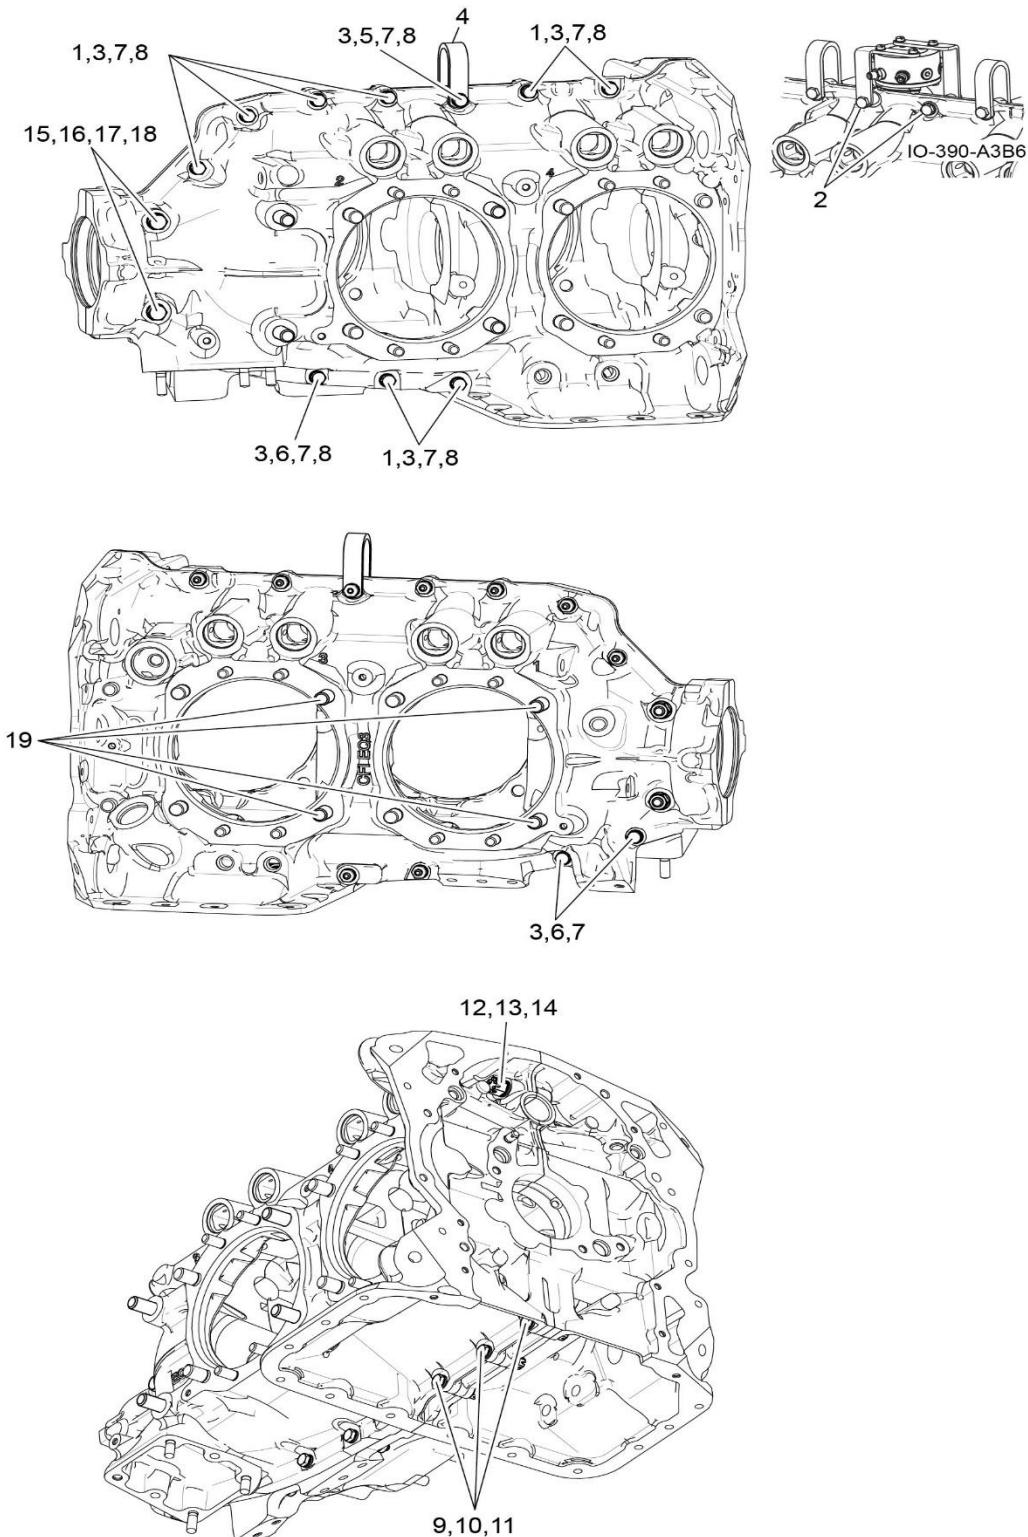


**| Figure 9**  
**Crankcase Attaching Parts**

**POWER SECTION****| Figure 9 - Crankcase Attaching Parts**

Figure Item	Code	Part Number	Description	Units per Assembly			
				A 1 A 6	A 3 A 6	A 1 B 6	A 3 B 6
1		LW-25-1.50	BOLT, 1/4-20 x 1-1/2 long, hex. head	8	8	8	8
2		NASM90725-15	BOLT, 1/4-20 x 2.13 long hex				*2
3		STD-8	WASHER, 1/4 plain	19	19	20	20
4		60803	STRAP, Lifting	1	1	1	1
5		LW-25-1.75	BOLT, 1/4-20 x 1-3/4 long, hex. head	1	1	1	1
6		LW-25-1.13	BOLT, 1/4-20 x 1-1/8 long, hex. head	3	3	4	4
7		STD-160	WASHER, 1/4 lock, internal teeth	12	12	13	13
8		STD-1411	NUT, 1/4-20 plain	9	9	9	9
9		LW-25S1.50	BOLT, 1/4-20 x 1-1/2 long, hex. head, drilled	3	3	3	3
10	<b>AR</b>	STD-8	WASHER, 1/4 plain	9	9	9	9
11		STD-2249	NUT, 1/4-20 slotted	3	3	3	3
12		STD-33	WASHER, 3/8 plain	1	1	1	1
13		NAS1149F0632P	WASHER, 3/8 plain, thin	1	1	1	1
14		STD-872	NUT, 3/8-24 slotted	1	1	1	1
15		AN6-34A	BOLT, 3/8-24 x 3-37/64 long, hex. head	2	2	1	1
16		STD-33	WASHER, 3/8 plain	4	4	3	3
17		STD-678	WASHER, 3/8 lock, internal teeth	2	2	2	2
18		STD-596	NUT, 3/8-24 plain	2	2	2	2
19		01A22453	STUD, 1/2-20 x 10-1/2 long	4	4	4	4

AR – As Required

\* Quantities for Front Governor - Dual Lifting Strap

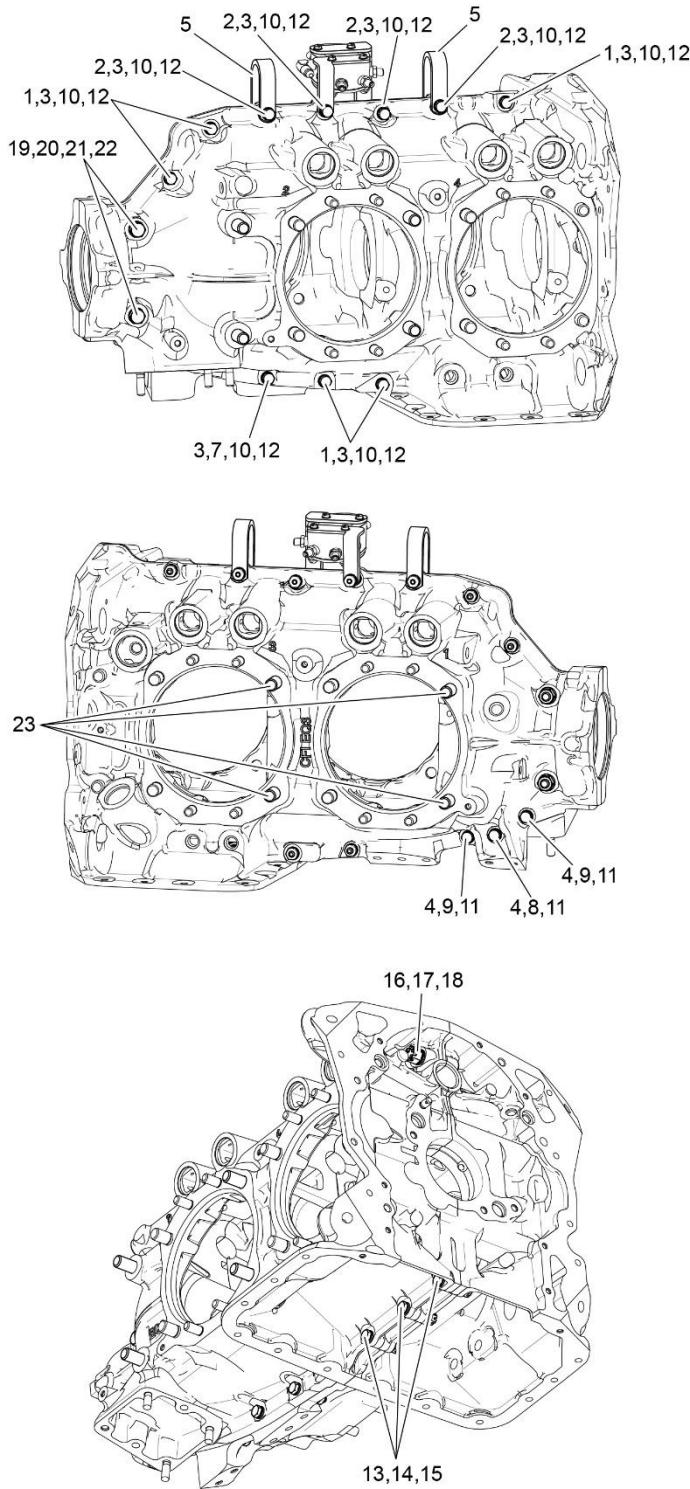


**Figure 9A**  
**Crankcase Attaching Parts**  
**(Use with Crankcase Assembly P/N 11U28752-1S)**

## POWER SECTION

**Figure 9A - Crankcase Attaching Parts**  
**(Use with Crankcase Assembly P/N 11U28752-1S)**

Figure Item	Code	Part Number	Description	Units per Assembly
1		LW-25-1.50	BOLT, 1/4-20 x 1-1/2 long, hex. head	5
2		NASM90725-15	BOLT, 1/4-20 x 2.13 long hex	2
3		STD-8	WASHER, 1/4 plain	14
4		STD-35	WASHER, 5/16 plain	4
5		60803	STRAP, Lifting	2
6		LW-25-1.75	BOLT, 1/4-20 x 1-3/4 long, hex. head	2
7		LW-25-1.13	BOLT, 1/4-20 x 1-1/8 long, hex. head	1
8		LW-31-1.31	BOLT, 5/16-18 x 1-5/16 long, hex. head	2
9		LW-31-1.16	BOLT, 5/16-18 x 1-5/32 long, hex. head	2
10		STD-160	WASHER, 1/4 lock, internal teeth	10
11		STD-475	WASHER, 5/16 lock, internal teeth	4
12		STD-1411	NUT, 1/4-20 plain	9
13		LW-25S1.50	BOLT, 1/4-20 x 1-1/2 long, hex. head, drilled	3
14	<b>AR</b>	STD-8	WASHER, 1/4 plain	9
15		STD-2249	NUT, 1/4-20 slotted	3
16		STD-33	WASHER, 3/8 plain	2
17		NAS1149F0632P	WASHER, 3/8 plain, thin	3
18		STD-872	NUT, 3/8-24 slotted	1
19		AN6-34A	BOLT, 3/8-24 x 3-37/64 long, hex. head	1
20		STD-33	WASHER, 3/8 plain	3
21		STD-678	WASHER, 3/8 lock, internal teeth	2
22		STD-596	NUT, 3/8-24 plain	2
23		01A22453	STUD, 1/2-20 x 10-1/2 long	4
AR – As Required				

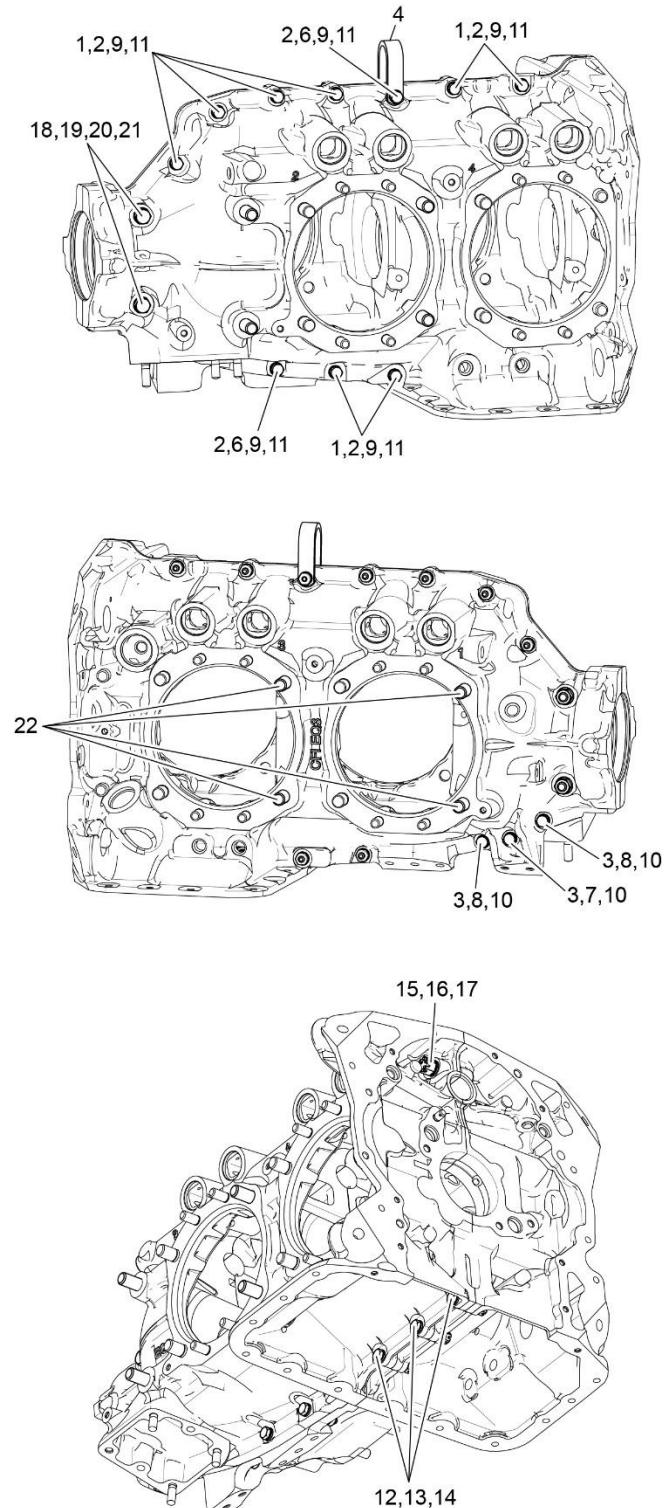


**Figure 9B**  
**Crankcase Attaching Parts**  
**(Use with Crankcase Assembly P/N 11U28752-1S3)**

**POWER SECTION**

**Figure 9B - Crankcase Attaching Parts**  
**(Use with Crankcase Assembly P/N 11U28752-1S3)**

<b>Figure Item</b>	<b>Code</b>	<b>Part Number</b>	<b>Description</b>	<b>Units per Assembly</b>
1		LW-25-1.50	BOLT, 1/4-20 x 1-1/2 long, hex. head	8
2		STD-8	WASHER, 1/4 plain	17
3		STD-35	WASHER, 5/16 plain	3
4		60803	STRAP, Lifting	1
5		LW-25-1.75	BOLT, 1/4-20 x 1-3/4 long, hex. head	1
6		LW-25-1.13	BOLT, 1/4-20 x 1-1/8 long, hex. head	1
7		LW-31-1.25	BOLT, 5/16-18 x 1-1/4 long, hex. head	1
8		LW-31-1.16	BOLT, 5/16-18 x 1-5/32 long, hex. head	2
9		STD-160	WASHER, 1/4 lock, internal teeth	10
10		STD-475	WASHER, 5/16 lock, internal teeth	3
11		STD-1411	NUT, 1/4-20 plain	9
12		LW-25S1.50	BOLT, 1/4-20 x 1-1/2 long, hex. head, drilled	3
13	<b>AR</b>	STD-8	WASHER, 1/4 plain	9
14		STD-2249	NUT, 1/4-20 slotted	3
15		STD-33	WASHER, 3/8 plain	1
16		NAS1149F0632P	WASHER, 3/8 plain, thin	1
17		STD-872	NUT, 3/8-24 slotted	1
18		AN6-34A	BOLT, 3/8-24 x 3-37/64 long, hex. head	1
19		STD-33	WASHER, 3/8 plain	3
20		STD-678	WASHER, 3/8 lock, internal teeth	2
21		STD-596	NUT, 3/8-24 plain	2
22		01A22453	STUD, 1/2-20 x 10-1/2 long	4
AR – As Required				

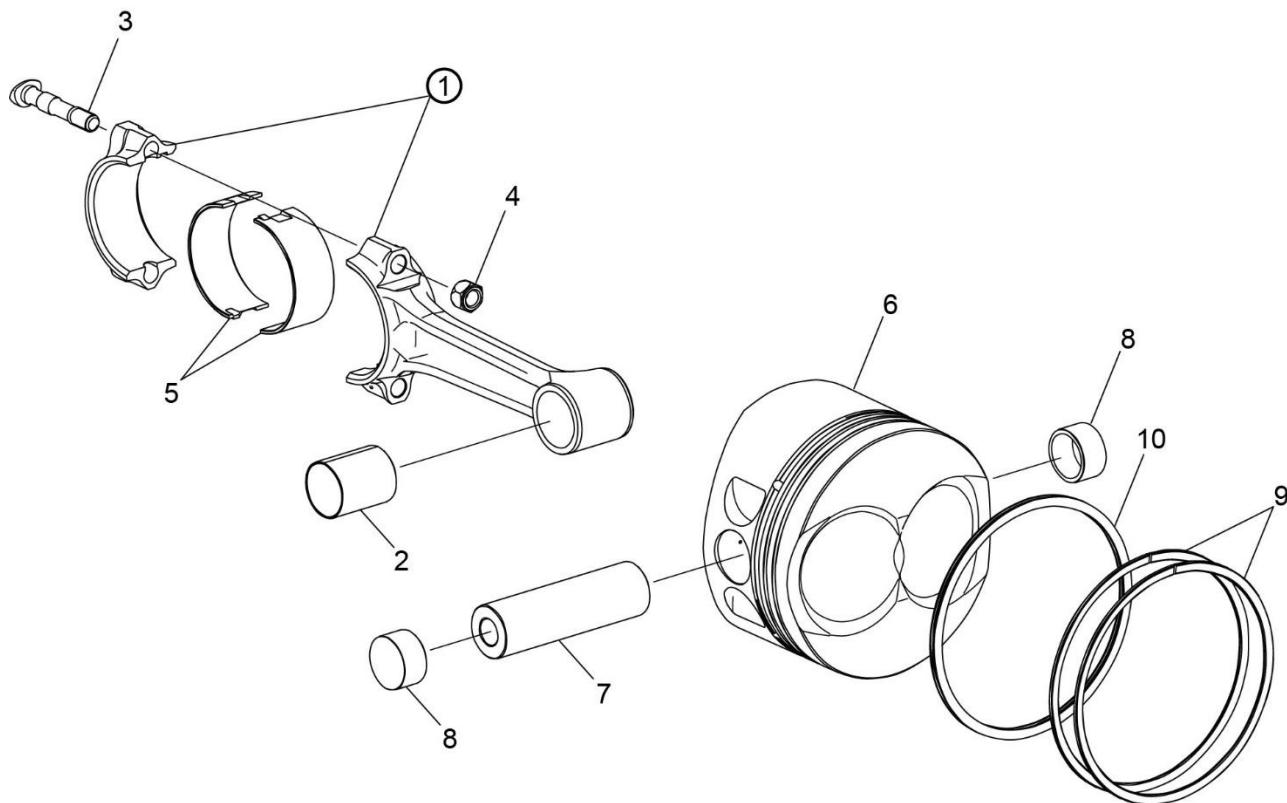


| **Figure 10**  
**Connecting Rods, Pistons, and Ring Assemblies**

**CYLINDER SECTION****| Figure 10 - Connecting Rods, Pistons, and Ring Assemblies**

Figure Item	Code	Part Number	Description	Units per Assembly			
				A 1 A 6	A 3 A 6	A 1 B 6	A 3 B 6
1		77450-S	CONNECTING ROD ASSEMBLY	4	4	4	4
2		01K28983	BUSHING, Connecting rod, upper	4	4	4	4
3		75060	BOLT, Connecting rod	8	8	8	8
4		LW-12186	NUT, Connecting rod bolt	8	8	8	8
5		18M23887	BEARING, Connecting rod	8	8	8	8
6		14E23911	PISTON, Compression ratio 8.90:1	4	4	4	4
7		14J22048	PIN, Piston	4	4	4	4
8	*	72198	PLUG, Piston pin	8	8	8	8
9		14G22050	RING, Piston compression	8	8	8	8
10		14H29865	RING, Piston oil regulating, expander type	4	4	4	4

\* Refer to the latest revision of Lycoming Service Instruction No. 1267

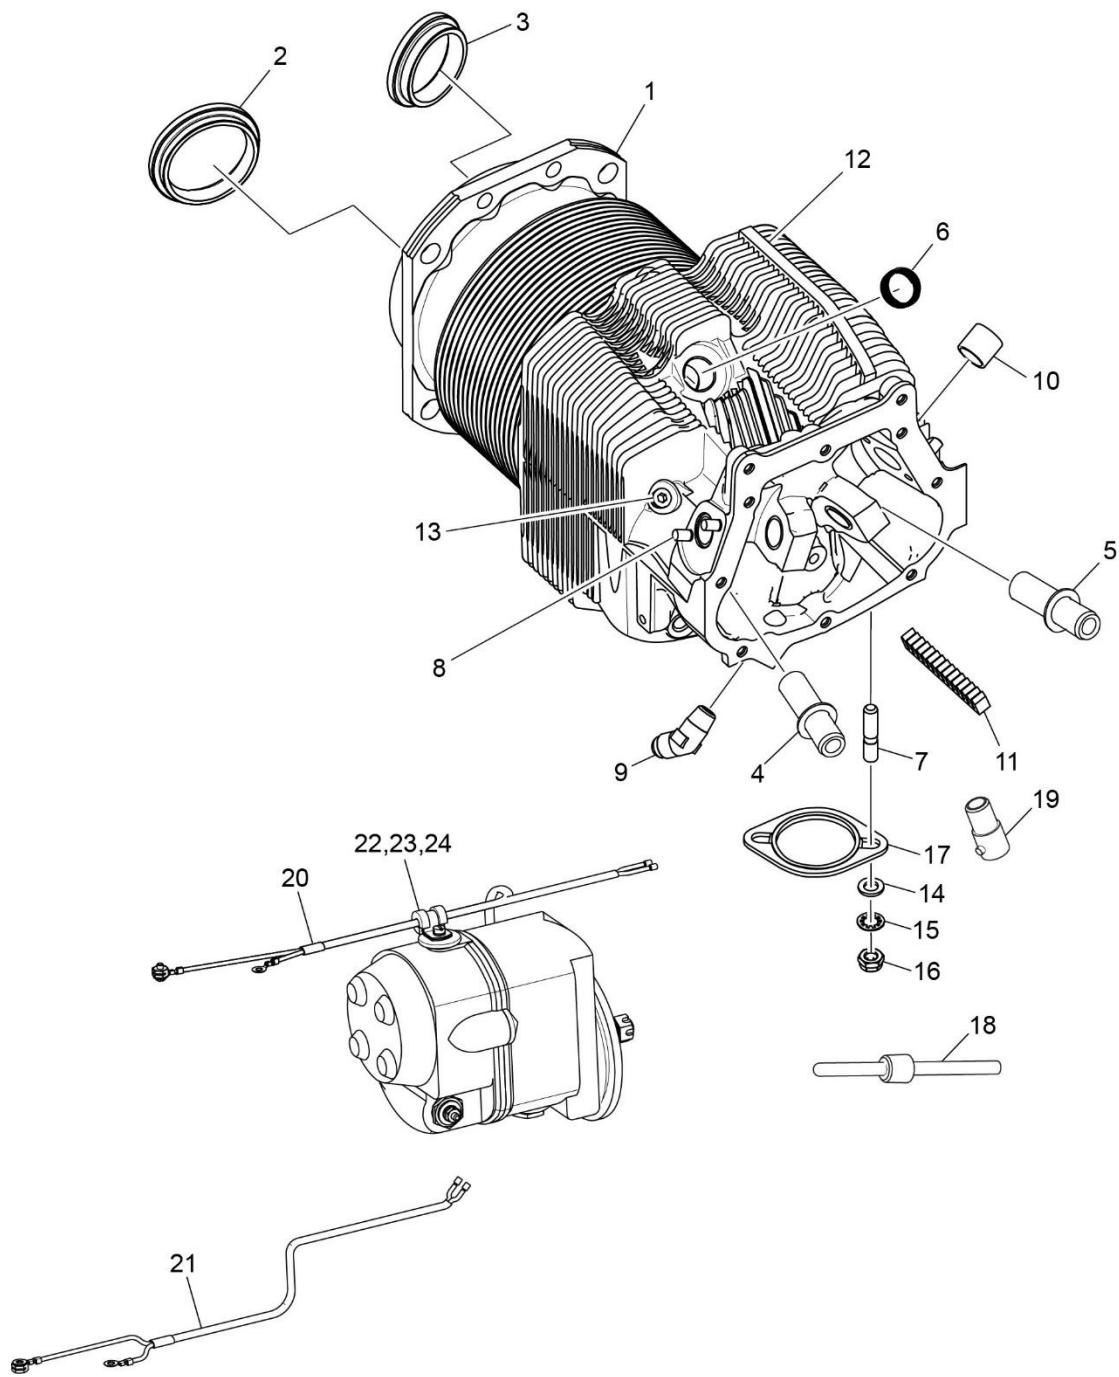


**|Figure 11**  
**Cylinder Assembly**

**CYLINDER SECTION****Figure 11 - Cylinder Assembly**

Figure Item	Code	Part Number	Description	Units per Assembly			
				A 1 A 6	A 3 A 6	A 1 B 6	A 3 B 6
1		16A26081	CYLINDER AND HEAD ASSEMBLY, Nitrided	4	4	4	4
2		72212	SEAT, Intake valve	4	4	4	4
3		16T19468	SEAT, Valve, exhaust	4	4	4	4
4		66713-P05	GUIDE, Valve, intake	4	4	4	4
5		75838-P05	GUIDE, Valve, exhaust	4	4	4	4
6		69260	INSERT, Spark plug, 18-1.5 MM	8	8	8	8
7		31C-13	STUD, 5/16-18 x 1-5/8 long	8	8	8	8
8		25C-8	STUD, 1/4-20 x 1.00 long	16	16	16	16
9		MS20823-6D	ELBOW, 45°, 3/8 flared tube	4	4	4	4
10		66670	BUSHING, Rocker shaft, inner	16	16	16	16
11		72343	STABILIZER, Cylinder head fins, 15 teeth	4	4	4	4
12		72344	STABILIZER, Cylinder head fins, 26 teeth	4	4	4	4
13		1102	PLUG, 1/8-27 NPT, Allen head	4	4	4	4
14		STD-35	WASHER, 5/16 plain	8	8	8	8
15		STD-475	WASHER, 5/16 lock, internal teeth	8	8	8	8
16		STD-1410	NUT, 5/16-18 plain	8	8	8	8
17	*	75118	GASKET, Exhaust flange	8	8	8	8
	*	77611	GASKET, Exhaust flange		4		4
18		LW-18752	THERMOCOUPLE, K, cyl. head bayonet	4		4	4
19		AN4076-1	FITTING, Temp. measuring element	4		4	4
20		05U22561	THERMOCOUPLE, Installation, K type	2		2	2
21		LW-18756	WIRE ASSY, mag thermo (K-type)	2		2	2
22		LW-16266-0-19	CLAMP, Cushion 0.19 I.D.	2		2	2
23		STD-380	SCREW, No. 8-32 x 3/8 long dr	2		2	2
24		STD-250	WASHER, No. 8 spring lock	2		2	2

\* This part is shipped loose with the engine.

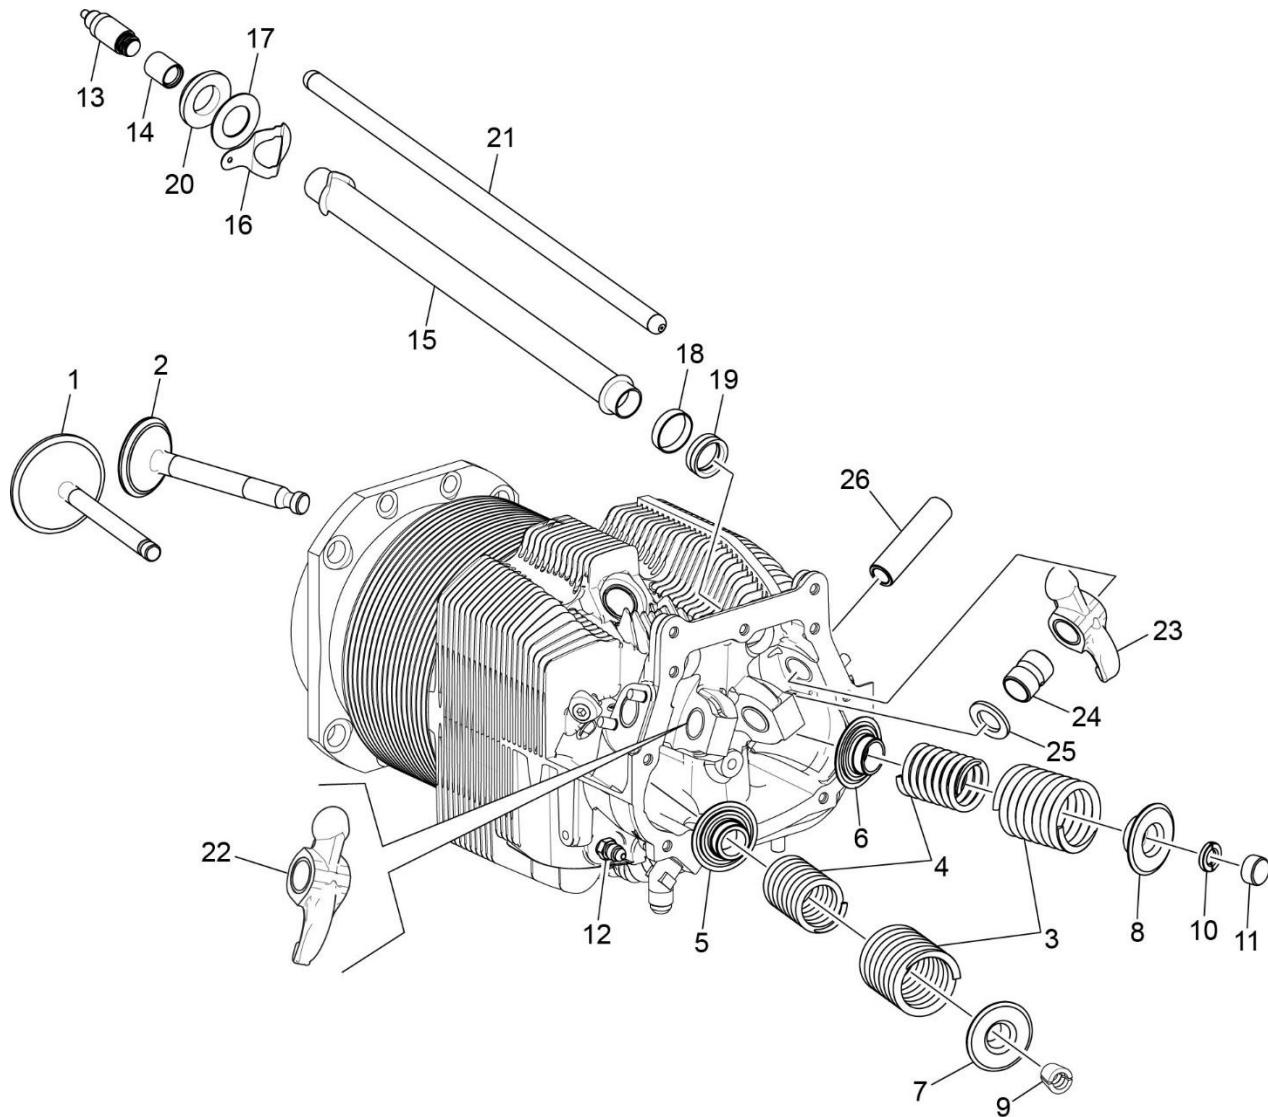

**| Figure 12**  
**Valve Assembly and Related Parts**

**CYLINDER SECTION****| Figure 12 - Valve Assembly and Related Parts**

Figure Item	Code	Part Number	Description	Units per Assembly			
				A 1 A 6	A 3 A 6	A 1 B 6	A 3 B 6
1		17A23946	VALVE, Intake	4	4	4	4
2		17B23935	VALVE, Exhaust	4	4	4	4
3		17D29056	SPRING, Valve, outer	8	8	8	8
4		17D29057	SPRING, Valve, inner	8	8	8	8
5		LW-13321	SEAT, Valve spring, lower intake	4	4	4	4
6		LW-13322	SEAT, Valve spring, lower exhaust	4	4	4	4
7		LW-10077	SEAT, Valve spring, upper intake	4	4	4	4
8		LW-16475	SEAT, Valve spring, upper exhaust	4	4	4	4
9		60009	KEY, Valve, intake	8	8	8	8
10		17C21191	KEY, Valve, exhaust	8	8	8	8
11		17C19386	CAP, Valve stem, exhaust	4	4	4	4
12		02G21382	NIPPLE, Nozzle pressure gauge				1
13		15B26066	PLUNGER ASSEMBLY, Hydraulic tappet	8	8	8	8
14		15B21319	SOCKET, Hydraulic tappet	8	8	8	8
15		15G23462	SHROUD TUBE ASSEMBLY, Push rod	8	8	8	8
16		15H21201	SPRING, Shroud tube	16	16	16	16
17		01L23459	WASHER, 3/4 I.D. x 1-3/8 O.D. x 1/32	8	8	8	8
18		61503	SLEEVE, Shroud tube	8	8	8	8
19		LW-18661	SEAL, Shroud tube	8	8	8	8
20		06A23493	SEAL, Shroud tube	8	8	8	8

(continued on next page)


**CYLINDER SECTION**
**| Figure 12 - Valve Assembly and Related Parts (Cont.)**

Figure Item	Code	Part Number	Description	Units per Assembly			
				A 1 A 6	A 3 A 6	A 1 B 6	A 3 B 6
21		15F28835-51	ROD ASSEMBLY, Push (A total of 8 required)	AR	AR	AR	AR
		15F28835-52	ROD ASSEMBLY, Push (A total of 8 required)	AR	AR	AR	AR
		15F28835-53	ROD ASSEMBLY, Push (A total of 8 required)	AR	AR	AR	AR
		15F28835-54	ROD ASSEMBLY, Push (A total of 8 required)	AR	AR	AR	AR
		15F28835-55	ROD ASSEMBLY, Push (A total of 8 required)	AR	AR	AR	AR
		15F28835-56	ROD ASSEMBLY, Push (A total of 8 required)	AR	AR	AR	AR
		15F28864-17	ROD ASSEMBLY, Push (A total of 8 required)	AR	AR	AR	AR
		15F28864-18	ROD ASSEMBLY, Push (A total of 8 required)	AR	AR	AR	AR
		15F28864-19	ROD ASSEMBLY, Push (A total of 8 required)	AR	AR	AR	AR
		15F28864-20	ROD ASSEMBLY, Push (A total of 8 required)	AR	AR	AR	AR
		15F28864-21	ROD ASSEMBLY, Push (A total of 8 required)	AR	AR	AR	AR
		15F28864-22	ROD ASSEMBLY, Push (A total of 8 required)	AR	AR	AR	AR
22	*	17F21188	ROCKER ASSEMBLY, Valve, intake	4	4	4	4
23	*	17F21187	ROCKER ASSEMBLY, Valve, exhaust	4	4	4	4
24		74389	BUSHING, Valve rocker	8	8	8	8
25		71549	WASHER, Thrust, valve rocker	8	8	8	8
26		72626	SHAFT, Valve rocker	8	8	8	8

AR – As Required

\* Due to the size of the area where the part number is stamped, the last five digits (19357) could be all that is shown of the part number.


This page intentionally left blank

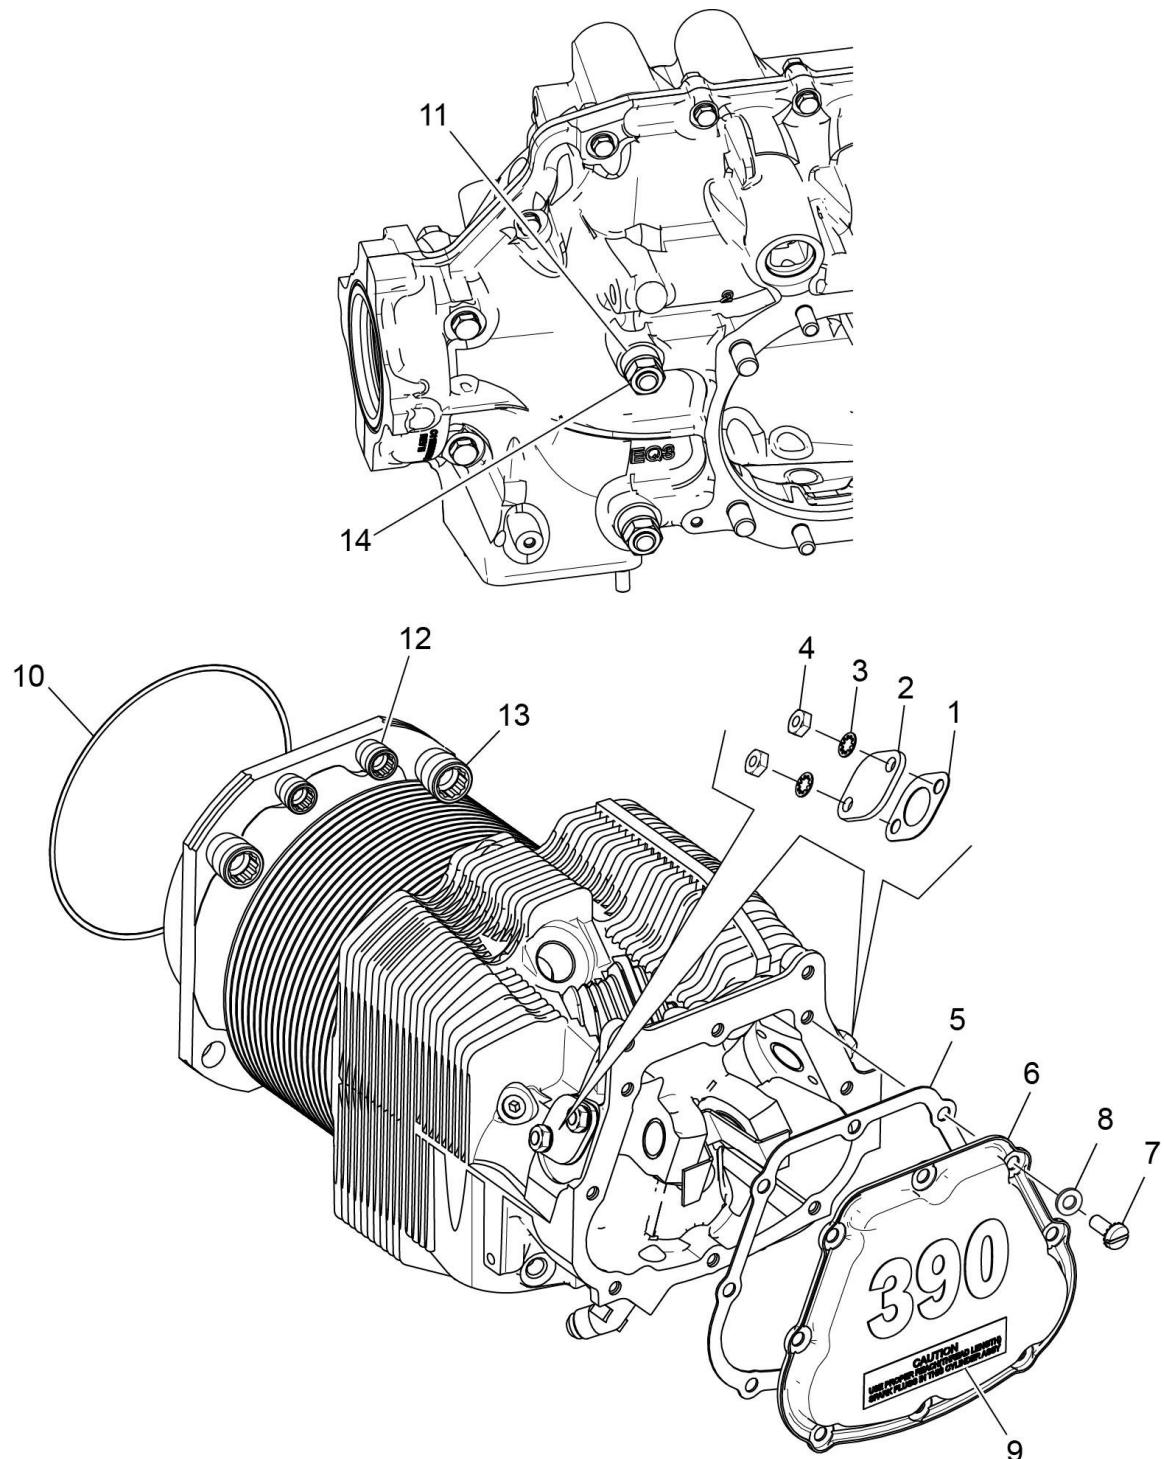

| **Figure 13**  
Cylinder Related Parts

**CYLINDER SECTION****| Figure 13 - Cylinder Related Parts**

Figure Item	Code	Part Number	Description	Units per Assembly			
				A 1 A 6	A 3 A 6	A 1 B 6	A 3 B 6
1		66732	GASKET, Valve rocker shaft cover	8	8	8	8
2		72710	COVER, Valve rocker shaft	8	8	8	8
3		STD-160	WASHER, 1/4 lock, internal teeth	16	16	16	16
4		STD-1411	NUT, 1/4-20 plain	16	16	16	16
5		67193	GASKET, Rocker box cover	4	4	4	4
		06B26811	GASKET, Rocker box cover (silicone)				4
6		17J26469	COVER ASSEMBLY, Rocker box	4	4	4	4
		17J26469-C	COVER ASSEMBLY, Rocker box				4
7		STD-1925	SCREW, 1/4-20 x 5/8 long, pan hd., self-locking	32	32	32	32
		01F22880	SCREW, 1/4-20 X 0.595 LG.(stainless)				32
8		MS35335-33	WASHER				32
9		74494	PLATE, Spark plug reach caution	4	4	4	4
10		71481	RING, Oil seal, 3/32 diameter x 4-27/32 long	4	4	4	4
11		74887	SPACER, 33/64 I.D. x 7/8 O.D. x 3/8 thick	2	2	2	2
12		71134	NUT, 3/8-24 NF-3	16	16	16	16
13		71133	NUT, 1/2-20 NF-3	16	16	16	16
14		STD-2090	NUT, 1/2-20 plain	2	2	2	2

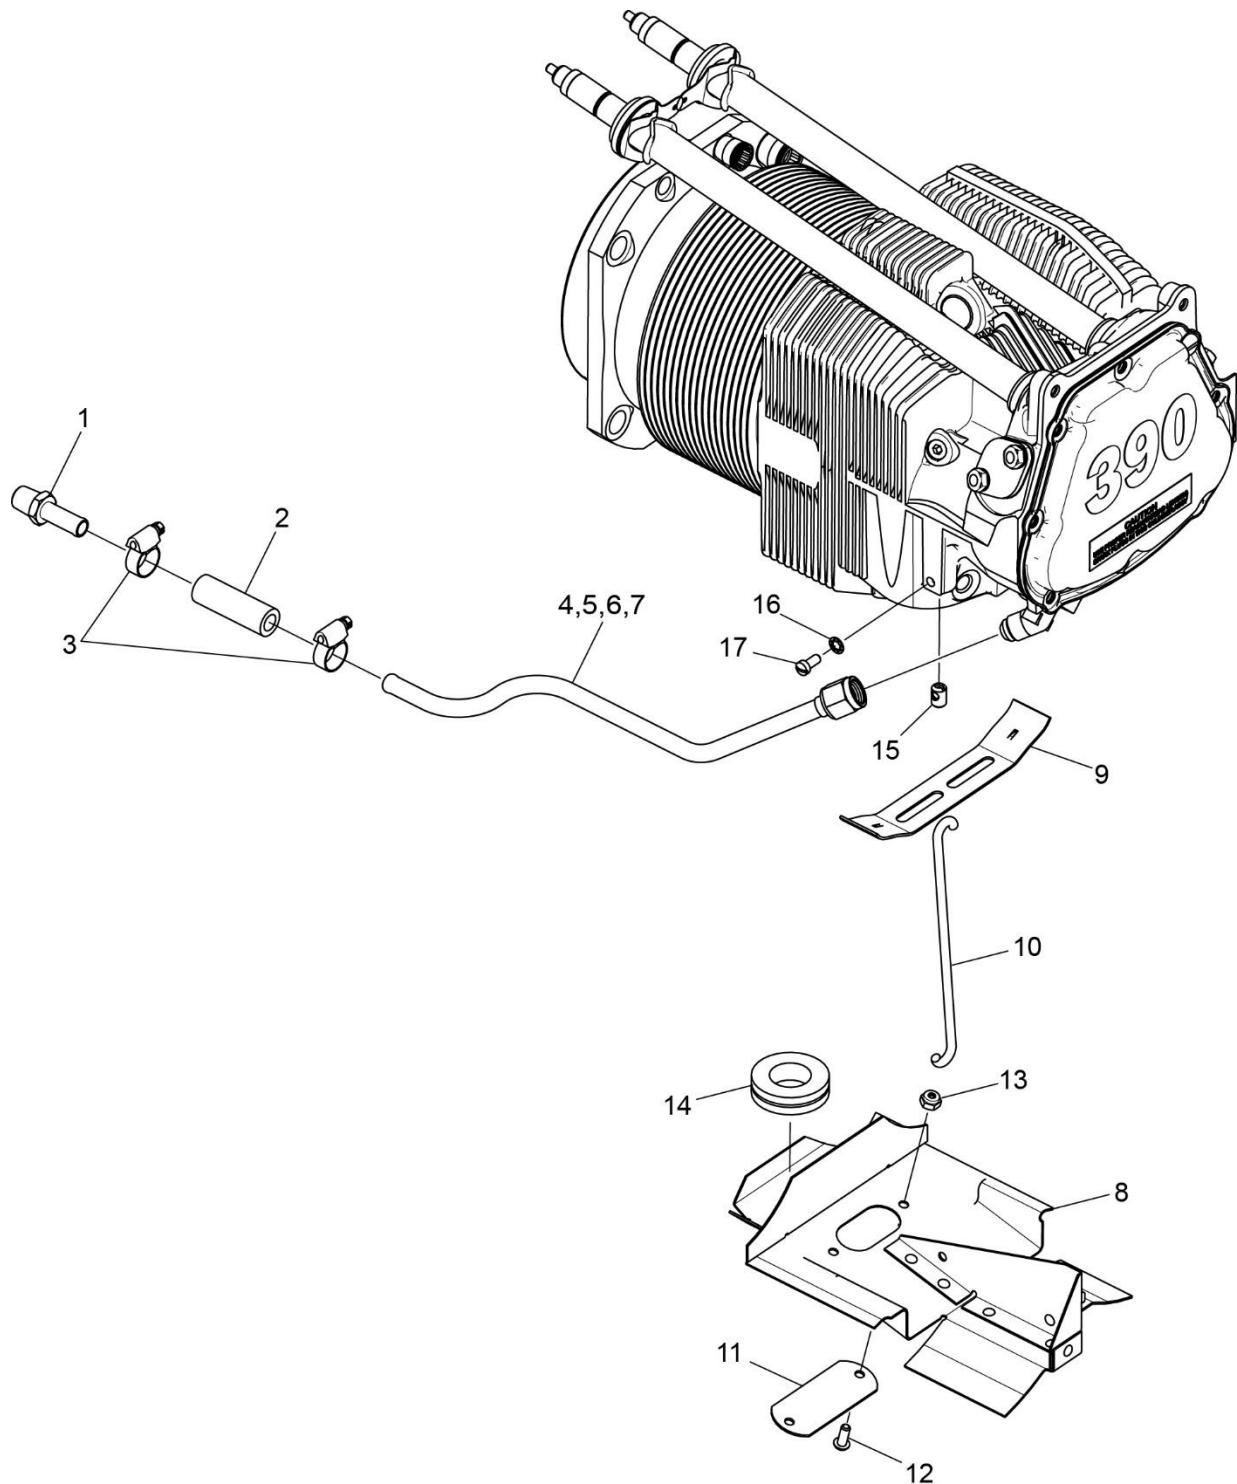

**| Figure 14**  
**Cylinder Head Drain Tubes and Intercylinder Cooling Baffles**


**CYLINDER SECTION****| Figure 14 - Cylinder Head Drain Tubes and Intercylinder Cooling Baffles**

Figure Item	Code	Part Number	Description	Units per Assembly
1		STD-684	NIPPLE, Straight, 3/8 I.D. hose	4
2		STD-2180	HOSE, 3/8 x 1-13/16 long	4
3	***	LW-15592-5-04	CLAMP, Hose, 7/16 O.D.	8
	***	LW-15592-5-05	CLAMP, Hose	8
4		72702	TUBE ASSEMBLY, Cyl. head oil drain, cyl. No. 1	1
5		72703	TUBE ASSEMBLY, Cyl. head oil drain, cyl. No. 2	1
6		74808	TUBE ASSEMBLY, Cyl. head oil drain, cyl. No. 3	1
7		73027	TUBE ASSEMBLY, Cyl. head oil drain, cyl. No. 4	1
8	*	75338	BAFFLE ASSEMBLY, Intercylinder	1
	**	75337	BAFFLE ASSEMBLY, Intercylinder	1
9		71611	RETAINER, Intercylinder baffle	2
10		17M23284	HOOK, Intercylinder baffle retainer	2
11		72834	COVER, Baffle ignition cable hole	2
12		STD-692	SCREW, No. 10-32 x 1/2 long, round head	4
13		STD-670	LOCK NUT, No. 10-32	4
14	**	MS35489-20X	GROMMET	1
15		65614	PLUG, Baffle attaching	4
16		STD-251	WASHER, No. 10, internal lock	4
17		STD-1686	SCREW, No. 10-32 x 7/16 long	4

\* Install on left side cylinders No. 2 and 4

\*\* Install on right side between cylinders No. 1 and 3


\*\*\* Use only in complete sets of the same part number

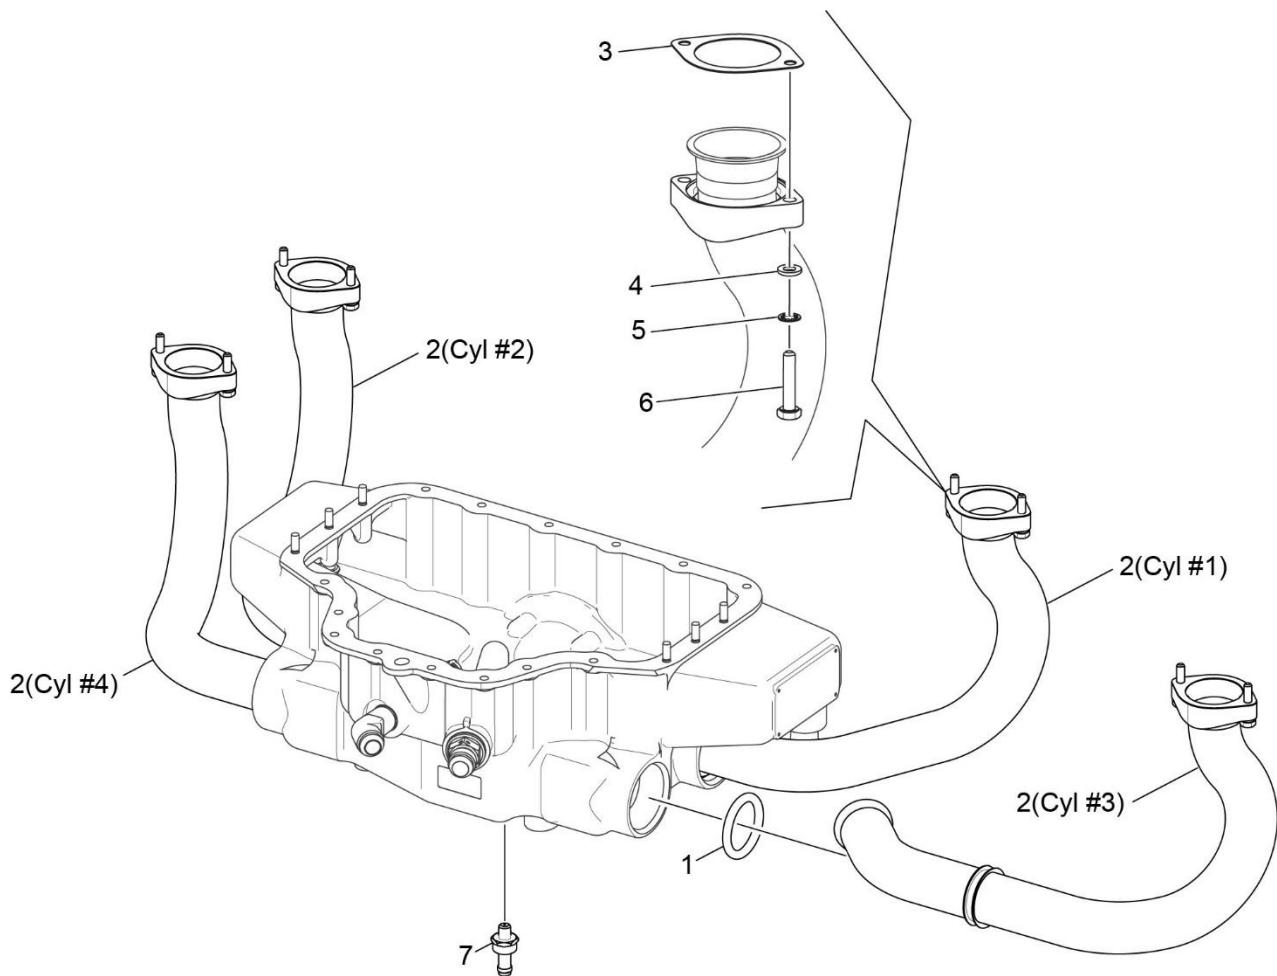

**| Figure 15**  
**Intake Pipes Assembly**

**CYLINDER SECTION****| Figure 15 - Intake Pipes Assembly**


Figure Item	Code	Part Number	Description	Units per Assembly
1		77569	SEAL, Intake pipe	4
2		78741	PIPE, Intake, cylinder No. 1	1
		78742	PIPE, Intake, cylinder No. 2	1
		78743	PIPE, Intake, cylinder No. 3	1
		78744	PIPE, Intake, cylinder No. 4	1
3		71973	GASKET, 2 bolt flange, 1-3/4 I.D.	4
4		STD-8	WASHER, 1/4 plain	8
5		STD-160	WASHER, 1/4 lock, internal teeth	8
6		LW-25-1.25	BOLT, 1/4-20 x 1-1/4 long, hex. head	8
7		75444	ADAPTER ASSEMBLY, Fuel drain valve	1

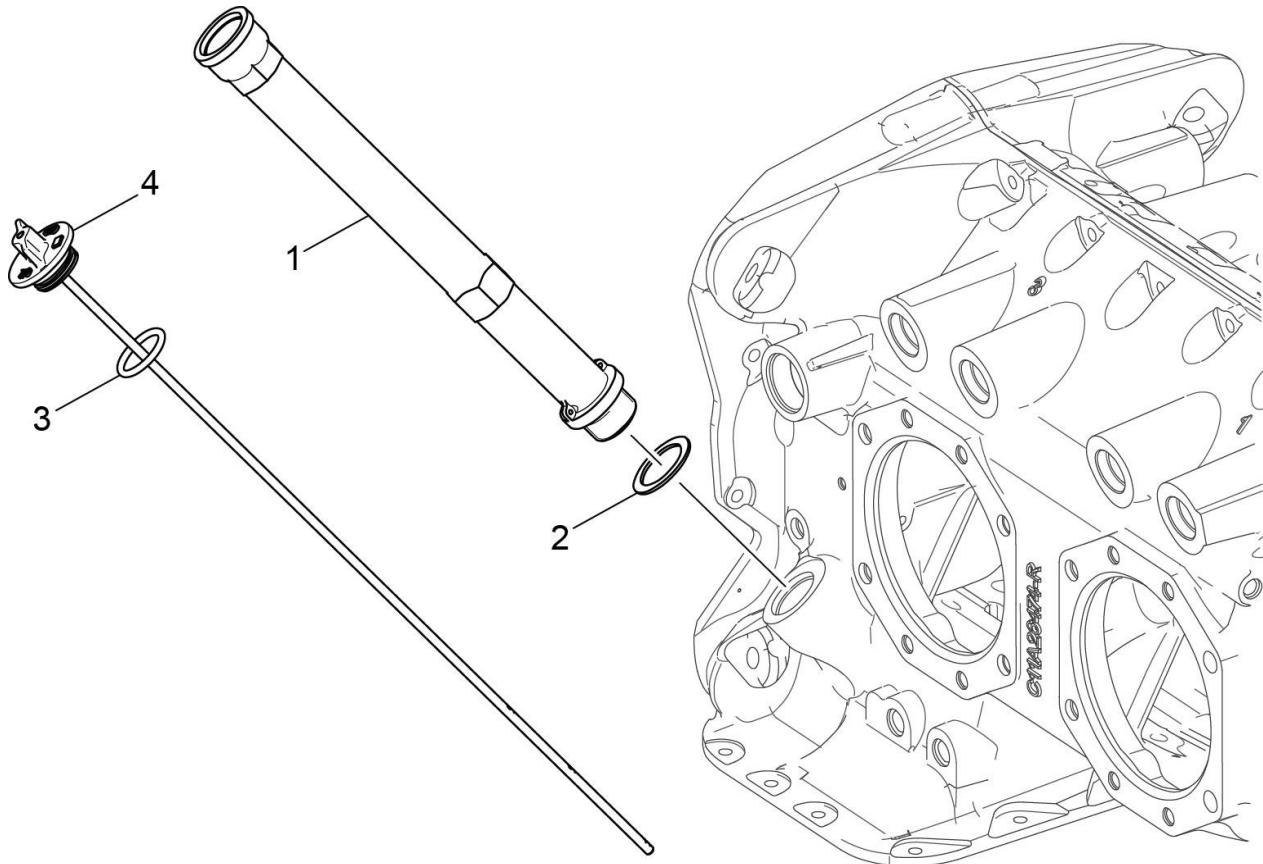

**| Figure 16**  
**Oil Level Gage**

**LUBRICATION SYSTEM****| Figure 16 - Oil Level Gage**


Figure Item	Code	Part Number	Description	Units per Assembly			
				A 1 A 6	A 3 A 6	A 1 B 6	A 3 B 6
1		75736	TUBE, Oil level gage (Long 11.57 in.)	1	1	1	1
		56C23075	TUBE, Oil level gage (Long 15.08 in.)	1			1
2		72059	GASKET, Oil level gage	1	1	1	1
3		74068	RING, Oil level gage plug	1	1	1	1
		74065	RING, Oil level gage plug	1			1
4		LW-14760	GAGE ASSEMBLY, Oil level	1	1	1	1
		LW-14763	GAGE ASSEMBLY, Oil level	1			1

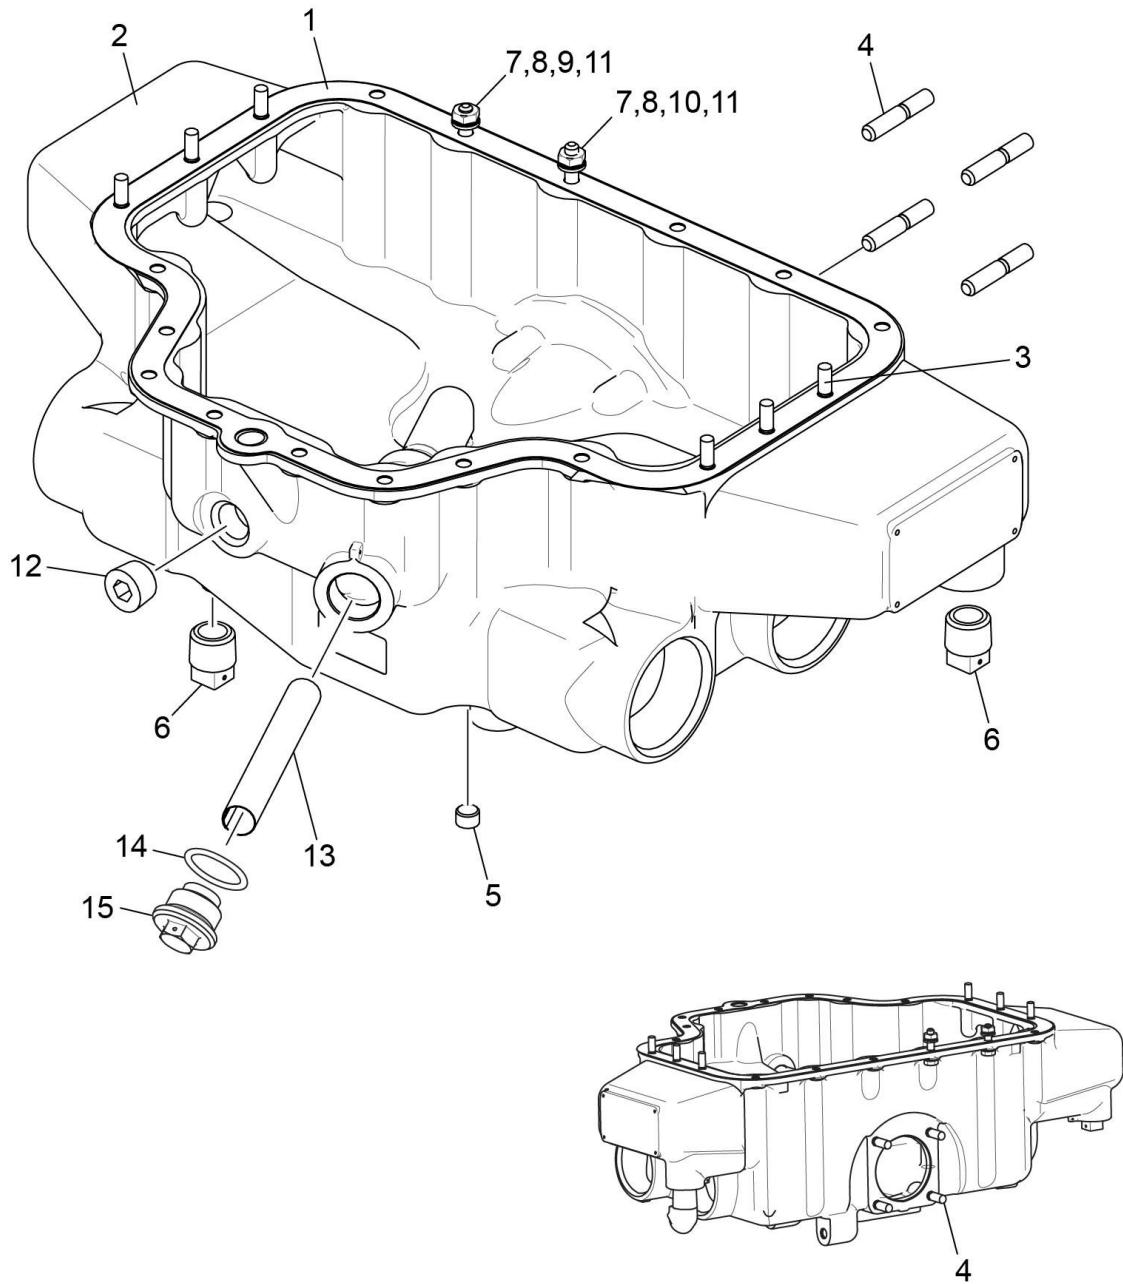

| **Figure 17**  
**Oil Sump Assembly and Oil Suction Screen**

**LUBRICATION SYSTEM****| Figure 17 - Oil Sump Assembly and Oil Suction Screen**


Figure Item	Code	Part Number	Description	Units per Assembly			
				A 1 A 6	A 3 A 6	A 1 B 6	A 3 B 6
1		LW-13353	GASKET, Oil sump	1	1	1	1
2		LW-13864	SUMP ASSEMBLY, Oil	1	1	1	1
3		61400	STUD, 1/4-20 x 1-3/16 long	6	6	6	6
4		31C-14	STUD, 5/16-18 x 1-3/4 long	4	4	4	4
5		1102	PLUG, 1/8 pipe	1	1	1	1
6		STD-551	PLUG, 1/2-14 NPT, square head, drilled	2	2	2	2
7		STD-8	WASHER, 1/4 plain	26	26	26	26
8		STD-160	WASHER, 1/4 lock, internal teeth	20	20	20	20
9		LW-25-0.94	BOLT, 1/4-20 x 15/16 long, hex. head	12	12	12	12
10		LW-25-1.13	BOLT, 1/4-20 x 1-1/8 long, hex. head	2	2	2	2
11		STD-1411	NUT, 1/4-20 plain	12	12	12	12
12		STD-2229	PLUG, 1/2 NPT, Allen head	1	1	1	1
13		70484	SCREEN, Oil suction	1	1	1	1
14		06E19769-1.00	GASKET, Annular, 1.00 I.D.	1	1	1	1
15		LW-12545	PLUG, 5/8 hex. head x 1.00-20 thread	1	1	1	1

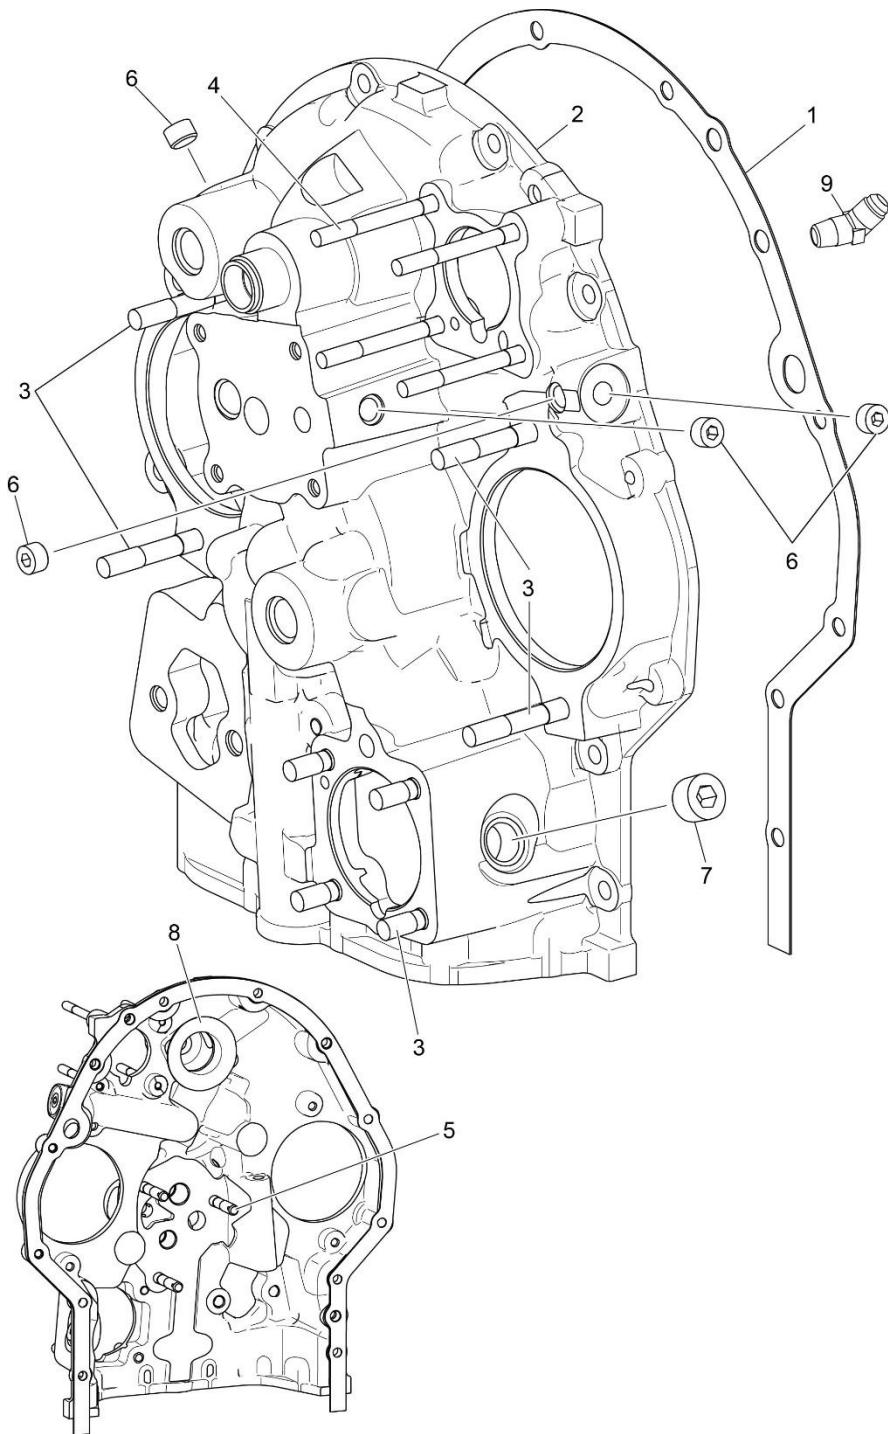

| **Figure 18**  
**Accessory Housing Assembly**

**ACCESSORY DRIVES****| Figure 18 - Accessory Housing Assembly**


Figure Item	Code	Part Number	Description	Units per Assembly			
				A 1 A 6	A 3 A 6	A 1 B 6	A 3 B 6
1		73818	GASKET, Accessory housing	1	1	1	1
2		21A21533-30	HOUSING, ACCESSORY ASSEMBLY, Studding	1	1	1	1
		21A21533-26	HOUSING ASSEMBLY, Accessory studding		1		
		21A21533-27	HOUSING ASSEMBLY, Accessory studding	1			
		21A21533-33	HOUSING ASSEMBLY, Accessory studding				1
3		31C-12	STUD, 5/16-18 x 1-1/2 long	8	8	8	8
4		25C-22	STUD, 1/4-20 x 2-3/4 long	4	4	4	4
		25C-12	STUD, 1/4-20 x 1-1/2 long		4		
		61400	STUD, 1/4-20 x 1-3/16 long				4
5		31CD-17	STUD, 5/16-18 x 2-1/8 long drilled	3	3	3	3
6		1102	PLUG, 1/8 pipe	4	4	4	4
7		STD-784	PLUG, 3/8-18 NPT, Allen head	1	1	1	1
8		76119	SHIELD, Accessory breather oil	1	1	1	1
9		MS20823-4	ELBOW, 1/8 NPT to 1/4 flared tube				1

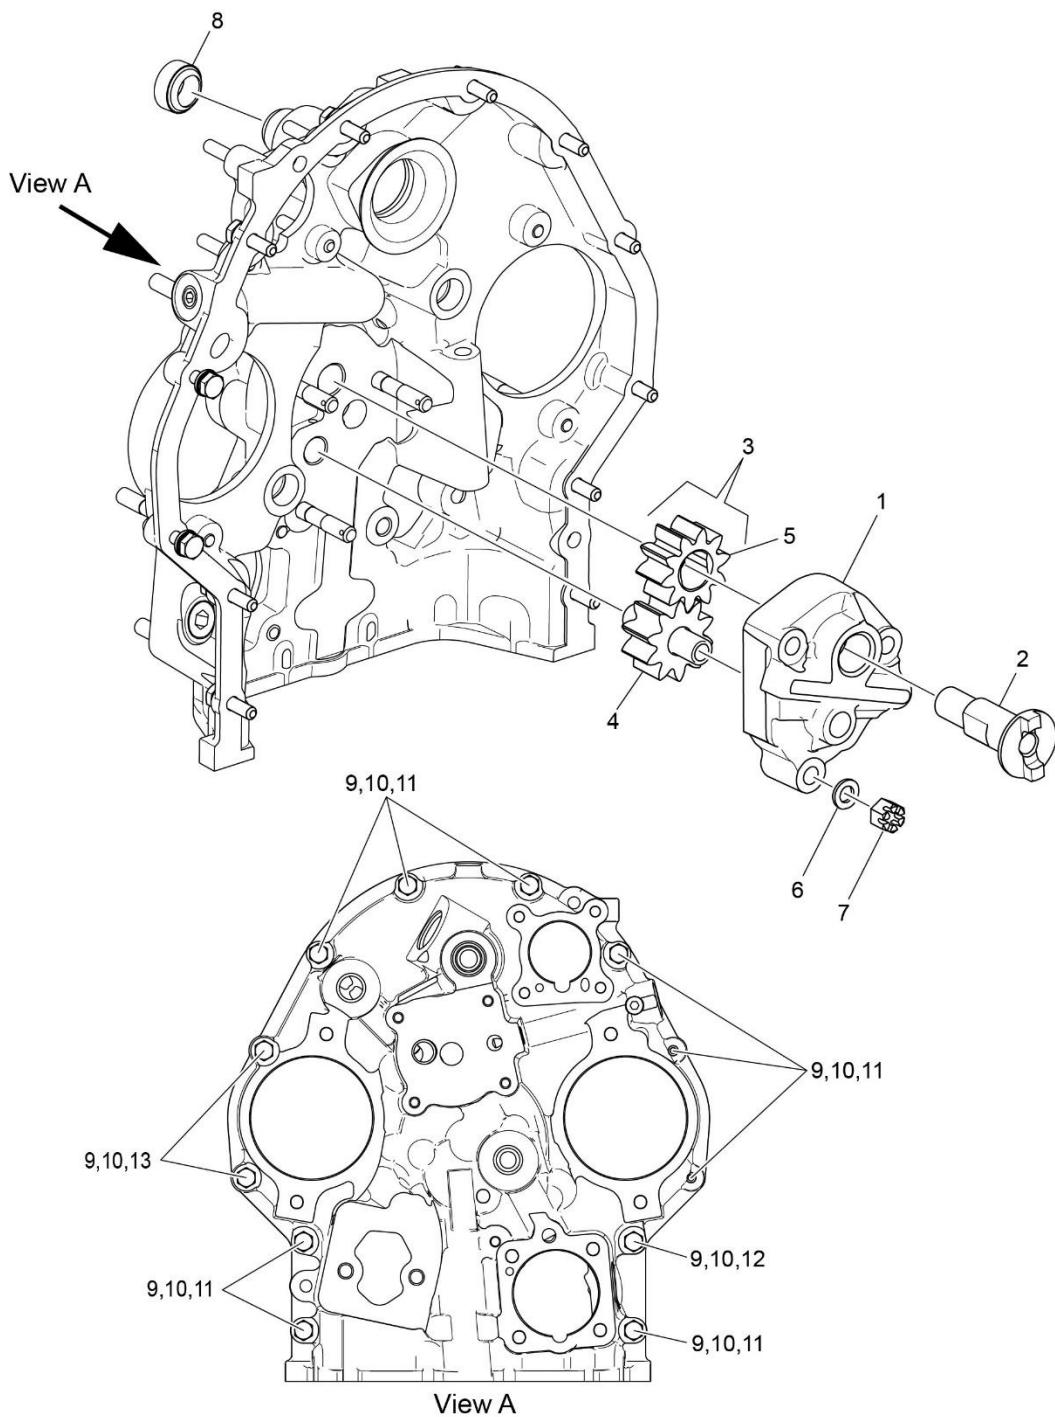

**| Figure 19**  
**Oil Pump Assembly and Accessory Housing Attaching Parts**

**ACCESSORY DRIVES****| Figure 19 - Oil Pump Assembly and Accessory Housing Attaching Parts**

Figure Item	Code	Part Number	Description	Units per Assembly
1		78531	BODY ASSEMBLY, Oil pump	1
2		61174	SHAFT, Oil pump drive	1
3		05K19423-S	IMPELLER KIT	1
4		LW-18110	IMPELLER ASSEMBLY, Oil pump driven	1
5		LW-18109	IMPELLER, Oil pump driven	1
6		STD-35	WASHER, 5/16 plain	3
7		STD-1420	NUT, 5/16-18 slotted	3
8		LW-14260	SEAL, Tachometer drive, oil	1
9		STD-8	WASHER, 1/4 plain	12
10		STD-160	WASHER, 1/4 lock, internal teeth	12
11		LW-25-0.94	BOLT, 1/4-20 x 15/16 long, hex. head	9
12		LW-25-1.13	BOLT, 1/4-20 x 1-1/8 long, hex. head	1
13		LW-25-1.44	BOLT, 1/4-20 x 1-7/16 long, hex. head	2

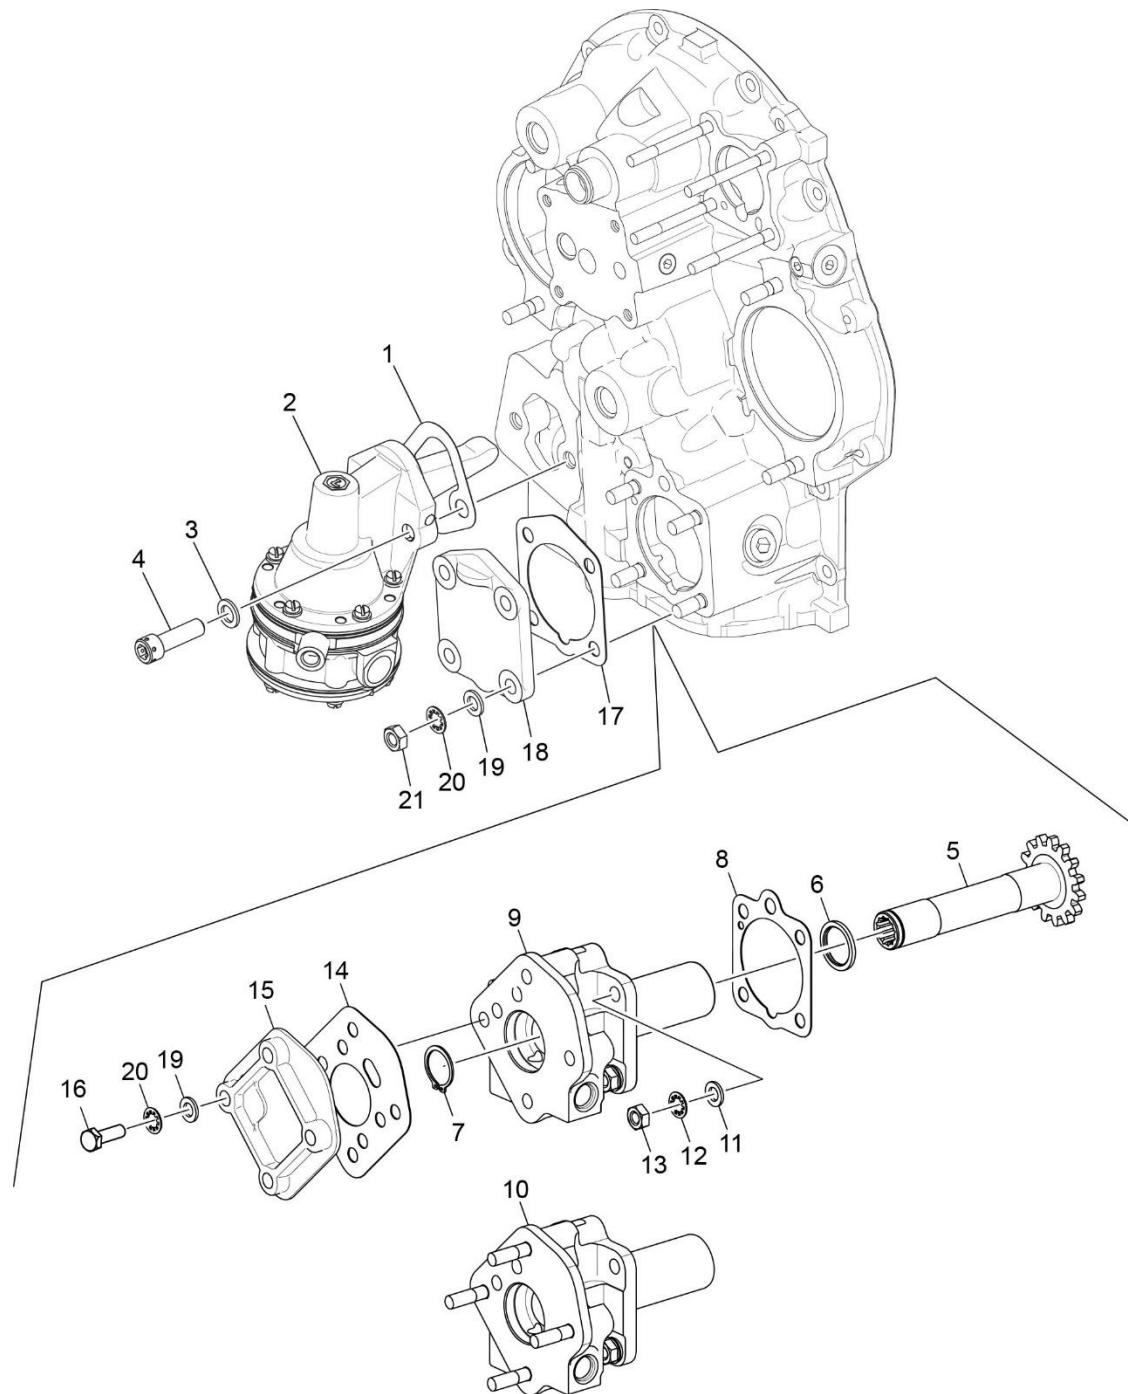


**I Figure 20**  
**Fuel Pump, Propeller Governor Drive Adapter and Cover**

**ACCESSORY DRIVES****| Figure 20 - Fuel Pump, Propeller Governor Drive Adapter and Cover**

Figure Item	Code	Part Number	Description	Units per Assembly			
				A 1 A 6	A 3 A 6	A 1 B 6	A 3 B 6
1		60096	GASKET, Fuel pump	1	1	1	1
2		62B26931	FUEL PUMP, High Pressure	1	1	1	1
3		STD-33	WASHER, 3/8 plain	2	2	2	2
4		STD-1882	SCREW, 3/8-16 x 1-9/32 long, socket head, drilled	2	2	2	2
5		68317	SHAFTGEAR, Propeller Governor Drive	1	1		
6		71596	WASHER, Accessory drive gear	1	1		
7		STD-1221	RING, 13/16 diameter x 1/32 thick	1	1		
8		68315	GASKET, Accessory drive adapter	1	1		
9		78594 ▲	ADAPTER ASSY., Propeller gov. drive	1	1		
10		75153 ■	ADAPTER ASSY., Propeller gov. drive (with studs)	1	1		
		20D28263 ♦	ADAPTER ASSY., Propeller gov. drive (with studs)			1	
11		STD-35	WASHER, 5/16 plain	4	4		
12		STD-475	WASHER, 5/16 lock, internal teeth	4	4		
13		STD-1410	NUT, 5/16-18 plain	4	4		
14		72053	GASKET, Governor	1	1		
15		72378	COVER, Governor drive	1	1		
16		LW-31H1.22	BOLT, 5/16-18 x 1.22 long	1	1		
17		69551	GASKET, Governor			1	1
18		69106	COVER, Governor			1	1
19		STD-35	WASHER, 5/16 plain	4	4	4	4
20		STD-475	WASHER, 5/16 lock, internal teeth	4	4	4	4
21		STD-1410	NUT, 5/16-18 plain	4	4	4	4


■ Woodward governor    ▲ "AN" governor    ♦ Hartzell S-4-5

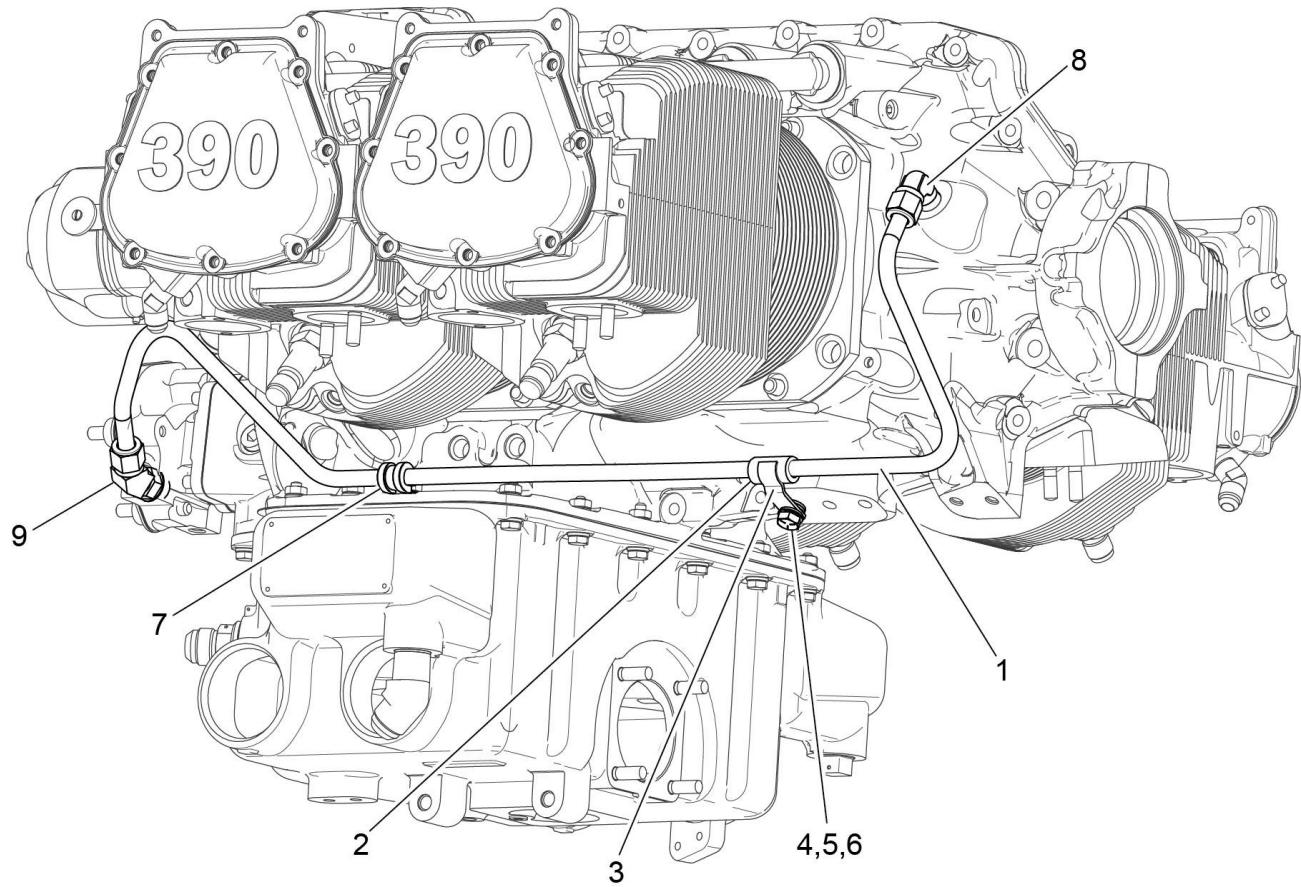

| **Figure 21**  
**Propeller Governor Oil Line Tube Assembly and Attaching Parts**

**ACCESSORY DRIVES****| Figure 21 - Propeller Governor Oil Line Tube Assembly and Attaching Parts**

Figure Item	Code	Part Number	Description	Units per Assembly			
				A 1 A 6	A 3 A 6	A 1 B 6	A 3 B 6
1		75167	TUBE ASSEMBLY, Propeller governor oil	1			
		75730	TUBE ASSEMBLY, Propeller governor oil		1		
2		STD-1930	HOSE, 3/8 I.D. x 1.00 long	1	1		
3		75165	CLIP, Propeller governor oil line support	1	1		
4		STD-35	WASHER, 5/16 plain	3	3		
5		STD-475	WASHER, 5/16 lock, internal teeth	1	1		
6		LW-31-0.94	BOLT, 5/16-18 x 15/16 long, hex. head	1	1		
7		LW-16266-25-	CLAMP, 3/8 I.D. x 1/4 diameter screw	1	1		
8		MS20822-6	ELBOW, 1/4 NPT to 3/8 flared tube, 90°	1	1		
9		74070	ELBOW, 3/8 flared tube and 9/16-18	1	1		

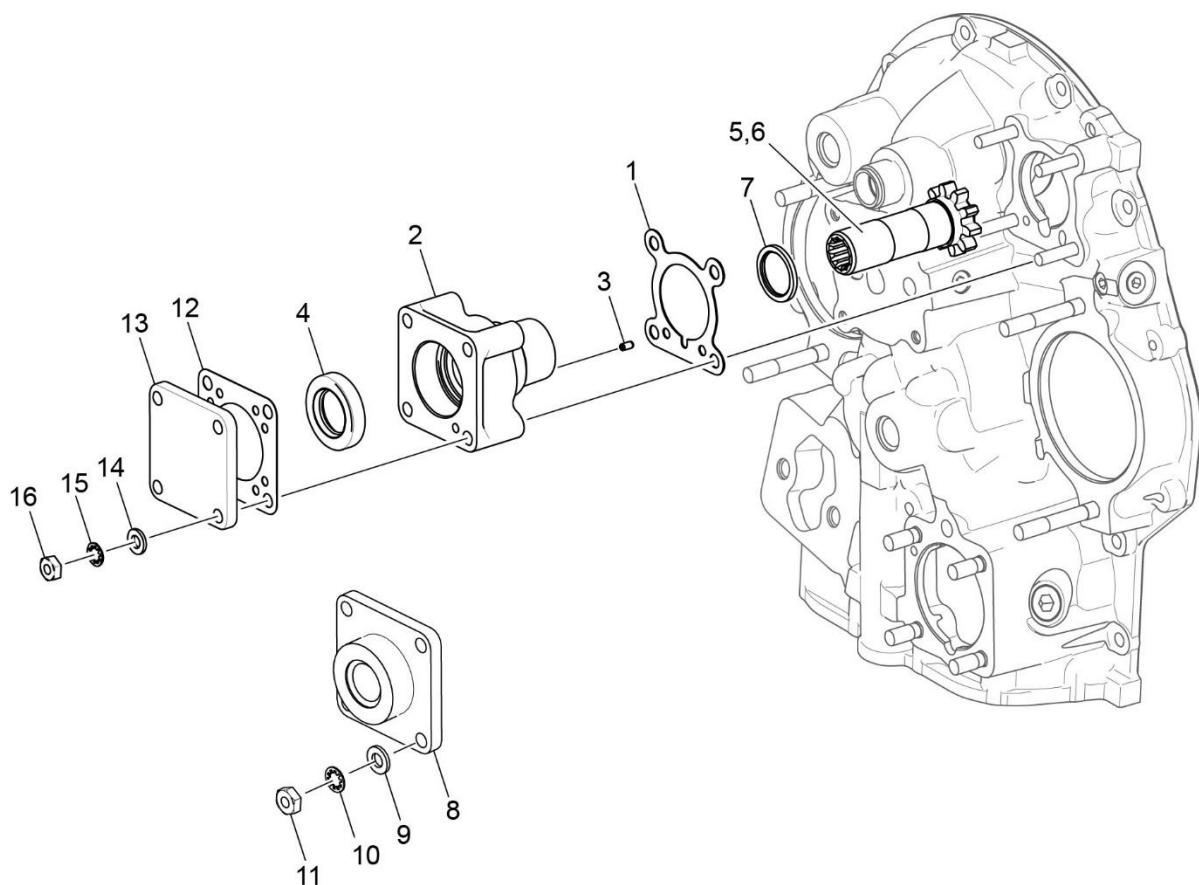


**I Figure 22**  
**Vacuum Pump Drive and Cover**

### ACCESSORY DRIVES

| Figure 22 - Vacuum Pump Drive and Cover

Figure Item	Code	Part Number	Description	Units per Assembly
1		61183	GASKET, Accessory adapter	1
2		61098	ADAPTER ASSEMBLY, Vacuum pump	1
3		STD-1774	PIN, 1/8 diameter x 1/4 long	1
4		06A19956	OIL SEAL, 7/8 I.D. x 1-1/2 O.D. x 5/16	1
5		72970	GEAR ASSEMBLY, Vacuum pump driven	1
6		72962	THRUST BUTTON, Vacuum pump gear	1
7		71596	WASHER, Accessory drive gear	1
8		8313	GASKET, Vacuum pump	1
9		60430	COVER, Vacuum pump	1
10		STD-8	WASHER, 1/4 plain	4
11		STD-160	WASHER, 1/4 lock, internal teeth	4
12		STD-1411	NUT, 1/4-20 plain	4


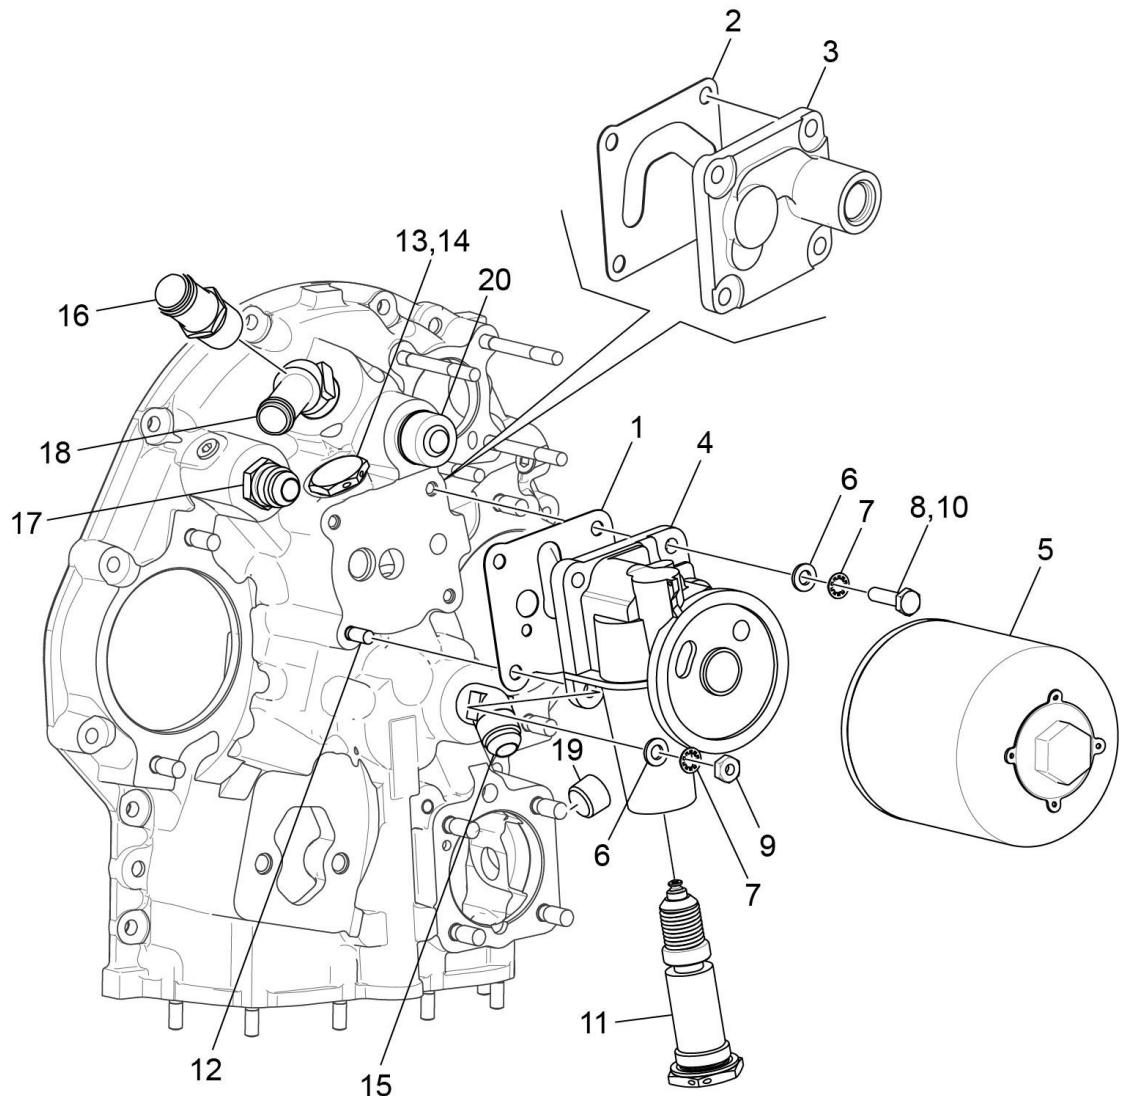


**| Figure 23**  
**Oil Filter Assembly, Oil Cooler Bypass Valve, and Fittings**

**ACCESSORY DRIVES****| Figure 23 - Oil Filter Assembly, Oil Cooler Bypass Valve, and Fittings**

Figure Item	Code	Part Number	Description	Units per Assembly			
				A 1 A 6	A 3 A 6	A 1 B 6	A 3 B 6
1	*	06B23862	GASKET, Oil filter adapter	2	2	2	2
2		06B21644	GASKET, Oil filter base cover (Remote Filter)			1	
3		21M23736	COVER, Oil filter base (Remote Filter)			1	
4		77852	OIL FILTER BASE ASSEMBLY	1	1	1	1
5		LW-13215	OIL FILTER, Short, CH48110-1	1	1	1	1
6		STD-8	WASHER, 1/4 plain	4	4	4	4
7		STD-160	WASHER, 1/4 lock, internal teeth	4	4	4	4
8		LW-25-0.94	BOLT, 1/4-20 x 15/16 long, hex. head			3	
9		STD-1411	NUT, 1/4-20 plain	1	1	1	1
10		LW-25-1.00	BOLT, 1/4-20 x 1.00 long, hex. head	3	3	3	3
		LW-25H-1.00	BOLT, Drilled hex head, 1/4-20 x 1.00 long			1	
11		53E22144	VALVE ASSEMBLY, Temp. control, oil cooler bypass	1	1	1	1
12		25C-10	STUD, 1/4-20 x 1-1/4 long	1	1	1	1
13		06E19769-0.63	GASKET, Annular, 5/8 I.D.	1	1	1	1
14		62417	PLUG, Oil cooler bypass	1	1	1	1
15		MS20823-8	ELBOW, 3/8 NPT, 1/2 flared tube	1	1	1	1
16		71140	FITTING, Breather	1		1	1
17		AN816-8	NIPPLE, 1/2 flared tube	1	1	1	1
18		AN844-10D	ELBOW, Pipe	1	1		
19		62732	CAP, Tachometer drive	1	1	1	1

\* One of the oil filter adapter gaskets P/N 06B23862 is shipped loose with the engine.

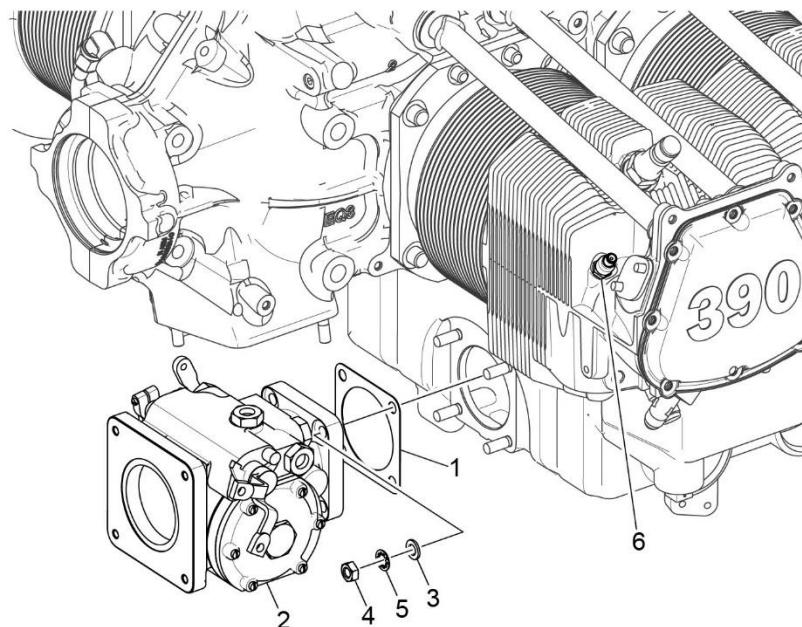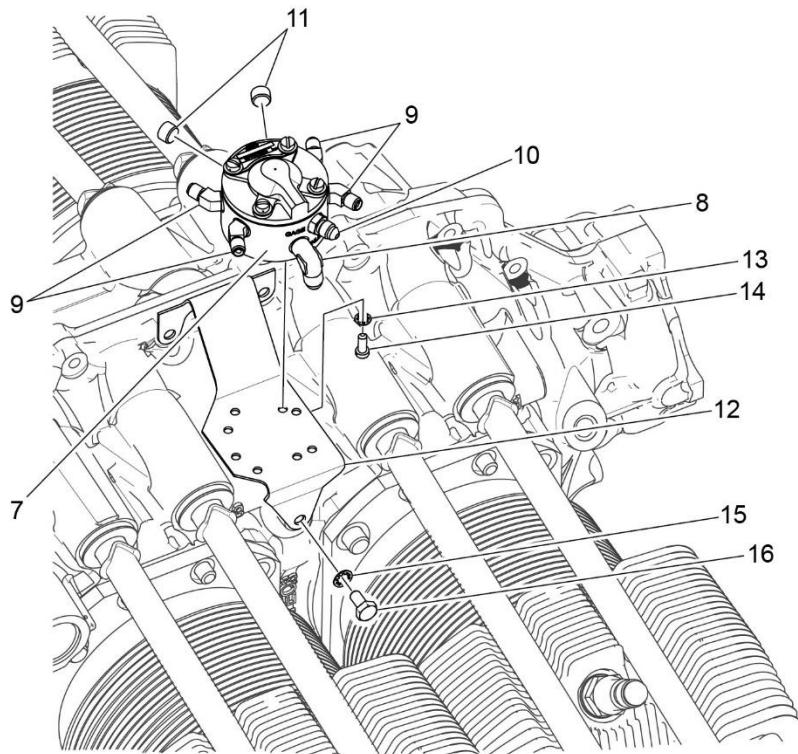


**| Figure 24A**  
**Fuel Injector, Fuel Manifold Assembly, and Brackets**

### FUEL DISTRIBUTION

| Figure 24A - Fuel Injector, Fuel Manifold Assembly, and Brackets


Figure Item	Code	Part Number	Description	Units per Assembly			
				A 1 A 6	A 3 A 6	A 1 B 6	A 3 B 6
1		66224	GASKET, Carburetor	1	1	1	1
2		61J26426	FUEL INJECTOR, LFR-NNSS5 AV 2524054-11	1	1	1	1
3		STD-35	WASHER, 5/16 plain	4	4	4	4
4		STD-1410	NUT, 5/16-18 plain	4	4	4	4
5		STD-475	WASHER, 5/16 lock, internal teeth	4	4	4	4
6		63C26450	NOZZLE, Injection, low, AV 2524864-2	4	4	4	4
7		63B26702	MANIFOLD ASSEMBLY	1		1	1
		63B26724	MANIFOLD ASSEMBLY			1	
8		MS20822-4	ELBOW, 1/8 NPT to 1/4 tube, 90°	1	1	1	1
9		AN791-2	ELBOW, Union 45°, 1/8 tube	4	4	4	4
10		02G21382	NIPPLE, Nozzle pressure gauge	1	1/0	1	1
11		1102	PLUG, 1/8 pipe	2	2/3	2	2
12		75009	BRACKET, Fuel manifold	1	1	1	1
13		STD-251	WASHER, No. 10, internal lock	4	4	4	4
14		STD-82	SCREW, No. 10-24 x 1/2 long, fill. head	4	4	4	4
15		STD-160	WASHER, 1/4 lock, internal teeth	1	1	1	1
16		LW-25-0.50	BOLT, 1/4-20 x 1/2 long, hex. head	1	1	1	1

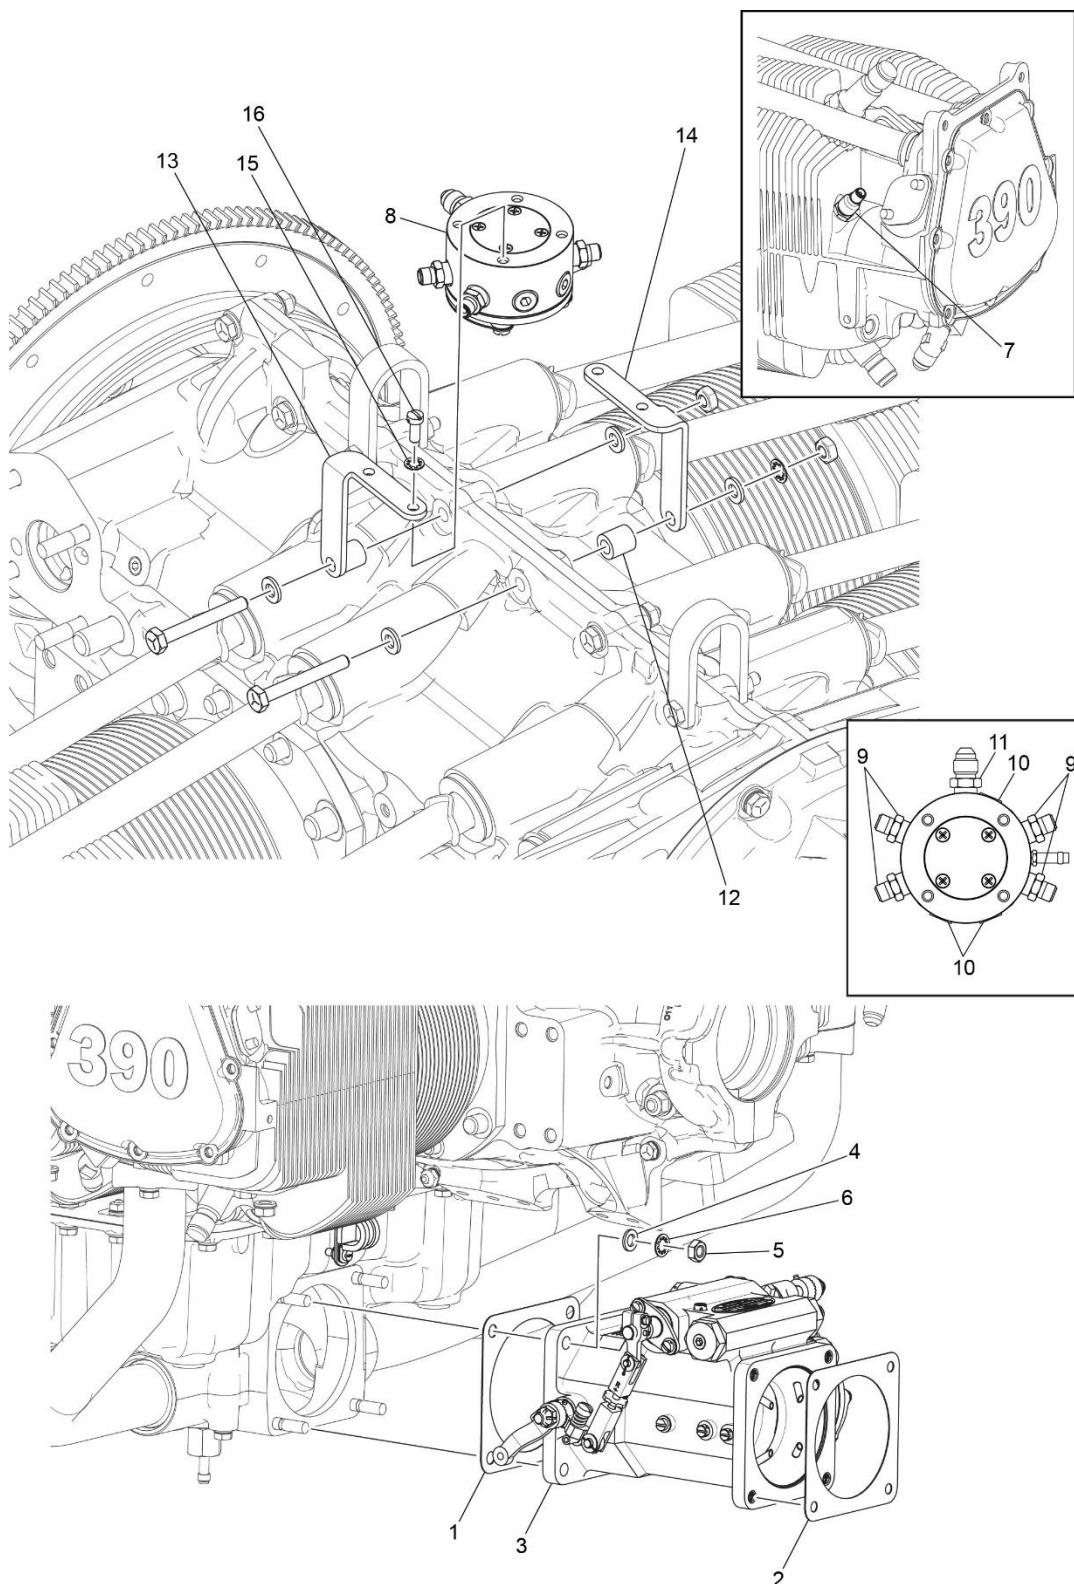

**Figure 24B**  
**Fuel Injector, Fuel Manifold Assembly, and Brackets**

**FUEL DISTRIBUTION****Figure 24B - Fuel Injector, Fuel Manifold Assembly, and Brackets**


Figure Item	Code	Part Number	Description	Units per Assembly			
				A 1 A 6	A 3 A 6	A 1 B 6	A 3 B 6
1		66224	GASKET, Carburetor				1
2		77504	GASKET, Fuel injector				1
3		61J28175	FUEL INJECTOR, LFR-NNSS5 AV2581000				1
4		STD-35	WASHER, 5/16 plain				4
5		STD-1410	NUT, 5/16-18 plain				4
6		STD-475	WASHER, 5/16 lock, internal teeth				4
7		63C26450	NOZZLE, Injection, low, AV 2524864-2				4
8		63B8207	MANIFOLD ASSY, Fuel				1
9		STD-148	NIPPLE, Union,-.1/8 NPT				4
10		1102	PLUG, 1/8 pipe				3
11		AN816-4	NIPPLE, 1/8 NPT to 1/4 tube				1
12		73966	SPACER, Fuel manifold bracket				2
13		07A22995	BRACKET, Fuel manifold				1
14		07A22996	BRACKET, Fuel manifold				1
15		STD-251	WASHER, No. 10 inter				4
16		STD-82	SCREW, No. 10-24				4

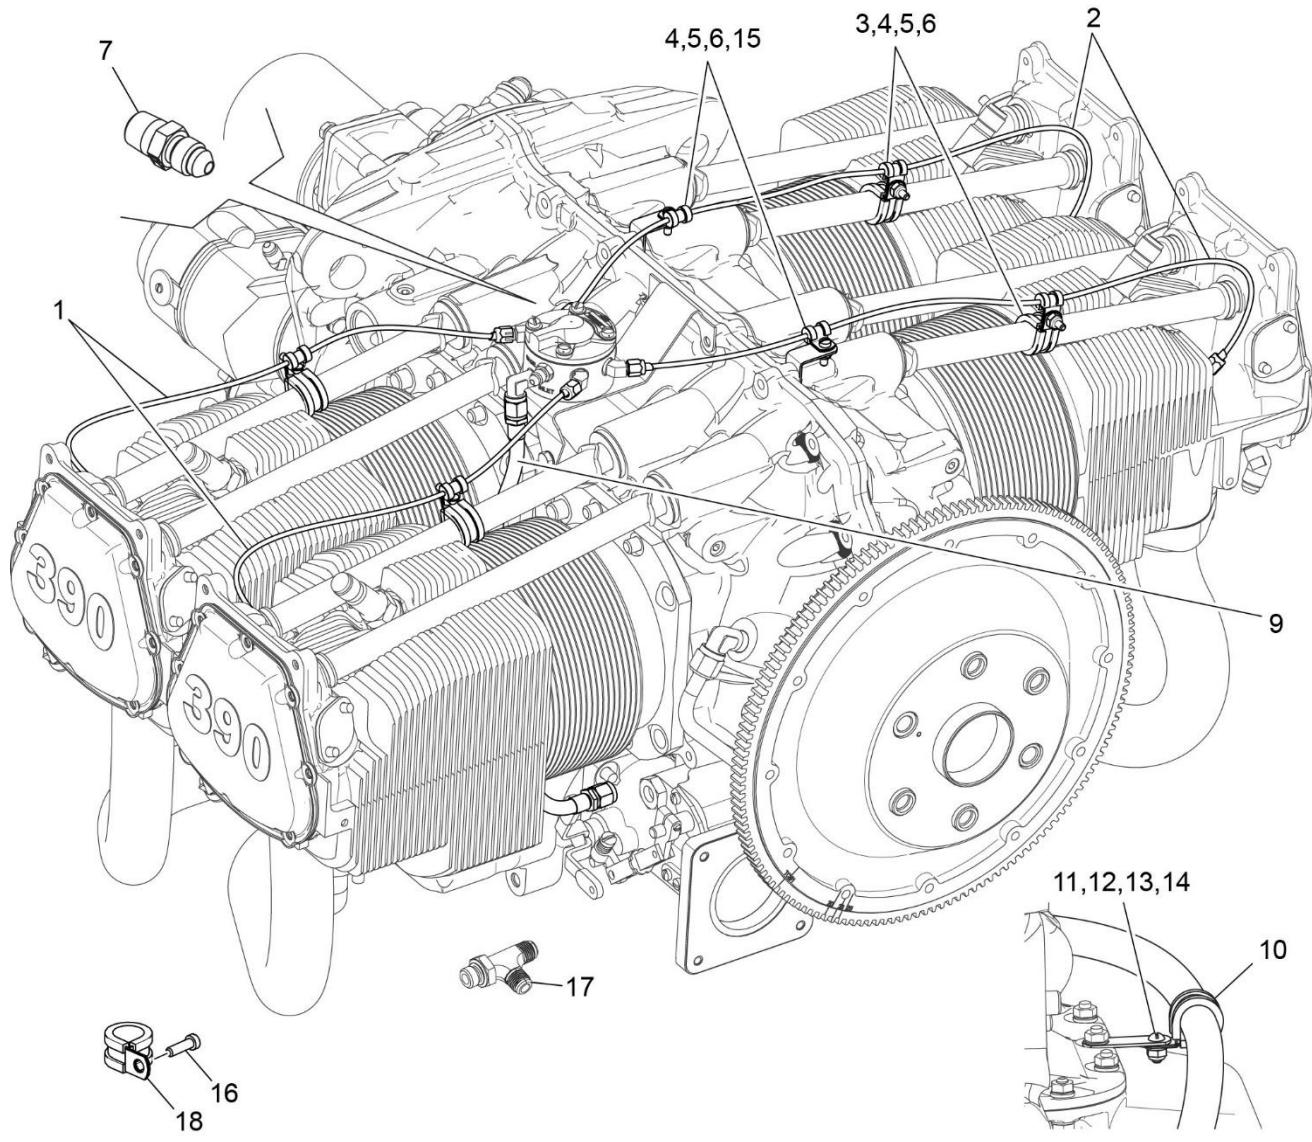

**| Figure 25A**  
**Fuel Lines, Fuel Hoses, and Attaching Parts**

**FUEL DISTRIBUTION****Figure 25A - Fuel Lines, Fuel Hoses, and Attaching Parts**

Figure Item	Code	Part Number	Description	Units per Assembly			
				A 1 A 6	A 3 A 6	A 1 B 6	A 3 B 6
1		LW-12098-0-140	TUBE ASSEMBLY, Fuel	2	2	2	2
2		LW-12098-0-210	TUBE ASSEMBLY, Fuel injector line	2	2	2	2
3		LW-16266-10-75	CLAMP	4	4	4	4
4		LW-16266-10-13	CLAMP, 1/8 diameter for No.10 screw	6	6	6	6
5		STD-860	SCREW, No. 10-32 x 5/8 long, fill. head	6	6	6	6
6		STD-670	LOCK NUT, No. 10-32	6	6	6	6
7		LW-16562	NIPPLE, 3/8 flared tube, 9/16-18	1	1	1	1
8		LW-12799-6S254	HOSE ASSEMBLY, 3/8 hose, straight	1	1	1	1
9		LW-12798-4S172	HOSE ASSEMBLY, 1/4 hose, straight	1	1	1	1
10		LW-16266-10-75	CLAMP	1	1	1	1
11		73152	BRACKET, Support clamp	1	1	1	1
12		STD-692	SCREW, No. 10-32 x 1/2 long, round head	1	1	1	1
13		STD-425	WASHER, No. 10 plain	1	1	1	1
14		STD-670	LOCK NUT, No. 10-32	1	1	1	1
15		73136	BRACKET, Extension, fuel injector	2	2	2	2
16		STD-860	SCREW, No. 10-32 x 5/8 long, fill. head			1	
17		76355	TEE, 3/8 tube with 9/16 thread			1	
18		LW-16266-25-75	CLAMP, 3/4 I.D. x 1/4 dia. screw			1	

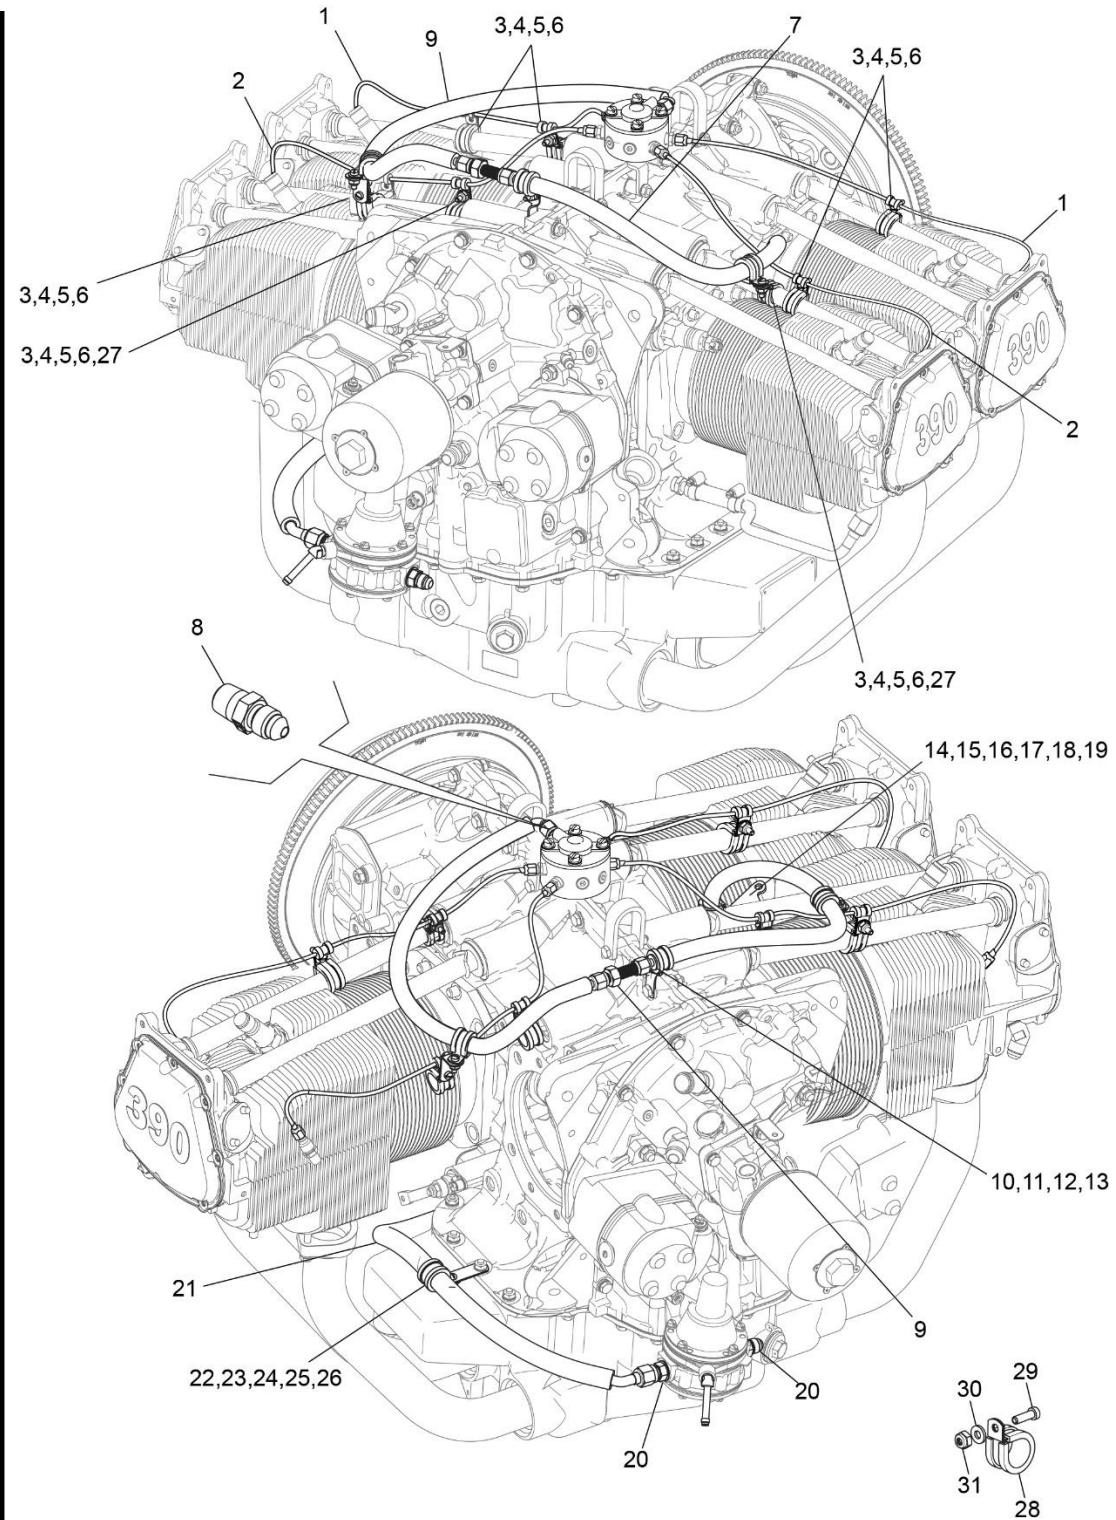

**Figure 25B**  
**Fuel Lines, Fuel Hoses, and Attaching Parts**

**FUEL DISTRIBUTION****Figure 25B - Fuel Lines, Fuel Hoses, and Attaching Parts**


Figure Item	Code	Part Number	Description	Units per Assembly			
				A 1 A 6	A 3 A 6	A 1 B 6	A 3 B 6
1		LW-12098-0-170	TUBE ASSEMBLY, Fuel				2
2		LW-12098-0-190	TUBE ASSEMBLY, Fuel				2
3		LW-16266-10-75	CLAMP, 3/4 ID X #10 SCREW				8
4		LW-16266-10-13	CLAMP, 1/8 diameter for No.10 screw				8
5		STD-860	SCREW, No. 10-32 x 5/8 long, fill. head				8
6		STD-670	LOCK NUT, No. 10-32				8
7		02M22637-4S300	HOSE ASSEMBLY				1
8		AN815-4	UNION, 1/4 fl tube				1
9		02M28686-4S205	HOSE ASSEMBLY, Teflon 1/4 hose - 90 degree elbow with straight fitting - 20.625 length				1
10		72815	BRACKET, Support				1
11		STD-860	SCREW, #10-32 x 5/8 Lg.-fill. hd				1
12		STD-670	LOCK NUT, No. 10-32				1
13		LW-16266-10-63	CLAMP, 5/8 I.D. x No. 10 screw				1
14		07A28507	BRACKET ASSY, Fuel line support				1
15		STD-670	LOCK NUT, No. 10-32				1
16		STD-692	SCREW, No. 10-32 x 1/2 long, round head				2
17		STD-425	WASHER, No. 10 plain				3
18		STD-860	SCREW, No. 10-32 x 5/8 long, fill. head				1
19		LW-16266-10-63	CLAMP				1
20		LW-16562	NIPPLE, 3/8 flared tube, 9/16-18				2
21		02M22792-6S221	HOSE ASSEMBLY				1
22		LW-16266-10-75	CLAMP, 3/4 ID X #10 screw				1
23		73152	BRACKET, Support clamp				1
24		STD-692	SCREW, No. 10-32 x 1/2 long, round head				1
25		STD-425	WASHER, No. 10 plain				1

(continued on next page)

**FUEL DISTRIBUTION**
Figure 25B - Fuel Lines, Fuel Hoses, and Attaching Parts (Cont.)

Figure Item	Code	Part Number	Description	Units per Assembly			
				A 1	A 3	A 1	A 3
26		STD-670	LOCK NUT, No. 10-32				1
27		73136	BRACKET, Extension, fuel injector				2
28		LW-16266-10-63	CLAMP, 5/8 I.D. x No. 10 screw				2
29		STD-860	SCREW, #10-32 x 5/8 Lg.-fill. hd				2
30		STD-425	WASHER, No. 10 plain				2
31		STD-670	LOCK NUT, No. 10-32				2

This page intentionally left blank.

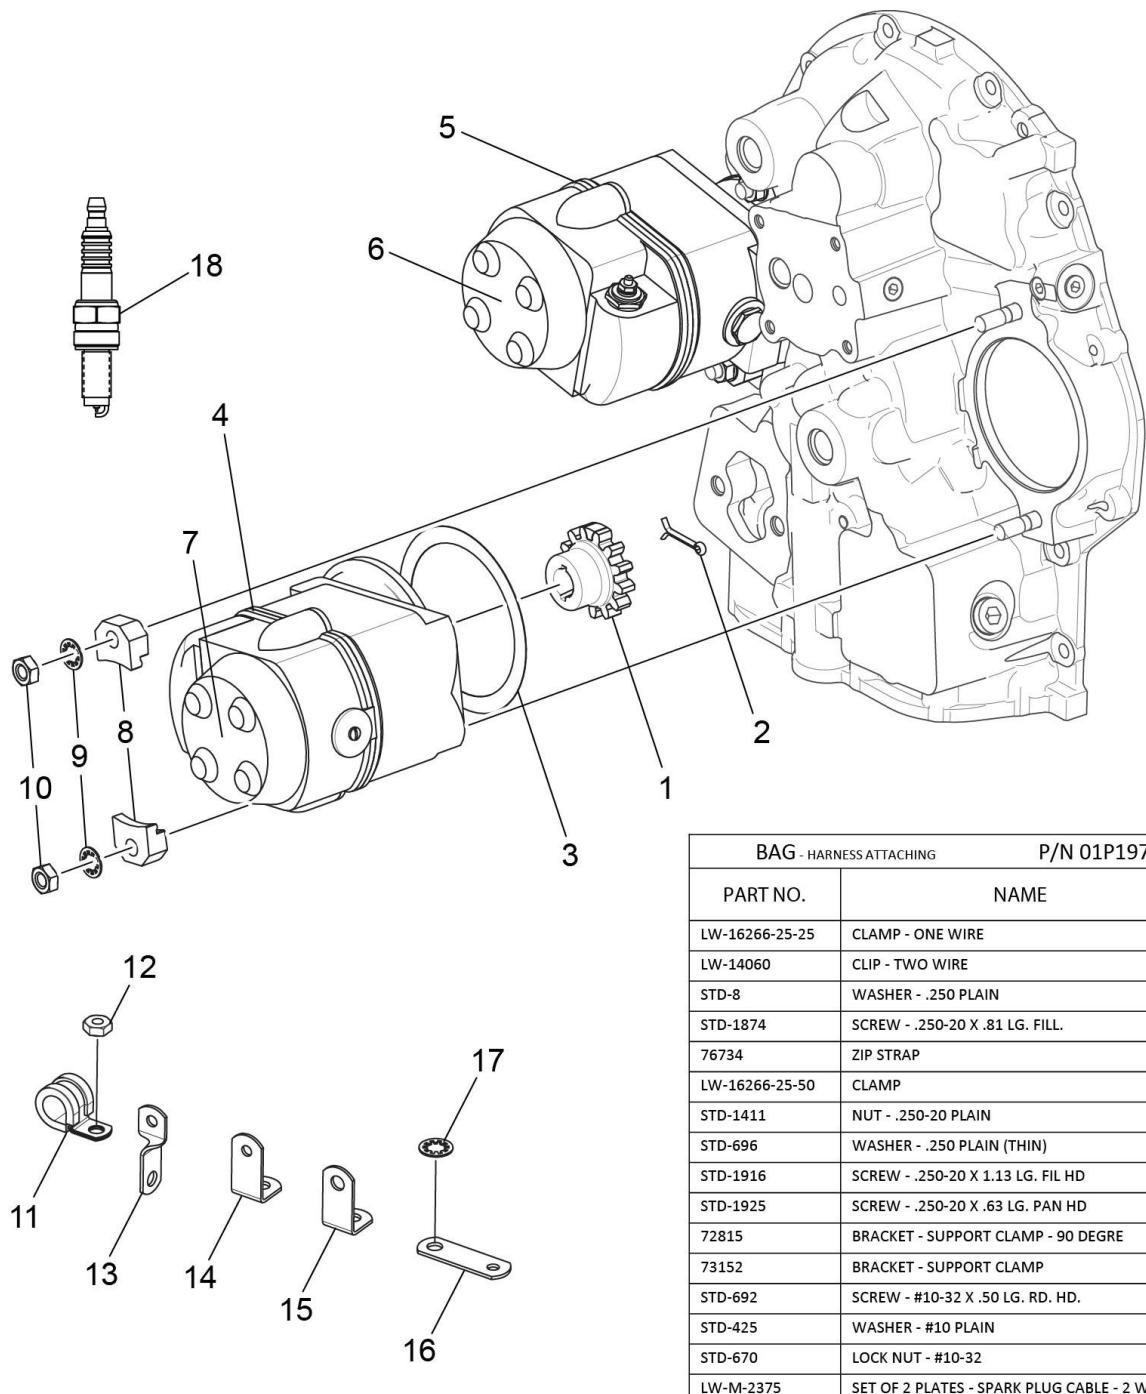


BAG - HARNESS ATTACHING		P/N 01P19762-2-7
PART NO.	NAME	QTY.
LW-16266-25-25	CLAMP - ONE WIRE	4
LW-14060	CLIP - TWO WIRE	4
STD-8	WASHER - .250 PLAIN	8
STD-1874	SCREW - .250-20 X .81 LG. FILL.	4
76734	ZIP STRAP	12
LW-16266-25-50	CLAMP	3
STD-1411	NUT - .250-20 PLAIN	1
STD-696	WASHER - .250 PLAIN (THIN)	4
STD-1916	SCREW - .250-20 X 1.13 LG. FIL HD	1
STD-1925	SCREW - .250-20 X .63 LG. PAN HD	2
72815	BRACKET - SUPPORT CLAMP - 90 DEGRE	3
73152	BRACKET - SUPPORT CLAMP	2
STD-692	SCREW - #10-32 X .50 LG. RD. HD.	5
STD-425	WASHER - #10 PLAIN	5
STD-670	LOCK NUT - #10-32	5
LW-M-2375	SET OF 2 PLATES - SPARK PLUG CABLE - 2 WIRE	2

| **Figure 26**  
**Magneton, Magneto Drives, and Spark Plugs**

**DISTRIBUTION****| Figure 26 – Magnetos, Magneto Drives, Harnesses, and Spark Plugs**

Figure Item	Code	Part Number	Description	Units per Assembly			
				A 1 A 6	A 3 A 6	A 1 B 6	A 3 B 6
1		68C19622	GEAR, Magneto	2	2	2	2
2		MS9245-44	COTTER PIN, 3/32 diameter x 5/8 long	2	2	2	2
3		LW-12681	GASKET, Magneto	2	2	2	2
4		66GP-0SANN	MAGNETO, Plain 4370	1	1	1	1
	*	66GHP-0SBNN	MAGNETO (ES4370)	1	1	1	1
5		66GR15SANN	MAGNETO, Retard 4345	1	1	1	1
	*	66GHR15SBNN	MAGNETO (ES4345)	1	1	1	1
6	V	67P20413	HARNESS ASSEMBLY, Slick, Left, V M4019	1	1	1	1
7	V	67P20412	HARNESS ASSEMBLY, Slick, Right, V	1	1	1	1
8		66M21195	CLAMP, Magneto	4	4	4	4
9		STD-475	WASHER, 5/16 lock, internal teeth	4	4	4	4
10		STD-1410	NUT, 5/16-18 plain	4	4	4	4
11		LW-16266-25-50	CLAMP			2	2
12		STD-1411	NUT, 1/4-20 plain			2	2
13		72815	BRACKET, Support clamp, 90°			5	5
14		73136	BRACKET, Extension, fuel injector line			3	4
15		77410	BRACKET, 90°			2	2
16		73152	BRACKET, Support clamp			4	4
17		STD-475	WASHER, 5/16 lock, internal teeth			4	4
18	V**	1182-G7	SPARK PLUG, Champion, REB37E	8	8	8	8
***		01P19762-2-7	BAG, Harness attaching	1	1	1	1

\* Refer to the latest revision of Service Instruction No. 1443 for a listing of approved alternate ignition systems.  
 V Vendor Prime Manufacturer part  
 \*\* Refer to the latest revision of Lycoming Service Instruction No. 1042 for a complete listing of all approved spark plugs.  
 \*\*\* See Figure for a breakdown of individual parts contained in the magneto and harness attaching parts bag. These parts to be attached by customer per engine line drawing included in each bag.

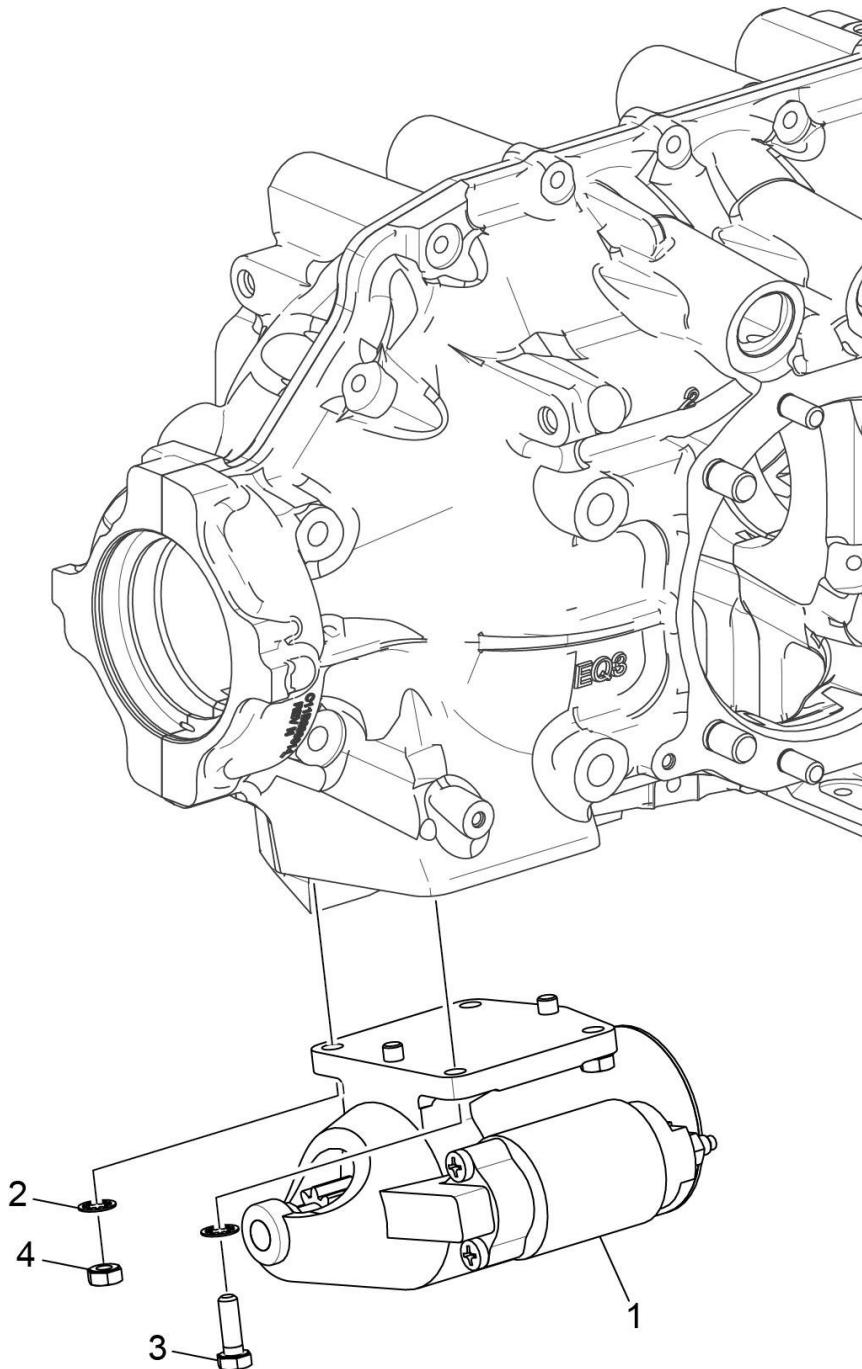

**Figure 27**  
**Starter Motor and Attaching Parts**

**CRANKING****Figure 27 - Starter Motor and Attaching Parts**

<b>Figure Item</b>	<b>Code</b>	<b>Part Number</b>	<b>Description</b>	<b>Units per Assembly</b>			
				<b>A 1 A 6</b>	<b>A 3 A 6</b>	<b>A 1 B 6</b>	<b>A 3 B 6</b>
1		31B23592	STARTER, 12/14P 12/24V, (149NL Sky-Tec)	1	1		
		31B26554	STARTER, 12/14P 24V (149NL/EC SKY-Tec )		1		1
		31A22104	STARTER, Sky-Tec (149-12LS)	1	1	1	1
		31B22105	STARTER, Sky-Tec (149-24LS)	1		1	
2		STD-475	WASHER, 5/16 lock, internal teeth	4	4	4	4
3		LW-31-0.94	BOLT, 5/16-18 x 15/16 long, hex head	1	1	1	1
4		STD-1410	NUT, 5/16-18 plain	3	3	3	3

**NOTICE:** Refer to the latest revision of Service Instruction No. 1154 for complete listing of FAA-approved starters, alternators, generators, regulators and relays.

**SERVICE KIT SECTION**
Seal and Gasket Set

Part No.	Part Name	Units per Assembly			
		A 1 A 6	A 3 A 6	A 1 B 6	A 3 B 6
05K26640	KIT - SEAL AND GASKET SET	1	1	1	1
05K28818 *	KIT - SEAL AND GASKET SET				1
AN901-8A	GASKET, Metal tube connect seal	1	1	1	1
LW-12681	GASKET, Magneto	2	2	2	2
LW-13353	GASKET, Oil sump	1	1	1	1
LW-14260	SEAL, Tachometer	1	1	1	1
LW-15628	SEAL, Crankshaft, oil	1	1	1	1
LW-18639	LOCKPLATE, Crankshaft gear	1	1	1	1
LW-18661	SEAL, Shroud tube	8	8	8	8
06A19956	SEAL, OIL 7/8 I.D. x 1-1/2 O.D. x 5/16	1	1	1	1
06A23493	SEAL, Shroud tube	8	8	8	8
06B23862	GASKET, Oil filter adapter	2	2	2	2
06E19769-0.63	GASKET, Annular, 5/8 I.D.	1	1	1	1
06E19769-1.00 **	GASKET, Annular 1.00 I.D.	1	1	1	1
06E19769-1.25	GASKET, 1-1/4 I.D. x 1-1/2 O.D. x 3/32 annular	1	1	1	1
8313	GASKET, Vacuum	1	1	1	1
60096	GASKET, Fuel pump	1	1	1	1
61183	GASKET, Accessory adapter	1	1	1	1
66224	GASKET, Carburetor	1	1	1	1
66732	GASKET, Valve rocker shaft cover	8	8	8	8
67193 **	GASKET, Rocker box cover	1	1	1	1
06B26811	GASKET, Rocker box cover (Silicone)				4
68315	GASKET-Accessory drive adapter	1	1	1	1
71481	RING, Oil seal, 4-27/32 I.D. x 3/32 diameter section	4	4	4	4
71973	GASKET, 2 bolt flange, 1-3/4 I.D.	4	4	4	4
72053	GASKET, Governor	1	1	1	1
72059	GASKET, Oil level gage	1	1	1	1
72075	SEAL, Oil, 3/32 section x 7/16 I.D.	2	2	2	2
72091	RING, Oil seal, 0.36 I.D. x 0.10 diameter	2	2	2	2
73818	GASKET, Accessory housing	1	1	1	1
74068	RING, Oil level gage plug	1	1	1	1
75118 **	GASKET, Exhaust flange	4	4	4	4
77611	GASKET, Exhaust flange				4
77569 **	RING, Seal, Intake pipe	4	4	4	4

**SERVICE KIT SECTION**  
**Seal and Gasket Set (Cont.)**

<b>Part No.</b>	<b>Part Name</b>	<b>Units per Assembly</b>			
		<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
		1	3	1	3
		A	A	B	B
		6	6	6	6
72711	RING, Seal Intake pipes				4
73032	GASKET, Air inlet housing				1
MS28775-015	"O" RING, 0.551 I. D x 0.07 O.D.				1
06B28651	GASKET, Air inlet housing				1
SSP-115	STICKER	1	1	1	1

\* Use Kit P/N 05K28818 only for engines having P/N 06B26811 rocker box cover gasket  
\*\* Not for use with Kit P/N 05K28818

**SERVICE KIT SECTION**  
**Cylinder, Piston and Ring Assembly**

<b>Part No.</b>	<b>Part Name</b>	<b>Qty.</b>
05K26625	KIT - CYLINDER, PISTON AND RING ASSEMBLY	1
16A26081	CYLINDER AND HEAD ASSEMBLY	1
1102	PLUG, 1/8 pipe	1
71481	RING, Oil seal, 3/32 diameter x 4-27/32 I.D.	1
14D23911	PISTON, Compression ratio 8.90:1	1
14G22050	RING, Piston, compression,	2
14H29865	RING, Piston, oil	1
14J22048	PIN, Piston	1
72198	PLUG, Piston pin	2
66732	GASKET, Valve rocker shaft cover	2
06B26811	GASKET, Rocker box cover (Silicone)	1
71973	GASKET, 2 bolt flange, 1-13/16 I.D.	1
06A23493	SEAL, Shroud tube	2
71195	CONTAINER	1
75118	GASKET, Exhaust flange	2
77569	RING, Seal, Intake pipe	1
LW-18661	SEAL, Shroud tube	2
SSP-115	STICKER	1



This page intentionally left blank

## NUMERICAL INDEX

Part No.	Part Name	Page No.
01A22453	STUD	27
01A22453	STUD	29
01A22453	STUD	31
01A23544	STUD	19
01F22880	SCREW	41
01K28983	BUSHING	33
01L21418	WASHER	15
01L21504	SPACER	13
01L21909	SPACER	8
01L21916	SPACER	9
01L23459	WASHER	37
01P19762-2-7	BAG	73
02G21382	NIPPLE	37
02G21382	NIPPLE	63
02M22637-4S300	HOSE ASSEMBLY	69
02M22792-6S221	HOSE ASSEMBLY	69
02M28686-4S205	HOSE ASSEMBLY	69
05K19423-S	IMPELLER KIT	53
05U22561	THERMOCOUPLE	35
06A19956	OIL SEAL	59
06A23493	SEAL	37
06B21644	GASKET	61
06B23862	GASKET	61
06B26811	GASKET	41
06E19769-0.63	GASKET	61
06E19769-1.00	GASKET	49
06E19769-1.25	GASKET	21
07A19474	BRACKET	1
07A19474	BRACKET	2
07A19880	BRACKET	8
07A21030	BRACKET	13
07A21156	BRACKET	4
07A21157	BRACKET	4
07A21292	BRACKET	13
07A21908	BRACKET	8
07A21910	BRACKET	8
07A22002	BRACKET	6

Part No.	Part Name	Page No.
07A22097	BRACKET	6
07A22097	BRACKET	8
07A22125	BRACKET	6
07A22995	BRACKET	65
07A22996	BRACKET	65
07A26130	BRACKET	4
07A28507	BRACKET ASSY	69
07F19875	LINK	13
07F21160	STRUT	4
07F21298	LINK	8
07F21998	LINK	6
07F23268	STRUT	1
07F23268	STRUT	2
07F28735	BRACE	8
07F28736	LINK	13
1028-B	BALL	21
1102	PLUG	19
1102	PLUG	23
1102	PLUG	35
1102	PLUG	49
1102	PLUG	51
1102	PLUG	63
1102	PLUG	65
1182-G7	SPARK PLUG	73
11U20391-1S	CRANKCASE ASSY	19
11U28752-1S1	CRANKCASE ASSY	19
11U28752-1S3	CRANKCASE ASSY	19
12E23021	NOZZLE ASSEMBLY	19
13C47317	CRANKSHAFT ASSY	23
13C47318	CRANKSHAFT ASSY	23
13S19646	GEAR	23
14E23911	PISTON	33
14G22050	RING	33
14H29865	RING	33
14J22048	PIN	33
14W21696	ROLLER	23
15B21319	SOCKET	37



Part No.	Part Name	Page No.
15B26066	PLUNGER ASSY	37
15F28835-51	ROD ASSEMBLY	38
15F28835-52	ROD ASSEMBLY	38
15F28835-53	ROD ASSEMBLY	38
15F28835-54	ROD ASSEMBLY	38
15F28835-55	ROD ASSEMBLY	38
15F28835-56	ROD ASSEMBLY	38
15F28864-17	ROD ASSEMBLY	38
15F28864-18	ROD ASSEMBLY	38
15F28864-19	ROD ASSEMBLY	38
15F28864-20	ROD ASSEMBLY	38
15F28864-21	ROD ASSEMBLY	38
15F28864-22	ROD ASSEMBLY	38
15G23462	SHROUD TUBE ASSY	37
15H21201	SPRING	37
15M23452	CAMSHAFT ASSY	25
15M23456	CAMSHAFT ASSY	25
15M28669	CAMSHAFT ASSY	25
16A26081	CYLINDER ASSY	35
16T19468	SEAT	35
17A23946	VALVE	37
17B23935	VALVE	37
17C19386	CAP	37
17C21191	KEY	37
17D29056	SPRING	37
17D29057	SPRING	37
17F21187	ROCKER ASSEMBLY	38
17F21188	ROCKER ASSEMBLY	38
17J26469	COVER ASSEMBLY	41
17J26469-C	COVER ASSEMBLY	41
17M23284	HOOK	43
18B23885	BEARING	21
18E23886	BEARING	21
18M23887	BEARING	33
20D28263	ADAPTER ASSY	55
21A21533-26	HOUSING ASSY	51
21A21533-27	HOUSING ASSY	51
21A21533-30	HOUSING	51
21A21533-33	HOUSING ASSY	51
21M23736	COVER	61

Part No.	Part Name	Page No.
23D26777	PLUNGER	25
25C-10	STUD	61
25C-12	STUD	51
25C-22	STUD	51
25C-8	STUD	35
31A22104	STARTER	75
31B22105	STARTER	75
31B23592	STARTER	75
31B26554	STARTER	75
31C-12	STUD	19
31C-12	STUD	51
31C-13	STUD	19
31C-13	STUD	35
31C-14	STUD	19
31C-14	STUD	49
31C-16	STUD	19
31C-19	STUD	19
31CD-17	STUD	51
31M19861	SUPPORT ASSY	23
31M21994	SUPPORT ASSY	23
32B19549	ALTERNATOR ASSY	11
32B19567	ALTERNATOR ASSY	11
32C19553	ALTERNATOR ASSY	11
32C19568	ALTERNATOR ASSY	11
32C26767	ALTERNATOR ASSY	11
32C26768	ALTERNATOR ASSY	11
32F21668	SPACER	11
32F21674	SPACER	11
32G21669	FAN	11
32G21675	FAN	11
32R21670	BACK PLATE	11
32R21676	BACK PLATE	11
36A19951	PULLEY AND SHAFT	6
36A19951	PULLEY AND SHAFT	8
36B19484	PULLEY	11
36B21996	PULLEY	11
36B22008	PULLEY	11
37A19773-376	BELT	11
37A19773-390	BELT	11
37A19773-470	BELT	11

Part No.	Part Name	Page No.
37A19773M396	BELT	11
37B19774-482	BELT	11
37D21992	BELT	11
38-13	STUD	19
38-22	STUD	19
383-B	NUT	13
38D-17	STUD	19
50-15	STUD	19
53E22144	VALVE ASSEMBLY	61
56C23075	TUBE	47
60009	KEY	37
60096	GASKET	55
60430	COVER	59
60803	STRAP	27
60803	STRAP	29
60803	STRAP	31
61084	SPRING	21
61098	ADAPTER ASSY	59
61174	SHAFT	53
61183	GASKET	59
61400	STUD	49
61400	STUD	51
61503	SLEEVE	37
61J26426	FUEL INJECTOR	63
61J28175	FUEL INJECTOR	65
62417	PLUG	61
62732	CAP	61
62B26931	FUEL PUMP	55
63B26702	MANIFOLD ASSY	63
63B26724	MANIFOLD ASSY	63
63B8207	MANIFOLD ASSY	65
63C26450	NOZZLE	63
63C26450	NOZZLE	65
65614	PLUG	43
66224	GASKET	63
66224	GASKET	65
66670	BUSHING	35
66713-P05	GUIDE	35
66732	GASKET	41
66GHP-0SBNN	MAGNETO	73

Part No.	Part Name	Page No.
66GHR15SBNN	MAGNETO	73
66GP-0SANN	MAGNETO	73
66GR15SANN	MAGNETO	73
66M21195	CLAMP	73
67193	GASKET	41
67P20412	HARNESS ASSY	73
67P20413	HARNESS ASSY	73
68315	GASKET	55
68317	SHAFTGEAR	55
68668	SPRING	21
68C19622	GEAR	73
69106	COVER	55
69260	INSERT	35
69551	GASKET	55
70455	GASKET	15
70484	SCREEN	49
71133	NUT	41
71134	NUT	41
71140	FITTING	61
71481	RING	41
71549	WASHER	38
71596	WASHER	55
71596	WASHER	59
71611	RETAINER	43
71903-A	BUSHING	23
71907	WASHER	23
71973	GASKET	45
72053	GASKET	15
72053	GASKET	55
72059	GASKET	47
72075	SEAL	21
72091	RING	21
72155-S	BUSHING	23
72158	BUSHING	19
72198	PLUG	33
72212	SEAT	35
72343	STABILIZER	35
72344	STABILIZER	35
72378	COVER	15
72378	COVER	55

Part No.	Part Name	Page No.
72566	GEAR	23
72626	SHAFT	38
72702	TUBE ASSEMBLY	43
72703	TUBE ASSEMBLY	43
72710	COVER	41
72797	ROLLER	23
72815	BRACKET	69
72815	BRACKET	73
72834	COVER	43
72962	THRUST BUTTON	59
72970	GEAR ASSEMBLY	59
73027	TUBE ASSEMBLY	43
73136	BRACKET	67
73136	BRACKET	70
73136	BRACKET	73
73152	BRACKET	67
73152	BRACKET	69
73152	BRACKET	73
73249	WASHER	15
73250	WASHER	15
73251	WASHER	15
73252	WASHER	15
73383	LOCKPLATE	1
73383	LOCKPLATE	2
73810	BUSHING	23
73818	GASKET	51
73966	SPACER	65
74065	RING	47
74068	RING	47
74070	ELBOW	57
74389	BUSHING	38
74494	PLATE	41
74711	PLUG	23
74808	TUBE ASSEMBLY	43
74887	SPACER	41
74977	SUPPORT ASSY	23
74996	GEAR ASSEMBLY	25
75009	BRACKET	63
75060	BOLT	33
75072	GEAR ASSEMBLY	25

Part No.	Part Name	Page No.
75118	GASKET	35
75153	ADAPTER ASSY	55
75165	CLIP	57
75167	TUBE ASSEMBLY	57
75337	BAFFLE ASSEMBLY	43
75338	BAFFLE ASSEMBLY	43
75380	LINK	1
75380	LINK	2
75444	ADAPTER ASSY	45
75656-S	BUSHING	23
75657-S	BUSHING	23
75730	TUBE ASSEMBLY	57
75736	TUBE	47
75838-P05	GUIDE	35
76118	SPACER	25
76119	SHIELD	51
76121	SHAFT ASSEMBLY	25
76355	TEE	67
76534	SHIM	1
76534	SHIM	2
76534	SHIM	6
76534	SHIM	8
76534	SHIM	9
76534	SHIM	13
77410	BRACKET	73
77450-S	CONN ROD ASSY	33
77467	SPRING	21
77504	GASKET	65
77569	SEAL	45
77611	GASKET	35
77808	VALVE ASSEMBLY	21
77852	OIL FILTER BASE	61
77874	GEAR ASSY	15
77875	GEAR	15
78531	BODY ASSEMBLY	53
78594	ADAPTER ASSY	55
78741	PIPE	45
78742	PIPE	45
78743	PIPE	45
78744	PIPE	45

Part No.	Part Name	Page No.
79024-S	BUSHING	23
8313	GASKET	59
AN310-7	NUT	4
AN310-7	NUT	6
AN310-7	NUT	13
AN4076-1	FITTING	35
AN565B1032H5	SET SCREW	15
AN6-12	BOLT	9
AN6-13	BOLT	13
AN6-15	BOLT	8
AN6-15	BOLT	13
AN6-16	BOLT	1
AN6-17	BOLT	1
AN6-21	BOLT	8
AN6-21	BOLT	9
AN6-34A	BOLT	27
AN6-34A	BOLT	29
AN6-34A	BOLT	31
AN7-44	BOLT	4
AN7-44	BOLT	6
AN7-46	BOLT	13
AN791-2	ELBOW	63
AN815-4	UNION	69
AN816-4	NIPPLE	65
AN816-8	NIPPLE	61
AN844-10D	ELBOW	61
LRT23381	BODY ASSEMBLY	21
LW-10077	SEAT	37
LW-11713	SPRING	21
LW-12098-0-140	TUBE ASSEMBLY	67
LW-12098-0-170	TUBE ASSEMBLY	69
LW-12098-0-190	TUBE ASSEMBLY	69
LW-12098-0-210	TUBE ASSEMBLY	67
LW-12186	NUT	33
LW-12545	PLUG	49
LW-12681	GASKET	73
LW-12798-4S172	HOSE ASSEMBLY	67
LW-12799-6S254	HOSE ASSEMBLY	67
LW-13215	OIL FILTER	61
LW-13321	SEAT	37

Part No.	Part Name	Page No.
LW-13322	SEAT	37
LW-13353	GASKET	49
LW-13793	STUD	19
LW-13796	SHAFT	25
LW-13864	SUMP ASSEMBLY	49
LW-13896	PLUG	15
LW-14021	SHAFT	15
LW-14260	SEAL	53
LW-14529	PLUG	23
LW-14637	SHIM	4
LW-14649	SHIM	4
LW-14650	SHIM	4
LW-14650	SHIM	6
LW-14650	SHIM	13
LW-14760	GAGE ASSEMBLY	47
LW-14763	GAGE ASSEMBLY	47
LW-14820	RING	23
LW-15592-5-04	CLAMP	43
LW-15592-5-05	CLAMP	43
LW-15628	SEAL	21
LW-16266-0-19	CLAMP	35
LW-16266-10-13	CLAMP	67
LW-16266-10-13	CLAMP	69
LW-16266-10-63	CLAMP	69
LW-16266-10-63	CLAMP	70
LW-16266-10-75	CLAMP	67
LW-16266-10-75	CLAMP	69
LW-16266-25-38	CLAMP	57
LW-16266-25-50	CLAMP	69
LW-16266-25-50	CLAMP	73
LW-16266-25-75	CLAMP	67
LW-16471	SUPPORT ASSY	23
LW-16475	SEAT	37
LW-16562	NIPPLE	67
LW-16562	NIPPLE	69
LW-18085	SPRING	21
LW-18109	IMPELLER	53
LW-18110	IMPELLER ASSY	53
LW-18639	LOCKPLATE	23
LW-18661	SEAL	37



Part No.	Part Name	Page No.
LW-18752	THERMOCOUPLE	35
LW-18756	WIRE ASSY	35
LW-19227	COUNTERWEIGHT	23
LW-19265	PULLEY AND SHAFT	4
LW-25-0.50	BOLT	63
LW-25-0.94	BOLT	49
LW-25-0.94	BOLT	53
LW-25-0.94	BOLT	61
LW-25-1.00	BOLT	61
LW-25-1.13	BOLT	27
LW-25-1.13	BOLT	29
LW-25-1.13	BOLT	31
LW-25-1.13	BOLT	49
LW-25-1.13	BOLT	53
LW-25-1.25	BOLT	45
LW-25-1.44	BOLT	53
LW-25-1.50	BOLT	27
LW-25-1.50	BOLT	29
LW-25-1.50	BOLT	31
LW-25-1.75	BOLT	27
LW-25-1.75	BOLT	29
LW-25-1.75	BOLT	31
LW-25H-1.00	BOLT	61
LW-25S1.50	BOLT	27
LW-25S1.50	BOLT	29
LW-25S1.50	BOLT	31
LW-31-0.94	BOLT	1
LW-31-0.94	BOLT	2
LW-31-0.94	BOLT	57
LW-31-0.94	BOLT	75
LW-31-1.16	BOLT	29
LW-31-1.16	BOLT	31
LW-31-1.25	BOLT	31
LW-31-1.31	BOLT	29
LW-31H0.75	BOLT	1
LW-31H0.75	BOLT	2
LW-31H0.88	BOLT	4
LW-31H0.88	BOLT	6
LW-31H0.88	BOLT	8
LW-31H0.88	BOLT	25

Part No.	Part Name	Page No.
LW-31H1.06	BOLT	9
LW-31H1.22	BOLT	4
LW-31H1.22	BOLT	55
LW-31H2.13	BOLT	6
LW-31H2.13	BOLT	8
LW-31H2.75	BOLT	8
LW-38H1.09	BOLT	6
LW-38H1.09	BOLT	13
LW-38H1.19	BOLT	4
LW-38H1.31	BOLT	13
MS20822-4	ELBOW	63
MS20822-6	ELBOW	57
MS20823-4	ELBOW	51
MS20823-6D	ELBOW	35
MS20823-8	ELBOW	61
MS35335-33	WASHER	41
MS35489-20X	GROMMET	43
MS9245-44	COTTER PIN	73
NAS1149F0632P	WASHER	27
NAS1149F0632P	WASHER	29
NAS1149F0632P	WASHER	31
NASM90725-15	BOLT	27
NASM90725-15	BOLT	29
STD-8	WASHER	27
STD-8	WASHER	29
STD-8	WASHER	31
STD-8	WASHER	45
STD-8	WASHER	49
STD-8	WASHER	53
STD-8	WASHER	59
STD-8	WASHER	61
STD-33	WASHER	4
STD-33	WASHER	13
STD-33	WASHER	27
STD-33	WASHER	29
STD-33	WASHER	31
STD-33	WASHER	55
STD-35	WASHER	1
STD-35	WASHER	2
STD-35	WASHER	4

Part No.	Part Name	Page No.
STD-35	WASHER	6
STD-35	WASHER	8
STD-35	WASHER	15
STD-35	WASHER	29
STD-35	WASHER	31
STD-35	WASHER	35
STD-35	WASHER	53
STD-35	WASHER	55
STD-35	WASHER	57
STD-35	WASHER	63
STD-35	WASHER	65
STD-82	SCREW	63
STD-82	SCREW	65
STD-148	NIPPLE	65
STD-160	WASHER	27
STD-160	WASHER	29
STD-160	WASHER	31
STD-160	WASHER	41
STD-160	WASHER	45
STD-160	WASHER	49
STD-160	WASHER	53
STD-160	WASHER	59
STD-160	WASHER	61
STD-160	WASHER	63
STD-250	WASHER	35
STD-251	WASHER	43
STD-251	WASHER	63
STD-251	WASHER	65
STD-380	SCREW	35
STD-425	WASHER	67
STD-425	WASHER	69
STD-425	WASHER	70
STD-475	WASHER	15
STD-475	WASHER	29
STD-475	WASHER	31
STD-475	WASHER	35
STD-475	WASHER	55
STD-475	WASHER	57
STD-475	WASHER	63
STD-475	WASHER	65

Part No.	Part Name	Page No.
STD-475	WASHER	73
STD-475	WASHER	75
STD-514	DOWEL	19
STD-551	PLUG	49
STD-557	DOWEL	19
STD-596	NUT	27
STD-596	NUT	29
STD-596	NUT	31
STD-632	WASHER	4
STD-632	WASHER	13
STD-669	WASHER	4
STD-669	WASHER	13
STD-670	LOCK NUT	43
STD-670	LOCK NUT	67
STD-670	LOCK NUT	67
STD-670	LOCK NUT	69
STD-670	LOCK NUT	70
STD-678	WASHER	13
STD-678	WASHER	27
STD-678	WASHER	29
STD-678	WASHER	31
STD-684	NIPPLE	43
STD-690	WASHER	1
STD-690	WASHER	2
STD-690	WASHER	8
STD-690	WASHER	9
STD-690	WASHER	13
STD-692	SCREW	43
STD-692	SCREW	67
STD-692	SCREW	69
STD-713	COTTER PIN	1
STD-713	COTTER PIN	4
STD-713	COTTER PIN	6
STD-713	COTTER PIN	8
STD-713	COTTER PIN	9
STD-713	COTTER PIN	13
STD-784	PLUG	51
STD-860	SCREW	67
STD-860	SCREW	69
STD-860	SCREW	70



Part No.	Part Name	Page No.
STD-872	NUT	1
STD-872	NUT	8
STD-872	NUT	9
STD-872	NUT	13
STD-872	NUT	27
STD-872	NUT	29
STD-872	NUT	31
STD-1065	DOWEL	23
STD-1221	RING	55
STD-1339	PLUG	19
STD-1342	WASHER	6
STD-1342	WASHER	13
STD-1410	NUT	15
STD-1410	NUT	35
STD-1410	NUT	55
STD-1410	NUT	63
STD-1410	NUT	65
STD-1410	NUT	73
STD-1410	NUT	75
STD-1411	NUT	27
STD-1411	NUT	29
STD-1411	NUT	31
STD-1411	NUT	41
STD-1411	NUT	49
STD-1411	NUT	59

Part No.	Part Name	Page No.
STD-1411	NUT	61
STD-1411	NUT	73
STD-1420	NUT	53
STD-1623	INSERT	19
STD-1686	SCREW	43
STD-1727	WASHER	1
STD-1727	WASHER	2
STD-1727	WASHER	4
STD-1727	WASHER	8
STD-1774	PIN	59
STD-1882	SCREW	55
STD-1925	SCREW	41
STD-1930	HOSE	57
STD-2090	NUT	41
STD-2092	WASHER	6
STD-2168	NUT	25
STD-2180	HOSE	43
STD-2221	NUT	4
STD-2221	NUT	13
STD-2229	PLUG	49
STD-2231	RING	25
STD-2246	BOLT	23
STD-2249	NUT	27
STD-2249	NUT	29
STD-2249	NUT	31